









ACOVA CHIME

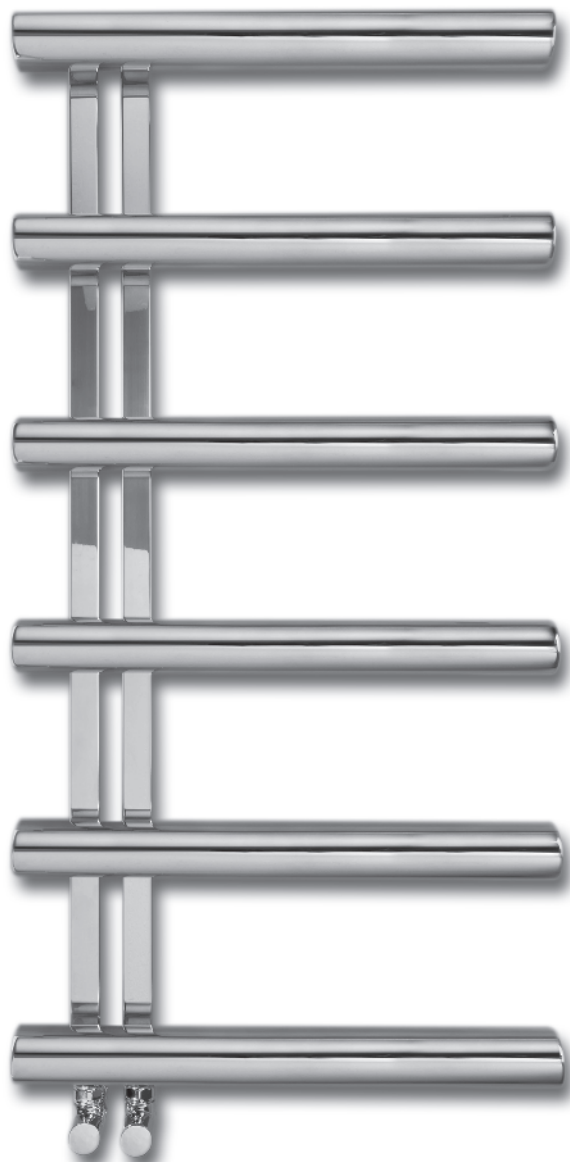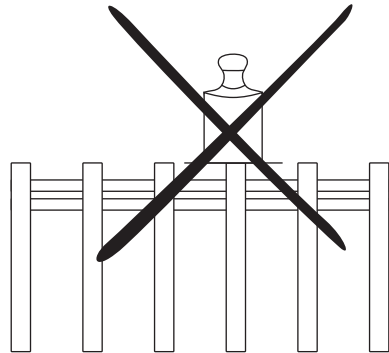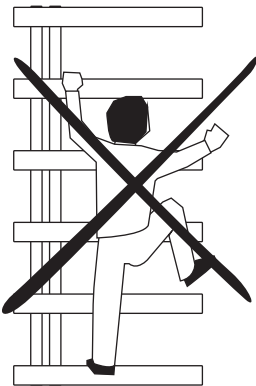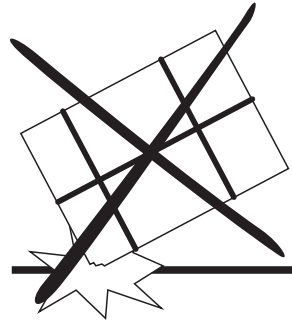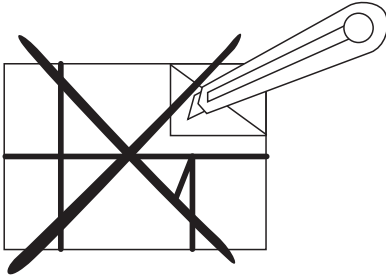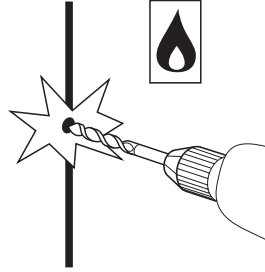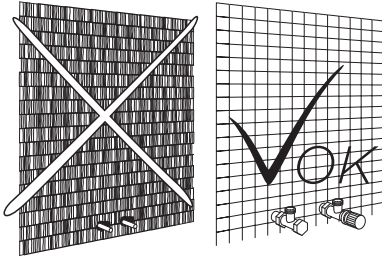





ACOVA


bg	Инструкция за монтаж
cs	Montážní návod
da	Monteringsvejledning
de	Montageanleitung
el	Οδηγίες τοποθέτησης
en	Assembly Instruction
es	Instrucciones de montaje
et	Montaažjuhend
fi	Asennusohje
fr	Instructions de montage
ga	Treoracha gléasta
hu	Szerelési utasítás
it	Istruzione di montaggio
lt	Montavimo instrukcija
lv	Montāžas instrukcija
mt	Istruzzjonijiet tal-immuntar
nl	Montageaanwijzing
pl	Instrukcja montażu
pt	Instruções de montagem
ro	Instrucțiuni de montaj
ru	Монтажная инструкция
sk	Návod na montáž
sl	Navodila za montažo
sv	Monteringsanvisning

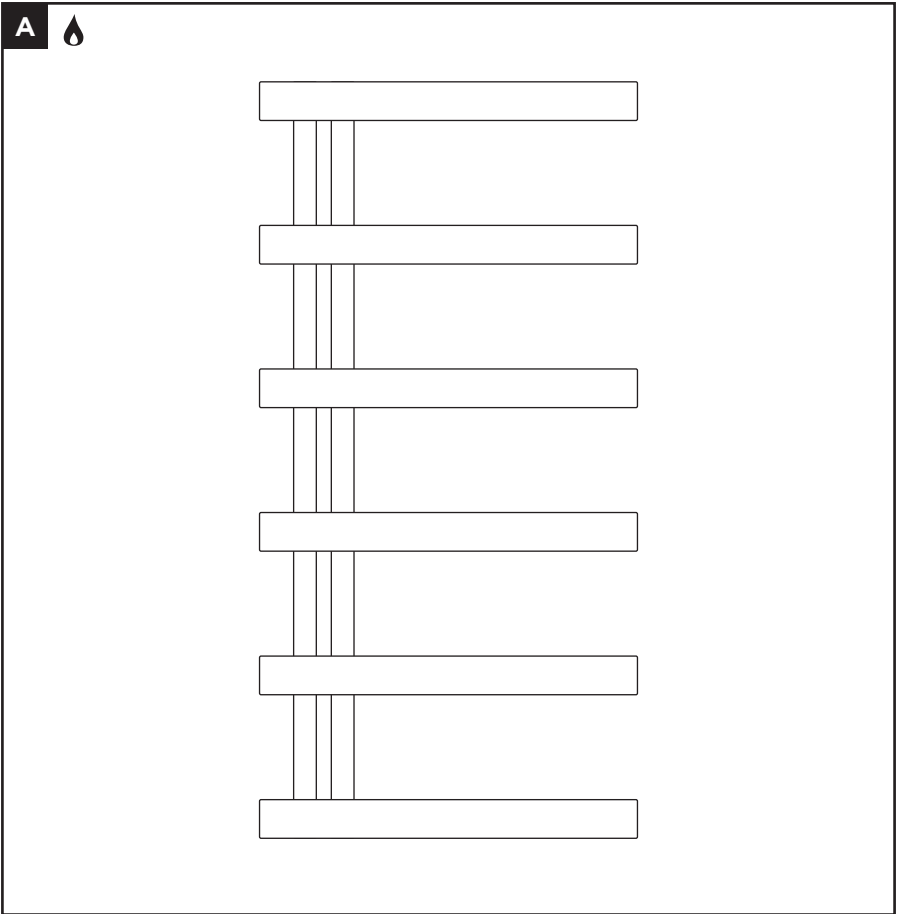

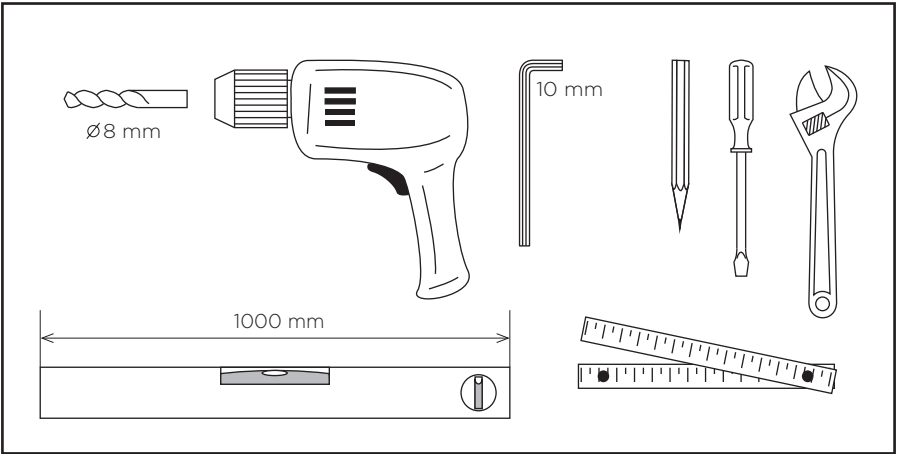

 
A1

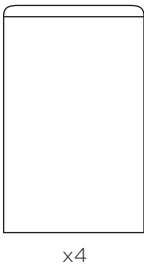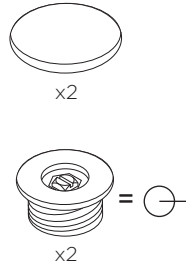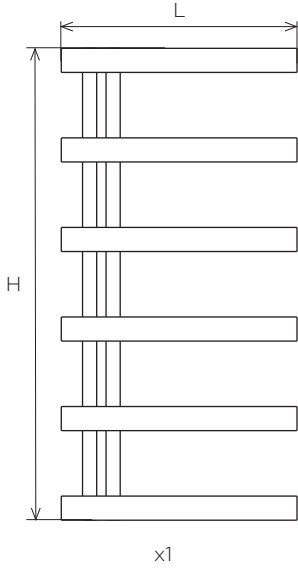

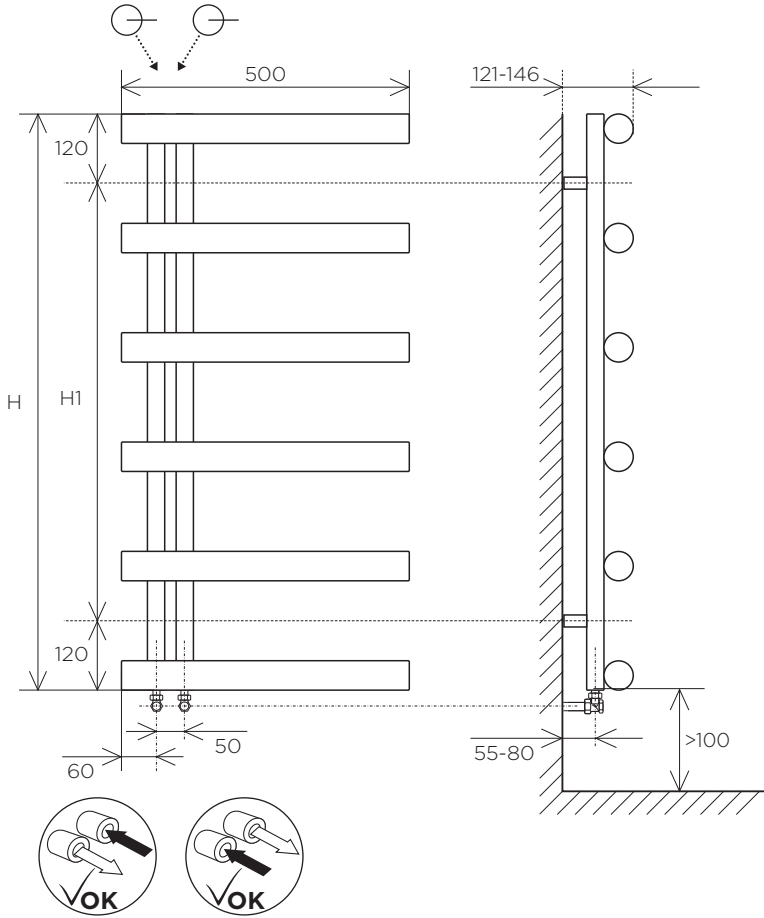

	H (mm)	H1 (mm)
CHI-100-050	1000	760
CHI-140-050	1380	1140
CHI-180-050	1760	1520


A2

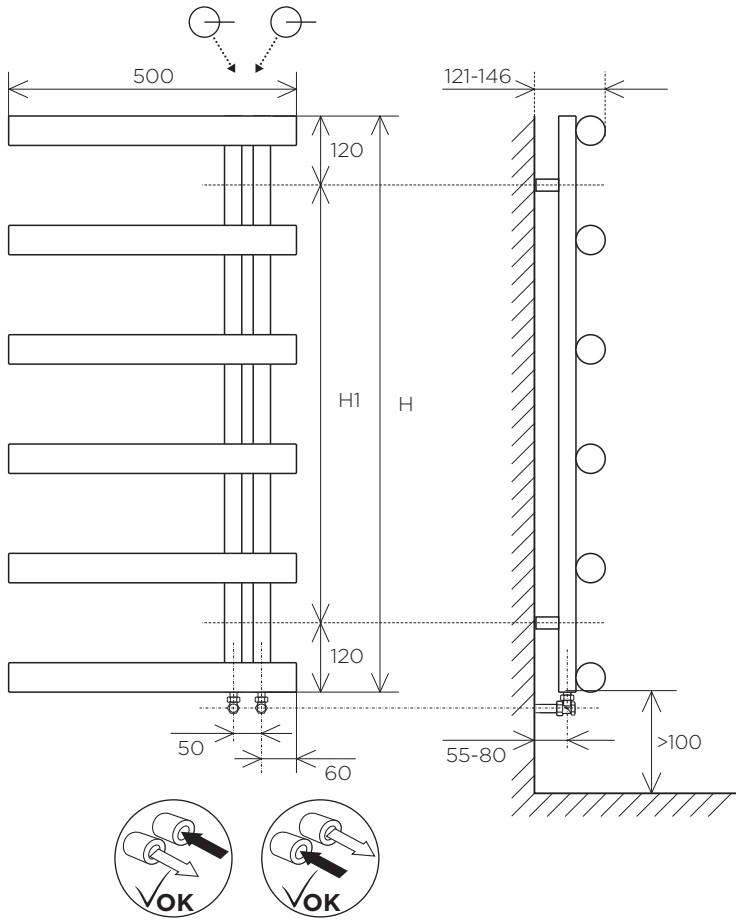


	H (mm)	H1 (mm)
CHI-100-050	1000	760
CHI-140-050	1380	1140
CHI-180-050	1760	1520



A3

4x

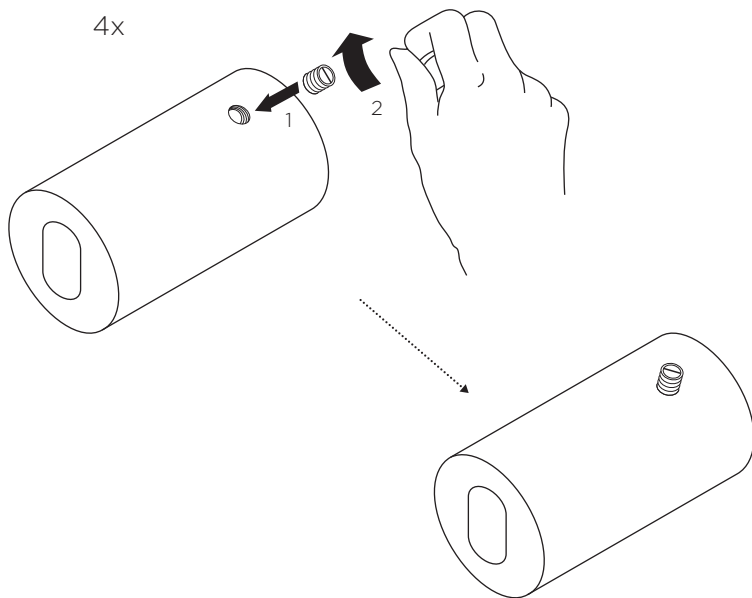


A4

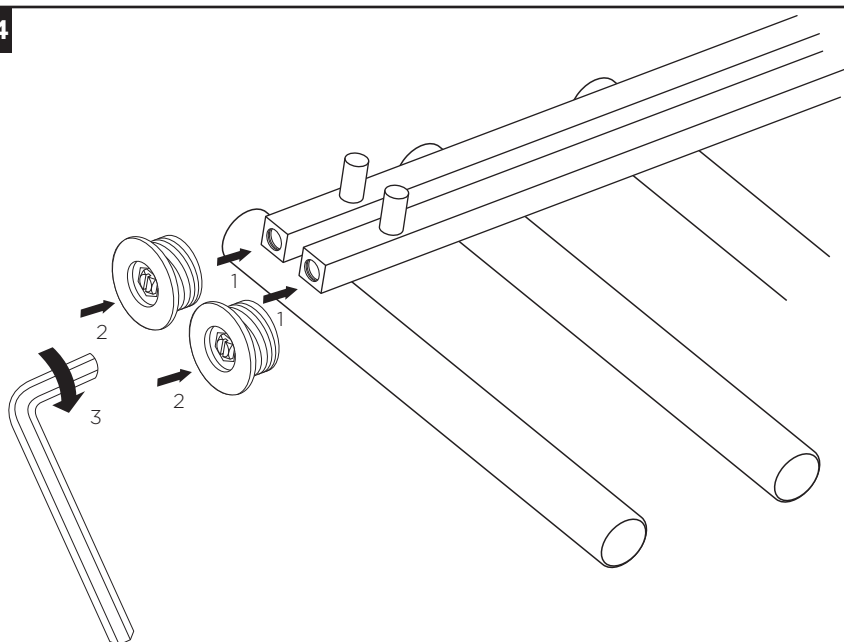


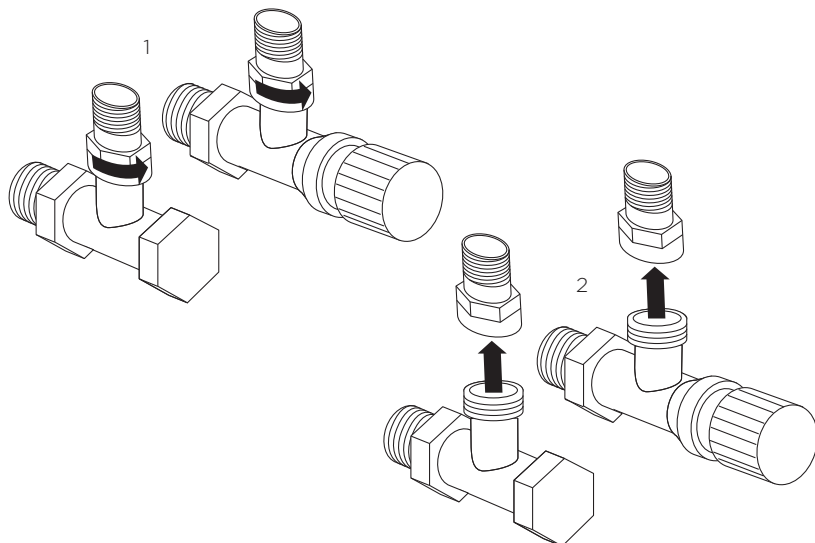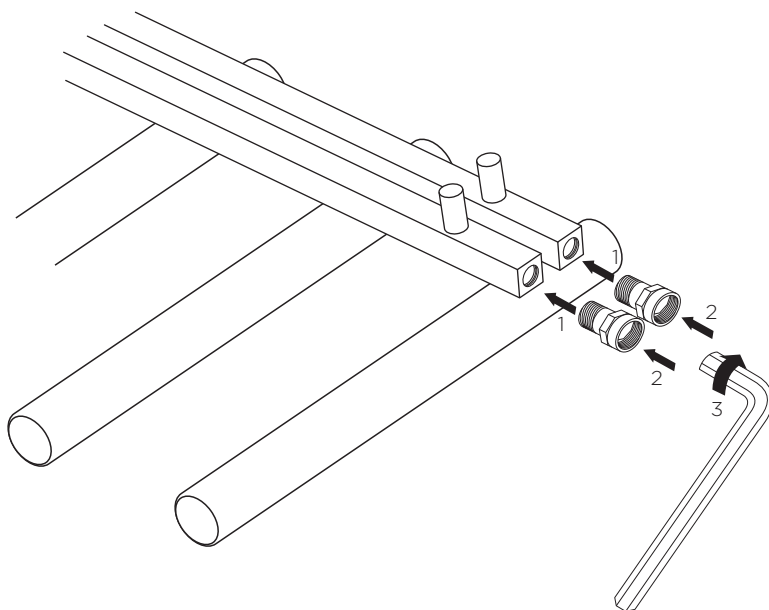A5**A6**

A7

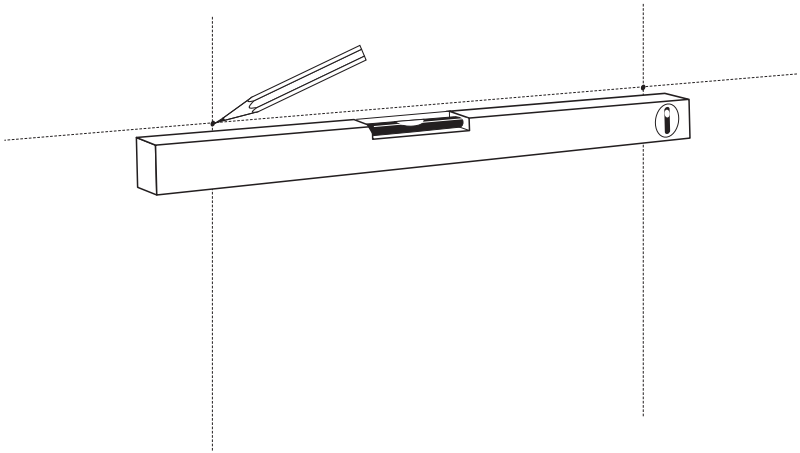


A8

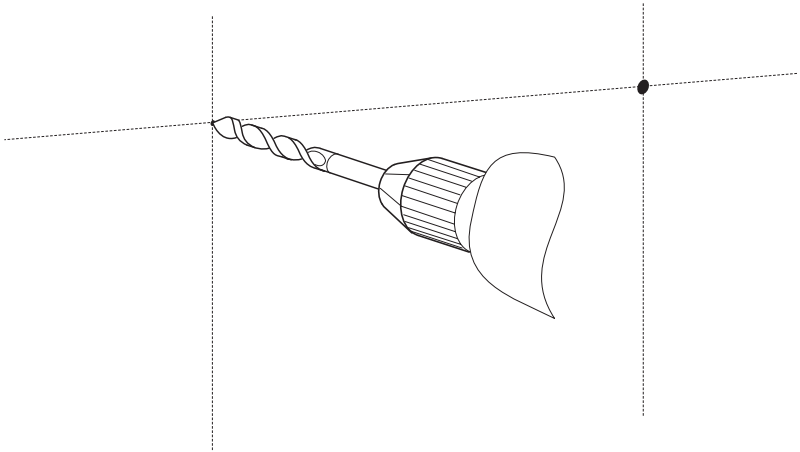


A9




A10

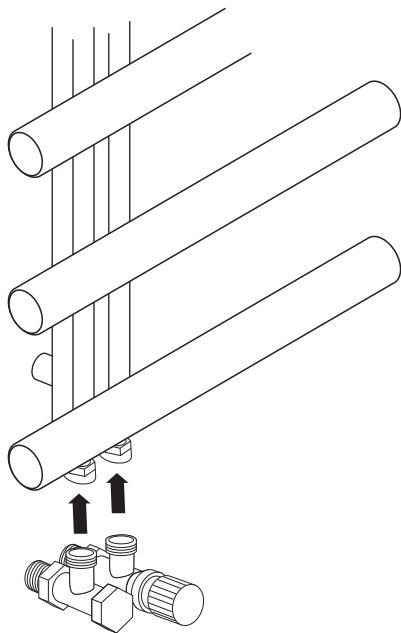



A11

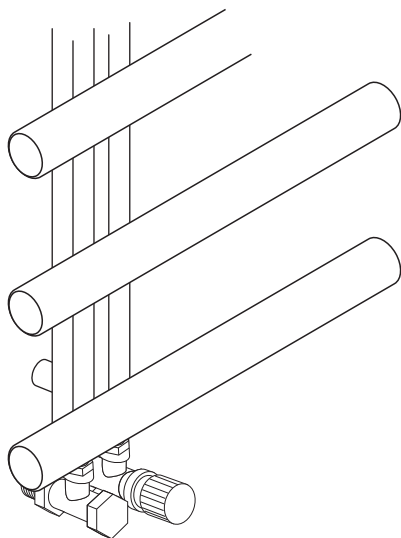

A12

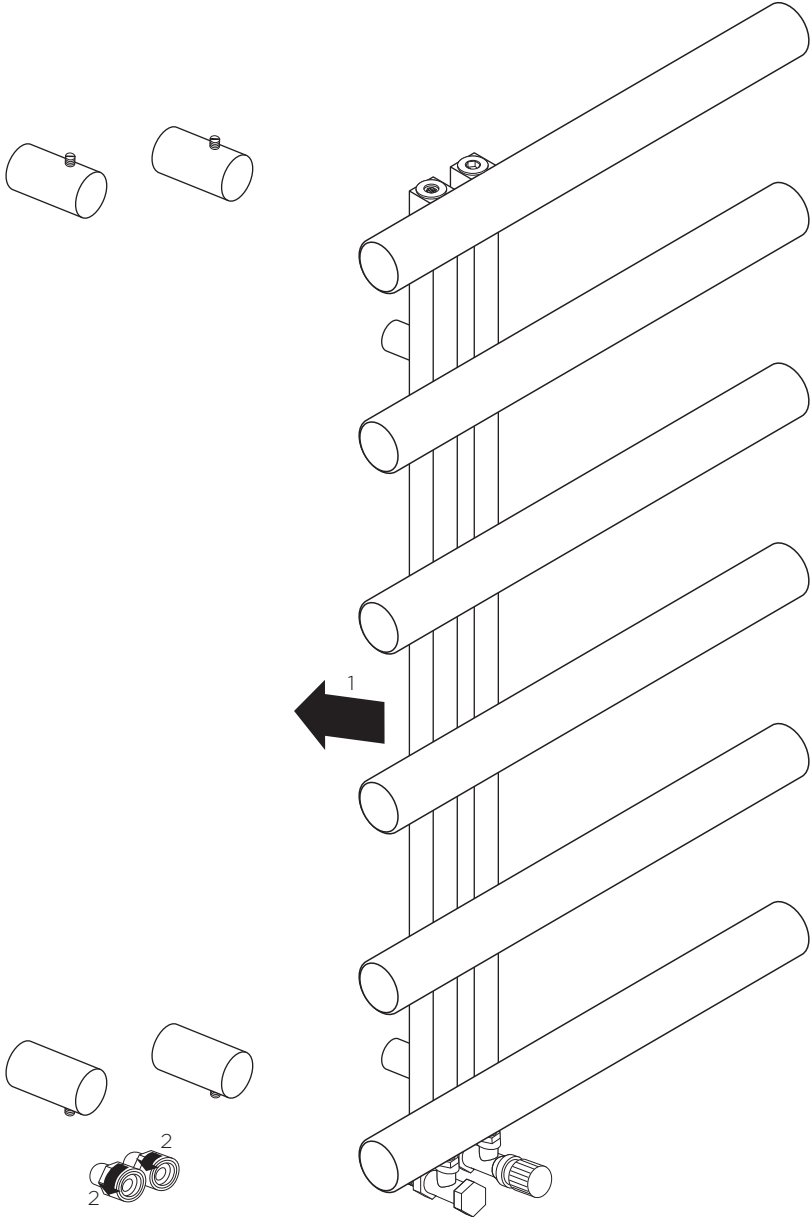

A13

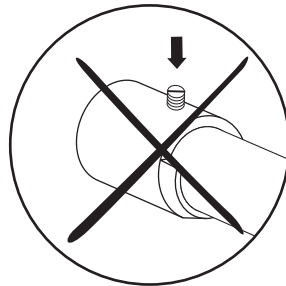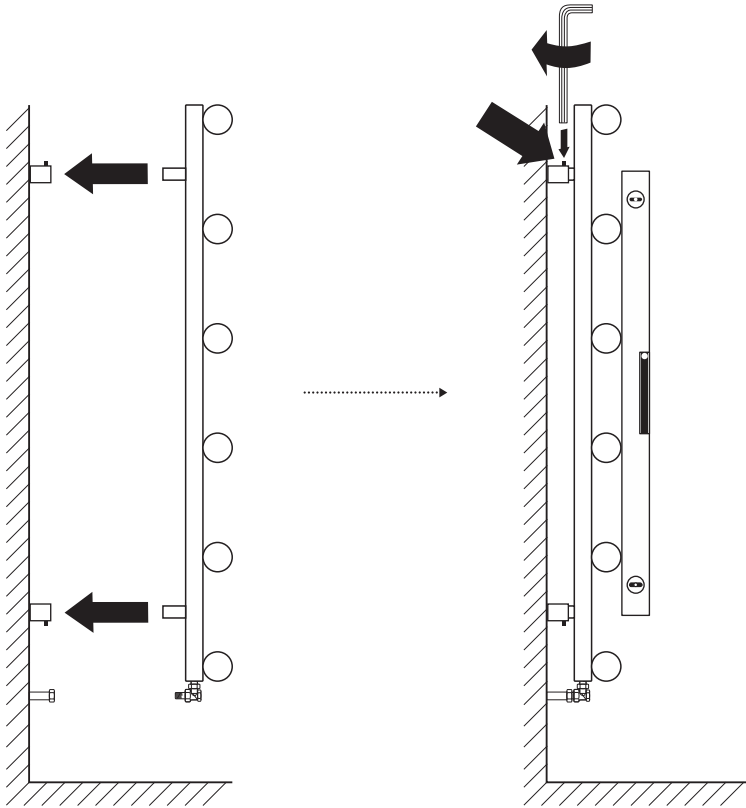

A14

