

# Harmony

## HMI GTO for Vijeo Designer

### User Manual

11/2019

---

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2019 Schneider Electric. All rights reserved.

---

# Table of Contents

---



	<b>Safety Information</b> .....	<b>5</b>
	<b>About the Book</b> .....	<b>7</b>
<b>Chapter 1</b>	<b>Overview</b> .....	<b>9</b>
	HMIGTO Package Contents .....	<b>10</b>
	Certifications and Standards .....	<b>11</b>
	GTO Series of Panels .....	<b>13</b>
<b>Chapter 2</b>	<b>Device Connectivity</b> .....	<b>15</b>
	System Design .....	<b>16</b>
	Accessories .....	<b>22</b>
<b>Chapter 3</b>	<b>Parts Identification and Functions</b> .....	<b>25</b>
	Parts Identification and Functions .....	<b>25</b>
<b>Chapter 4</b>	<b>Specifications</b> .....	<b>35</b>
4.1	HMIGTO1300/1310 .....	<b>36</b>
	Electrical Specifications .....	<b>37</b>
	Environmental Specifications .....	<b>38</b>
	Structural Specifications .....	<b>39</b>
	Display Specifications .....	<b>40</b>
	Memory, Clock, Touch Panel, and Function Switches .....	<b>41</b>
	Interface Specifications .....	<b>42</b>
	Specifications of Serial Interface COM1 .....	<b>43</b>
	Specifications of Serial Interface COM2 .....	<b>45</b>
	Dimensions .....	<b>46</b>
4.2	HMIGTO2300/2310/2315 .....	<b>49</b>
	Electrical Specifications .....	<b>50</b>
	Environmental Specifications .....	<b>51</b>
	Structural Specifications .....	<b>52</b>
	Display Specifications .....	<b>54</b>
	Memory, Clock, and Touch Panel .....	<b>55</b>
	Interface Specifications .....	<b>56</b>
	Specifications of Serial Interface COM1 .....	<b>57</b>
	Specifications of Serial Interface COM2 .....	<b>59</b>
	Dimensions .....	<b>60</b>
4.3	HMIGTO3510/4310 .....	<b>64</b>
	Electrical Specifications .....	<b>65</b>
	Environmental Specifications .....	<b>66</b>
	Structural Specifications .....	<b>67</b>
	Display Specifications .....	<b>68</b>
	Memory, Clock, Touch Panel, and Function Switches .....	<b>69</b>
	Interface Specifications .....	<b>70</b>
	Specifications of Serial Interface COM1 .....	<b>71</b>
	Specifications of Serial Interface COM2 .....	<b>73</b>
	Dimensions .....	<b>74</b>
4.4	HMIGTO5310/5315 .....	<b>78</b>
	Electrical Specifications .....	<b>79</b>
	Environmental Specifications .....	<b>80</b>
	Structural Specifications .....	<b>81</b>
	Display Specifications .....	<b>83</b>
	Memory, Clock, and Touch Panel .....	<b>84</b>

	Interface Specifications .....	85
	Specifications of Serial Interface COM1 .....	86
	Specifications of Serial Interface COM2 .....	88
	Dimensions .....	89
4.5	HMIGTO6310/6315 .....	93
	Electrical Specifications .....	94
	Environmental Specifications .....	95
	Structural Specifications .....	96
	Display Specifications .....	98
	Memory, Clock, and Touch Panel .....	99
	Interface Specifications .....	100
	Specifications of Serial Interface COM1 .....	101
	Specifications of Serial Interface COM2 .....	103
	Dimensions .....	104
<b>Chapter 5</b>	<b>Installation and Wiring .....</b>	<b>109</b>
5.1	Installation .....	110
	Installation Procedures .....	110
5.2	Wiring Principles .....	115
	Connecting the Power Cord .....	116
	Connecting the Power Supply .....	118
	Grounding .....	120
5.3	SD Card Insertion/Removal .....	121
	Introduction .....	122
	Inserting the SD Card .....	123
	Removing the SD Card .....	124
	SD Card Data Backup .....	125
5.4	USB Cable Clamp .....	126
	USB Cable Clamp for USB (Type A) .....	127
	USB Holder for USB (mini-B) .....	129
<b>Chapter 6</b>	<b>Maintenance .....</b>	<b>131</b>
	Regular Cleaning .....	132
	Replacing the Installation Gasket .....	133
	Periodic Check Points .....	135
	Replacing the Primary Battery .....	136
<b>Index</b>	.....	<b>139</b>



## Important Information

### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

### PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

---

---

# About the Book



## At a Glance

### Document Scope

This manual describes how to use the HMIGTO panels.

### Validity Note

This documentation is valid for Vijeo Designer 6.2 or higher.

The technical characteristics of the devices described in the present document also appear online. To access the information online:

Step	Action
1	Go to the Schneider Electric home page <a href="http://www.schneider-electric.com">www.schneider-electric.com</a> .
2	In the <b>Search</b> box type the reference of a product or the name of a product range. <ul style="list-style-type: none"><li>• Do not include blank spaces in the reference or product range.</li><li>• To get information on grouping similar modules, use asterisks (*).</li></ul>
3	If you entered a reference, go to the <b>Product Datasheets</b> search results and click on the reference that interests you. If you entered the name of a product range, go to the <b>Product Ranges</b> search results and click on the product range that interests you.
4	If more than one reference appears in the <b>Products</b> search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the datasheet.
6	To save or print a datasheet as a .pdf file, click <b>Download XXX product datasheet</b> .

The characteristics that are presented in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

### Product Related Information

#### **WARNING**

##### **UNINTENDED EQUIPMENT OPERATION**

The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter, and apply this product.

Follow all local and national safety standards.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**





---

# Chapter 1

## Overview

---

### Overview

This chapter describes the HMIGTO panels and general topics such as package contents and standards.

### What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
HMIGTO Package Contents	10
Certifications and Standards	11
GTO Series of Panels	13

## HMIGTO Package Contents

### Overview

Verify all items listed here are present in your package:

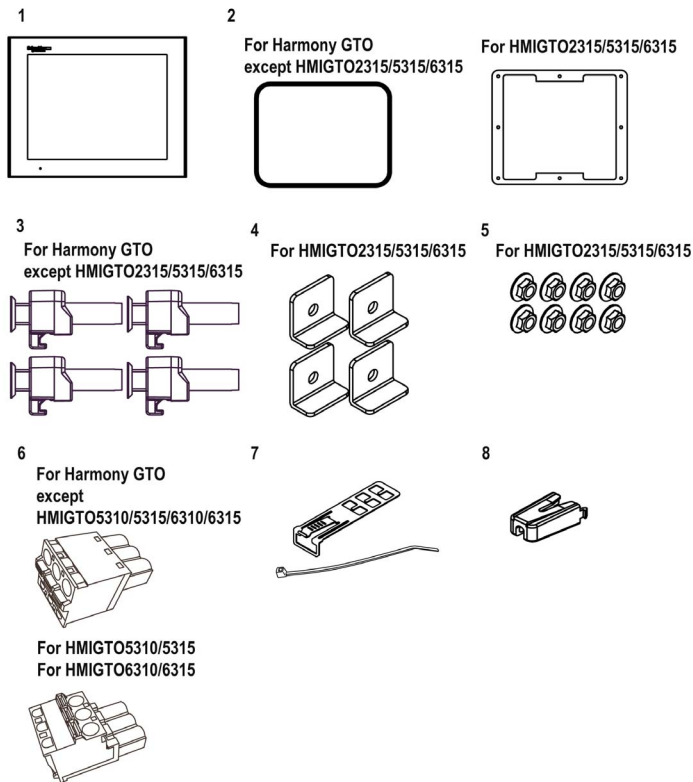


- 1 HMIGTO: 1
- 2 Installation gasket: 1 (attached to the panel)
- 3 Installation fasteners: 4 per set
- 4 Brackets: 4
- 5 M4 Hex Nuts: 8
- 6 DC power connector: 1\*1
- 7 USB cable clamp Type A: 1 set (1 clip and 1 tie)
- 8 USB cable clamp mini-B: 1 (1 USB holder)
- 9 HMIGTO Quick Reference Guide: 1

This product has been carefully packed with special attention to quality. However, should you find anything damaged or missing, contact your local distributor.

\*1 You can use the DC power connector for HMIGTO1300/1310/2300/2310/2315/3510/4310 to supply power to HMIGTO5310/5315/6310/6315. However the reverse is not possible. You cannot use the power connector for HMIGTO5310/5315/6310/6315 on HMIGTO1300/1310/2300/2310/2315/3510/4310.

### Revision

You can identify the product version (PV), revision level (RL), and the software version (SV) from the unit product label:

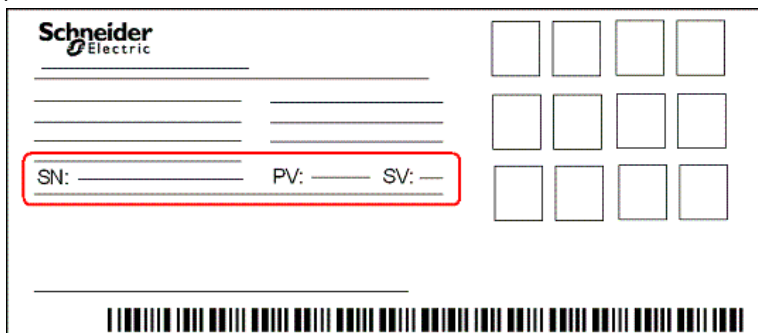

## Certifications and Standards

### Introduction

Schneider Electric submitted this product for independent testing and qualification by third-party listing agencies. These agencies have certified this product as meeting the following standards.

### Agency Certifications

The HMIGTO is manufactured in accordance with:

- Standard UL 508 and CSA C22.2 n°142 for Industrial Control Equipment
- Standard ANSI/ISA - 12.12.01 and CSA C22.2 n°213 for Electrical Equipment for Use in Class I, Division 2 Hazardous Locations

#### NOTE:

- For use in Pollution Degree 2 environments.
- For use on a flat surface of a Type 1, Type 4X (Indoor Use Only) or Type 13 Enclosure.
- 24 Vdc input panel must be used with a Class 2 power supply.
- Suitable for use in Class I, Division 2 Groups A, B, C, and D Hazardous Locations.

- GOST certification.  
Refer to product markings.
- ATEX certification by Technical Inspection Association.  
Refer to product label.
- Merchant Navy rules. (Except Harmony GTOxxx5.)  
Products are designed to comply with Merchant Navy rules.  
Refer to the Schneider Electric Web site for Merchant Navy rules installation guidelines.
- Standard EN1672-2 (Harmony GTOxxx5).
- FDA regulation 21 CFR 177 (Harmony GTOxxx5).

Refer to the Schneider Electric web site for installation guidelines.

For detailed information, contact your local distributor or see the catalog & marking on the product.

### Hazardous Substances

The HMIGTO is a device for use in factory systems. When using the HMIGTO in a system, the system should comply with the following standards with regard to the installation environment and handling:


- WEEE, Directive 2002/96/EC
- RoHS, Directive 2011/65/EU
- RoHS China, Standard SJ/T 11363-2006

### CE Markings

This product conforms to the requirements of the following Directives for applying the CE label:

- 2006/95/EC Low Voltage Directive
- 2004/108/EC EMC Directive

This conformity is based on compliance with EN61000-6-4, EN61000-6-2

 <b>DANGER</b>
<p><b>POTENTIAL FOR EXPLOSION</b></p> <ul style="list-style-type: none"> <li>• Verify that the power, input, and output (I/O) wiring are in accordance with Class I, Division 2 wiring methods.</li> <li>• Substitution of any component may impair suitability for Class I, Division 2.</li> <li>• Do not connect or disconnect equipment unless power has been switched off or the area is known to be non-hazardous.</li> <li>• Securely lock externally connected units and each interface before turning on the power supply.</li> <li>• Do not use, connect, or disconnect USB cable unless area is known to be non-hazardous.</li> <li>• Do not disconnect while circuit is live or unless the area is known to be free of ignitable concentrations.</li> <li>• Potential electrostatic charging hazard. Wipe the front panel of the terminal with a damp cloth before turning ON.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>

### KC Markings

해당 무선설비는 운용 중 전파혼신 가능성이 있음

사용자안내문

기종별	사용자안내문
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다

## GTO Series of Panels

### Critical Systems, Alarms, and Handling Requirements

Critical alarm indicators and system functions require independent and redundant protection hardware and/or mechanical interlocks.

When you cycle power, wait at least 10 seconds before restoring the power to the panel after it has been turned off. Switching the power OFF and ON can damage the panel.

In the event the screen cannot be properly read, for example, if the backlight is not functioning, it may be difficult or impossible to identify a function. Functions that may present a hazard if not immediately executed, such as a fuel shut-off, must be provided independently of the panel. The machine's control system design must take into account the possibility of the backlight no longer functioning and the operator being unable to control the machine or making mistakes in the control of the machine.

### WARNING

#### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.
- The machine control system design must take into account the possibility of the backlight no longer functioning and the operator being unable to control the machine, or making errors in the control of the machine.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Do not use this equipment as the only means of control for critical system functions such as motor start/stop or power control.
- Do not use this equipment as the only notification device for critical alarms, such as device overheating or overcurrent.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Handling the LCD Panel

The following characteristics are specific to the LCD panel and are considered normal behavior:

- LCD screen may show unevenness in the brightness of certain images or may appear different when seen from outside the specified viewing angle. Extended shadows, or crosstalk may also appear on the sides of screen images.
- LCD screen pixels may contain black and white colored spots and color display may seem to have changed.
- When the same image is displayed on the screen for a long period, an after-image may appear when the image is changed.

**NOTE:** Change the screen image periodically and try not to display the same image for a long period of time.

 <b>CAUTION</b>
<b>SERIOUS EYE AND SKIN INJURY</b> The liquid in the LCD panel contains an irritant: <ul style="list-style-type: none"><li>● Avoid direct skin contact with the liquid.</li><li>● Wear gloves when you handle a broken or leaking unit.</li><li>● Do not use sharp objects or tools in the vicinity of the LCD touch panel.</li><li>● Handle the LCD panel carefully to prevent puncture, bursting, or cracking of the panel material.</li></ul> <b>Failure to follow these instructions can result in injury or equipment damage.</b>

If the panel is damaged and any liquid comes in contact with your skin, immediately rinse the area with running water for at least 15 minutes. If the liquid gets in your eyes, immediately rinse your eyes with running water for at least 15 minutes and consult a doctor.

---

# Chapter 2

## Device Connectivity

---

### Introduction

This chapter presents the equipment you can connect to the panel.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
System Design	16
Accessories	22

## System Design

### Introduction

The following diagrams represent equipment you can connect to the panel.

	COM1	COM2
HMIGTO1300	RS-232C ( <i>see page 17</i> )	RS-485 ( <i>see page 19</i> )
HMIGTO1310	RS-232C / RS-485 ( <i>see page 18</i> )	–
HMIGTO2300	RS-232C ( <i>see page 17</i> )	RS-485 ( <i>see page 19</i> )
HMIGTO2310		
HMIGTO2315		
HMIGTO3510		
HMIGTO4310		
HMIGTO5310		
HMIGTO5315		
HMIGTO6310		
HMIGTO6315		

### CAUTION


#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel or cabinet.
- Use only D-Sub 9-pin cables with a locking system in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**



## RUN Mode Peripherals - RS-232C

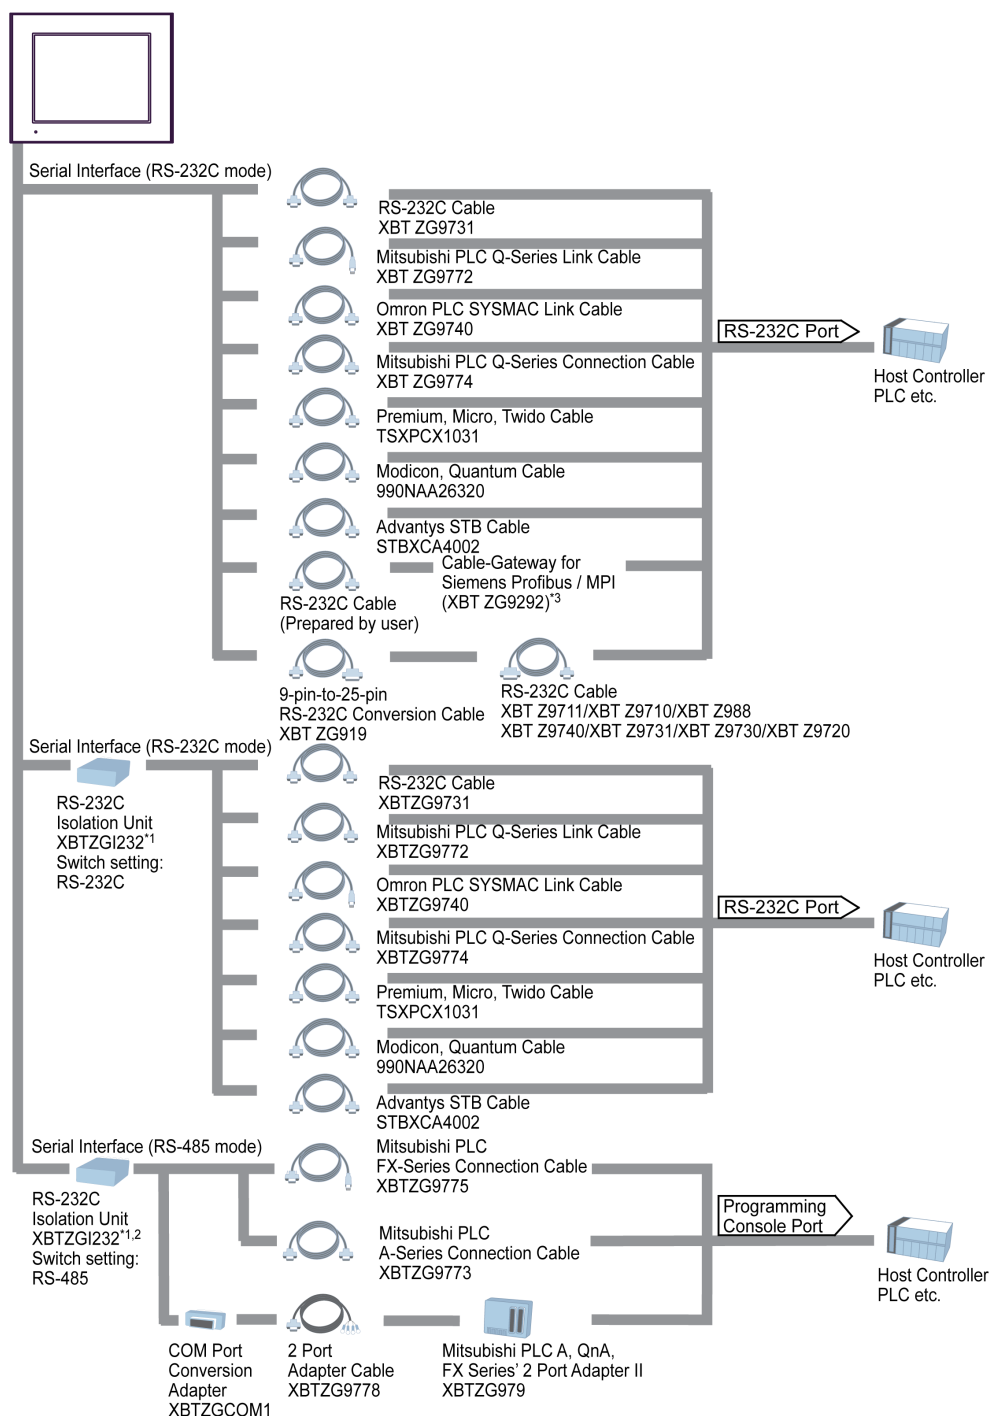


<sup>\*1</sup> When connecting the XBTZGI232, the COM port's pin 9 setting should be VCC. You can define COM port settings in Vijeo Designer or in the HMIGTO's offline menu.

<sup>\*2</sup> The RS-232C Isolation Unit works with only RS-422/485 (4 wire) communication.

<sup>\*3</sup> Cable-Gateway for Siemens Profibus / MPI (XBT ZG9292) is not supported by HMIGTO1310.

**RUN Mode Peripherals - RS-232C / RS-485**

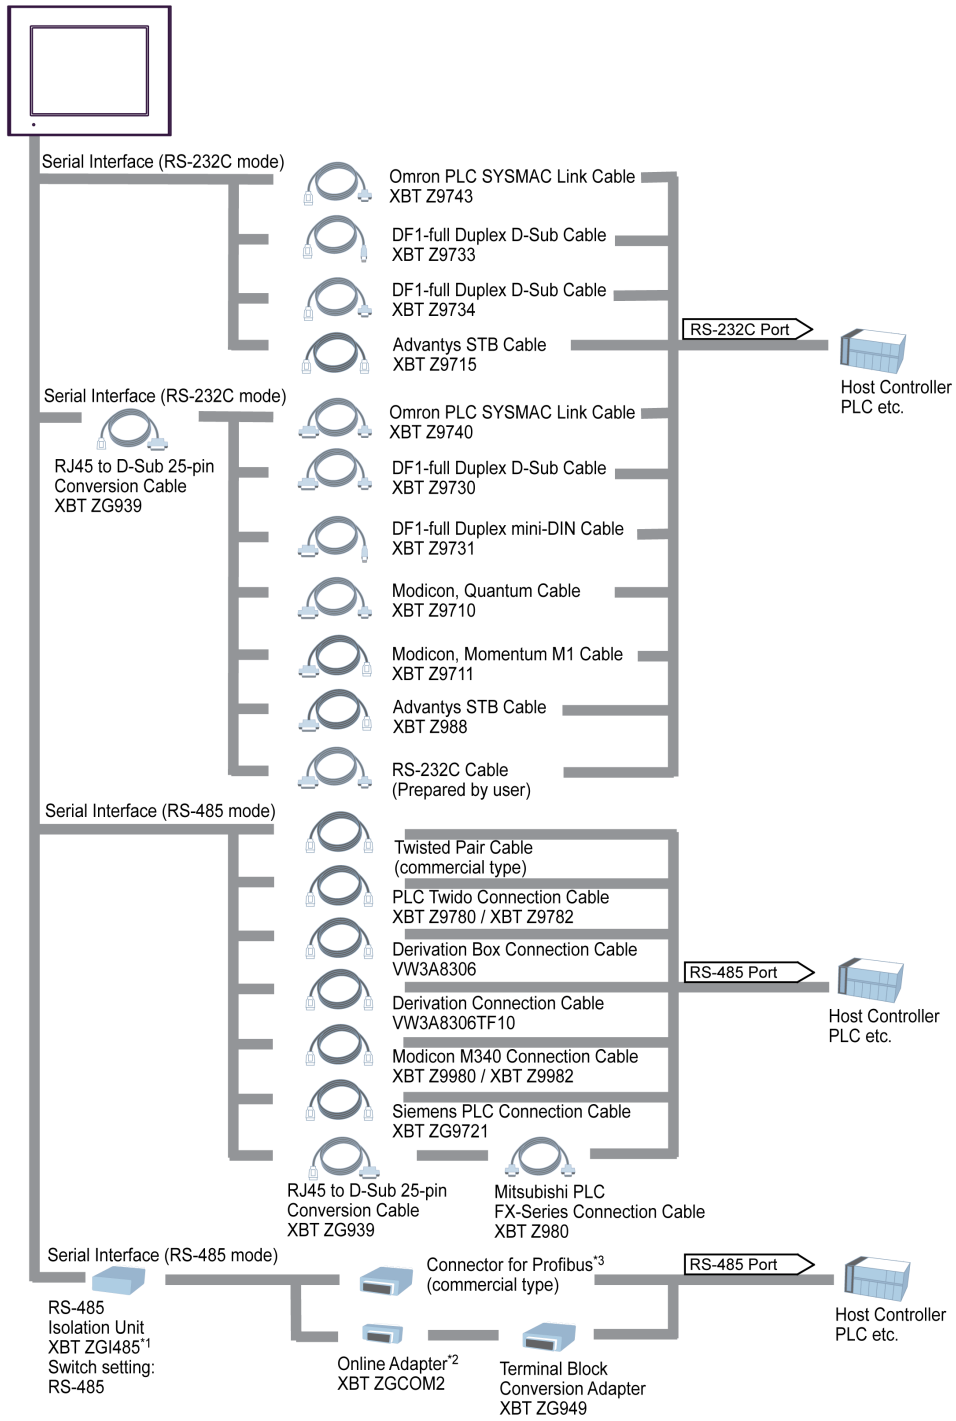


\*1 Use the RS-485 Isolation Unit's USB port to supply power to itself. There is no need to set up a separate power supply.

\*2 In 1:n, n:1, or n:m communication, you can use the online adapter as a terminal. (Use 1 unit in either communication setup.)

\*3 The connector has a switch to control the terminal. Turn on the switch to enable communication.

### RUN Mode Peripherals - RS-485

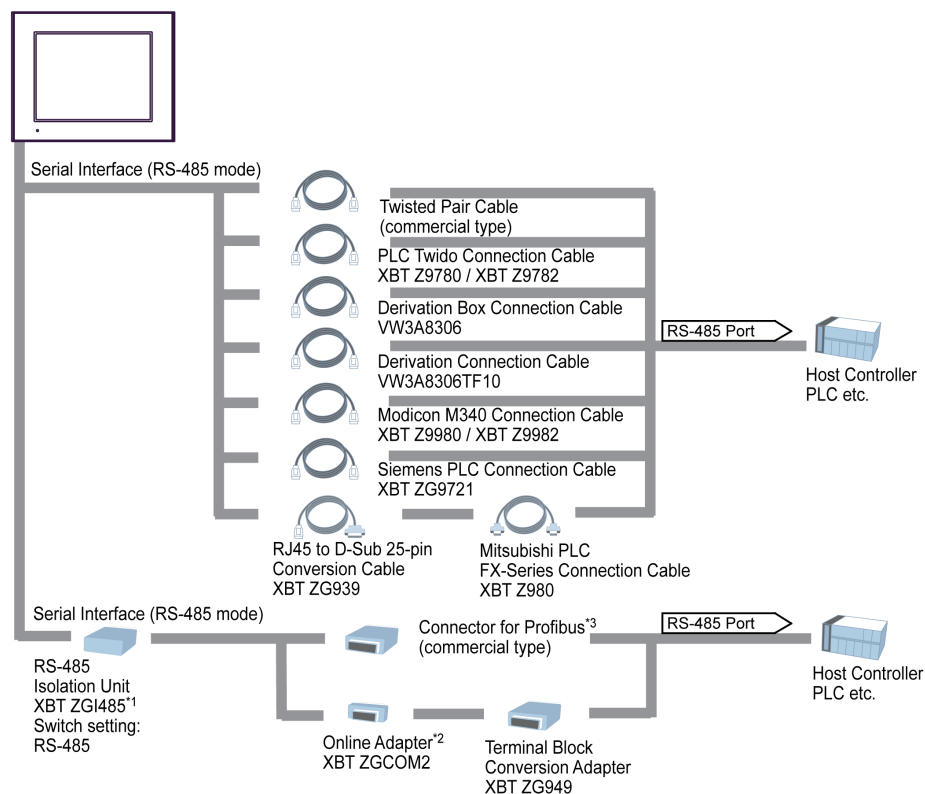


\*<sup>1</sup> Use the RS-485 Isolation Unit's USB port to supply power to itself. There is no need to set up a separate power supply.


\*<sup>2</sup> In 1:n, n:1, or n:m communication, you can use the online adapter as a terminal. (Use 1 unit in either communication setup.)

\*<sup>3</sup> The connector has a switch to control the terminal. Turn on the switch to enable communication.


### RUN Mode Peripherals - Ethernet Communication

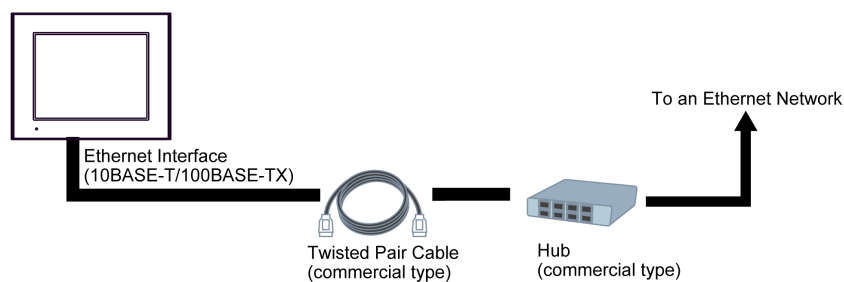

### RUN Mode Peripherals - USB Type A / mini-B Interface

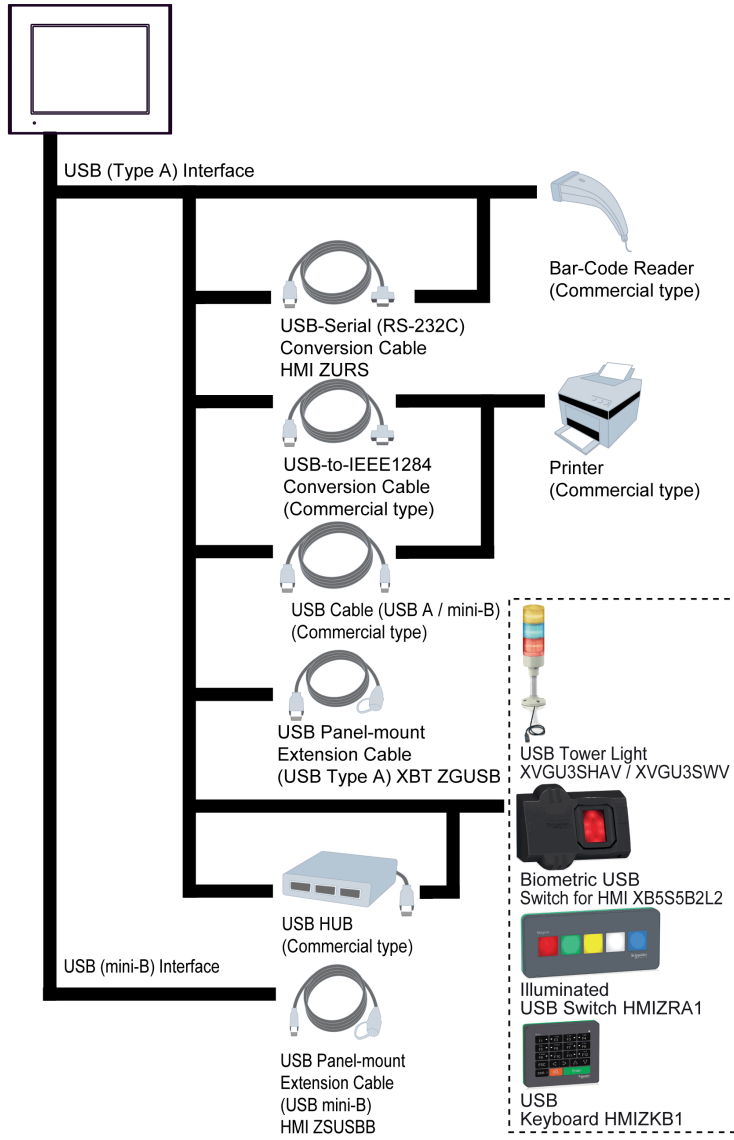

Edit Mode Peripherals

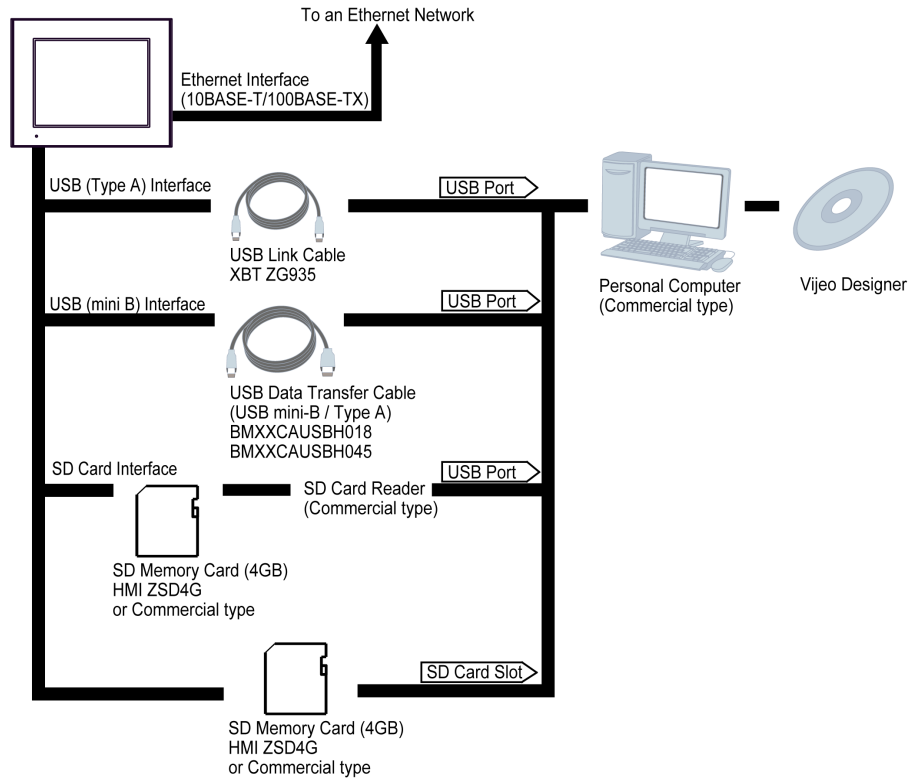

## Accessories

### Serial Interface Items

Product Name	Product Number	Description
RS-232C Cable	XBTZG9731	Connects a host controller to the panel (RS-232C).
RS-422 Cable	XBTZG9722	Connects a host controller to the panel (RS-422).
Mitsubishi PLC Q-Series Link Cable	XBTZG9772	Connects Mitsubishi PLC Q-Series (or other host controller) to the panel (RS-232C).
Omron PLC SYSMAC Link Cable	XBTZG9740 XBTZ9743 XBTZ9740	Connects Omron PLC SYSMAC Series unit (or other host controller) to the panel (RS-232C).
Mitsubishi PLC A-Series Connection Cable	XBTZG9773	Connects Mitsubishi PLC A or QnA Series programming console I/F to panel (simultaneous use of programming consoles is not possible).
Mitsubishi PLC Q-Series Connection Cable	XBTZG9774	Connects Mitsubishi PLC Q-Series programming console I/F to panel (simultaneous use of programming consoles is not possible).
Mitsubishi PLC FX-Series Connection Cable	XBTZG9775 XBTZ980	Connects Mitsubishi PLC FX-Series programming console I/F and panel (simultaneous use of programming consoles is not possible).
Premium, Micro, Twido Cable	TSXPCX1031	Connects Premium, Micro, or Twido to the panel.
Modicon, Quantum Cable	990NAA26320 XBTZ9710	Connects Modicon or Quantum to the panel.
2 Port Adapter Cable	XBTZG9778	Connects Mitsubishi PLC directly to the panel (D-sub 9 pin plug) using 2-port adapter II (RS-422).
Mitsubishi PLC A, QnA, FX Series 2 Port Adapter II	XBTZG979	Enables simultaneous use of a panel and a Mitsubishi PLC A, QnA, or FX Series peripheral device.
Advantys STB Cable	STBXCA4002 XBTZ9715 XBTZ988	Connects Advantys STB to panel.
Terminal Block Conversion Adapter	XBTZG949	Connects output from a panel's Serial Interface (D-sub 9 pin plug) directly with an RS-422 terminal block.
COM Port Conversion Adapter	XBTZGCOM1	Connects optional RS-422 communication items to panel's COM1 port.
DF1-full Duplex D-Sub Cable	XBTZ9730 XBTZ9733 XBTZ9734	Connects DF1-full Duplex to HMIGTO.
DF1-full Duplex mini-DIN Cable	XBTZ9731 XBTZ9720	Connects DF1-full Duplex to HMIGTO.
Modicon, Momentum M1 Cable	XBTZ9711	Connects Modicon, Momentum M1 to HMIGTO.
PLC Twido Connection Cable	XBTZ9780 / XBTZ9782	Connects PLC Twido to HMIGTO.
Derivation Box Connection Cable	VW3A8306	Connects Derivation Box to HMIGTO.
Derivation Connection Cable	VW3A8306TF10	Connects Derivation to HMIGTO.
Modicon M340 Connection Cable	XBTZ9980 / XBTZ9982	Connects Modicon M340 to HMIGTO.
Siemens PLC Connection Cable	XBTZG9721	Connects Siemens PLC to HMIGTO.
RS-232C Isolation Unit	XBTZGI232	Connects a host controller to HMIGTO with isolation (RS-232C and RS-422 are switchable).
RS-485 Isolation Unit	XBTZGI485	Connects a host controller to HMIGTO with isolation.
Cable-gateway for Siemens Profibus / MPI	XBTZG9292	Connects Siemens Profibus / MPI units to HMIGTO.
RJ45 to D-Sub 25 pin Conversion Cable	XBTZG939	Connects a RJ45 cable to HMIGTO (D-sub 9 pin plug).
9-pin to 25-pin RS-232C Conversion Cable	XBTZG919	Connects a standard RS-232C cable (D-Sub 25-pin socket) to HMIGTO (D-sub 9 pin plug).
Online Adapter	XBTZGCOM2	Terminal adapter for RS-485 communication.

## USB Interface Items

Product Name	Product Number	Description
USB Transfer Cable	XBTZG935	Downloads project data created with the software via the panel's USB I/F.
USB Front Cable	XBTZGUSB	Extension cable attaching USB interface to front panel.
USB-Serial (RS-232C) Conversion Cable	HMIZURS	Cable for converting a panel's USB interface into a serial interface (RS-232C). Allows connection to modems <sup>*1</sup> or bar code readers <sup>*1</sup> that support RS-232C.
USB Transfer Cable (USB Type A/mini-B)	BMXXCAUSBH018 BMXXCAUSBH045	Cable for transferring screen data from a PC (USB Type A) to the panel (USB mini-B).
Remote USB port location for mini-USB	HMIZSUSBB XBTZGUSBB	Extension cable that attaches to the USB (mini-B) interface on the front side of the operation panel.
Illuminated USB Switch	HMIZRA1	Unit of 5 illuminated switches with multiple color LEDs easily connected with HMIGTO via USB.
Biometric USB Switch for HMI	XB5S5B2L2	Fingerprint recognition unit easily connected with HMIGTO via USB.
Tower light USB Switch	XVGU3SHAV XVGU3SWV	Monolithic USB tower lights with multiple color LEDs easily connected with HMIGTO via USB.
Keyboard USB	HMIZKB1	Keyboard unit easily connected with HMIGTO via USB.

## Software

Product name	Description
Vijeo Designer (Version 6.1 or later)	Software you install on your computer to create project data for your HMIGTO.

## SD Card Items

Product Name	Product Number	Description
SD Memory Card (4 GB)	HMIZSD4G	SD Memory Card (4 GB, CLASS4).

## Option Items

Product Name	Product Number	Corresponding panel	Description
Screen Protection Sheet	XBTZG66	HMIGTO6310/6315	Disposable, dirt-resistant sheet for the HMIGTO screen (5 sheets/set).
	XBTZG65	HMIGTO5310/5315	
	XBTZG64	HMIGTO4310	
	XBTZG63	HMIGTO3510	
	XBTZG62	HMIGTO2300/2310/ 2315	
	XBTZG60	HMIGTO1300/1310	
UV Protection Sheet	HMIUV6	HMIGTO6310	Sheet to protect the display and ultraviolet light.
	HMIUV5	HMIGTO5310	
	HMIUV4	HMIGTO4310	
	HMIUV3W	HMIGTO3510	
	HMIUV2	HMIGTO2300/2310	
	HMIUV1	HMIGTO1300/1310	

Product Name	Product Number	Corresponding panel	Description
Environment Cover	HMIZECOV6	HMIGTO6310	Disposable, environment cover for the HMIGTO screen (1 sheet/set).
	HMIZECOV5	HMIGTO5310	
	HMIZECOV4	HMIGTO3510/4310	
	HMIZECOV2	HMIGTO2300/2310	
	HMIZECOV1	HMIGTO1300/1310	

## Maintenance Options

Product Name	Product Number	Corresponding panel	Description
Installation Fastener	HMIZGFIX	HMIGTO (except HMIGTO2315/5315/6315)	Used to install the HMIGTO into a solid panel (4 pieces/set).
Installation System	HMIZGFIX2	HMIGTO2315/5315/6315	Used to install the HMIGTO into a solid panel. Brackets (4 pieces/set). M4 Hex nuts (8 pieces/set).
Installation Gasket	HMIZG56	HMIGTO6310	Provides dust and moisture resistance when HMIGTO is installed into a solid panel (1 piece).
	HMIZG562	HMIGTO6315	
	HMIZG55	HMIGTO5310	
	HMIZG552	HMIGTO5315	
	HMIZG54	HMIGTO3510/4310	
	HMIZG52	HMIGTO2300/2310	
	HMIZG522	HMIGTO2315	
	HMIZG51	HMIGTO1300/1310	
USB Clamp TypeA (1 port)	HMIZGCLP1	Harmony GTO	Clamp to prevent disconnection of USB cable (USB/A, 1 port, 5 clamps/set).
USB Clamp mini-B (1 port)	HMIZSCLP3	Harmony GTO	Clamp to prevent disconnection of USB cable (USB/mini-B, 1 port, 5 clamps/set).
DC Power Supply Connector	HMIZGPWS	HMIGTO3510/4310 HMIGTO2300/2310/ 2315 HMIGTO1300/1310	Connector to connect DC power supply cables (5 pieces/set).
DC Power Supply Connector (Right-angle)	HMIZGPWS2	HMIGTO6310/6315 HMIGTO5310/5315	Right-angle connector to connect DC power supply cables (5 pieces/set).
Battery for Memory Backup	HMIZGBAT	HMIGTO (except HMIGTO1300/1310/2300)	Primary battery for memory and time data backup.
Panel Cutout Adapter	XBTZGGCO4	HMIGTO5310	Panel cutout adapter for mounting HMIGTO5310 in cutout for XBTGT5230.
Insert Label	HMIZLYGO3	HMIGTO3510	Label insert for HMIGTO 7-inch Wide models.
	HMIZLYGO1	HMIGTO1300/1310	Label insert for HMIGTO 3.5-inch models.




# Chapter 3

## Parts Identification and Functions

### Parts Identification and Functions

#### HMIGTO1300/1310 Parts Identification

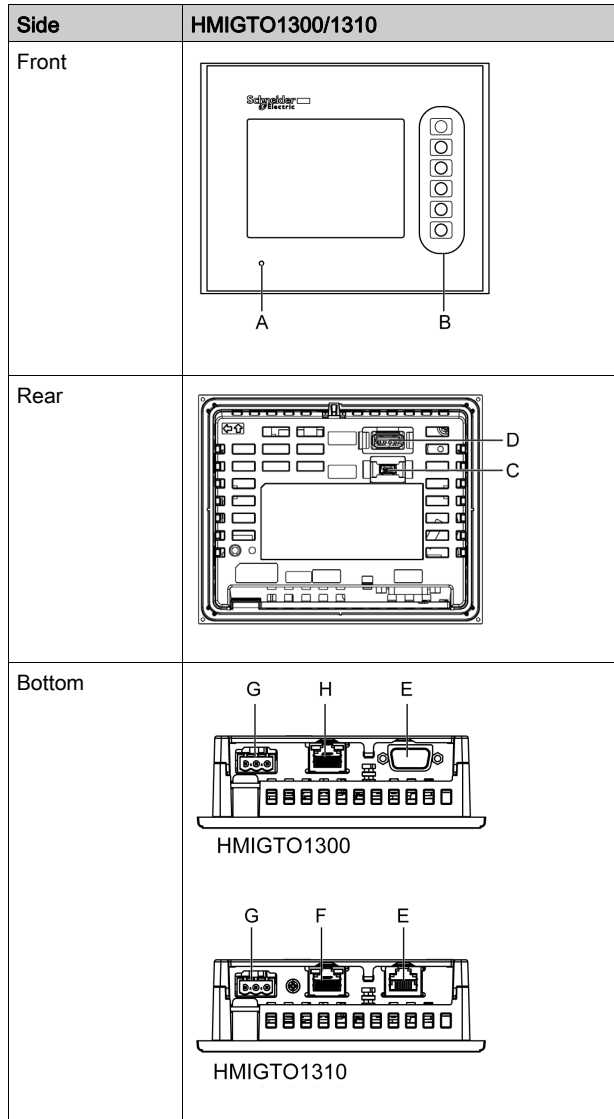


Part	Name	Description
A	Status LED	*1
B	Function Switches	Six switches (F1 to F6). You can define operations for these switches using Vijeo Designer.
C	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.
D	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5 Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).

Part	Name	Description
E	Serial Interface (COM1)	HMIGTO1300: RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1. HMIGTO1310: RS-232C/485 Serial Interface. (You can switch the communication method via software.) Connector: Modular jack (RJ45).
F	Ethernet Interface*2	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ45) x 1. Ethernet Interface is not attached to HMIGTO1300.
G	Power Plug Connector	-
H	Serial Interface (COM2)	HMIGTO1300: RS-485 Serial Interface. Connector: Modular jack (RJ45) x 1.





\*1 Status LED operations are as shown below:


Color	Indicator	Description
Green	ON	In operation
Orange	Flashing	Software starting up.
Red	ON	Power is turned ON.
-	OFF	Power is turned OFF.

\*2 Ethernet LED operations are as shown below.

	Color	Indicator	Description
 <p>Link Active</p>	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

HMIGTO2300/2310/2315 Parts Identification

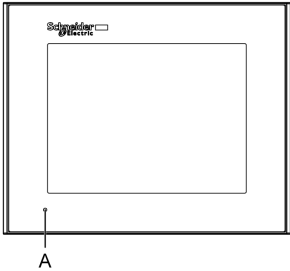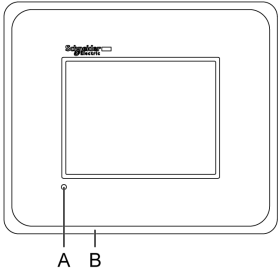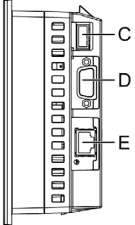Side	HMIGTO2300 / HMIGTO2310	HMIGTO2315
Front	 <p>A</p>	 <p>A B</p>
Right	 <p>C D E</p>	 <p>C D E</p>

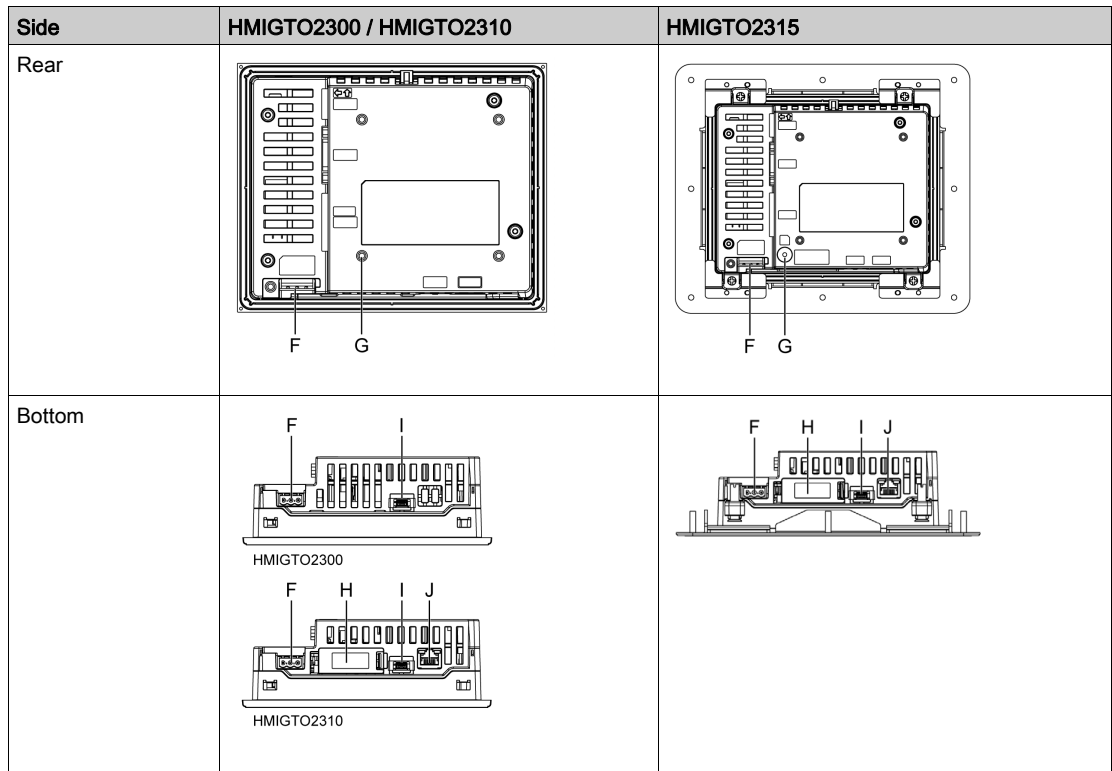

Part	Name	Description
A	Status LED	*1
B	Stainless Steel Bezel (grade 304)	HMIGTO2315 only.
C	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5 Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).
D	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
E	Serial Interface (COM2)*2	RS-485 Serial Interface. Connector: Modular jack (RJ45).
F	Power Plug Connector	-
G	SD Card Access LED*3	This lamp lights up when SD card is inserted. For more information, refer to SD Card Insertion/Removal ( <a href="#">see page 121</a> ). <b>NOTE:</b> SD card access LED is not available on HMIGTO2300.
H	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD card, refer to SD Card Insertion/Removal ( <a href="#">see page 121</a> ). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery ( <a href="#">see page 136</a> ). <b>NOTE:</b> This cover is not on HMIGTO2300.
I	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.
J	Ethernet Interface*4	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ45) x 1. <b>NOTE:</b> Ethernet Interface is not available on HMIGTO2300.

\*1 Status LED operations are as shown below:

Color	Indicator	Description
Green	ON	In operation
Orange	Flashing	Software starting up.
Red	ON	Power is turned ON.
-	OFF	Power is turned OFF.


\*2 COM2 LED operations are as shown below.

Color	Indicator	Description
Yellow	ON	Communication (sending or receiving data) is occurring.
	OFF	No communication.




\*3 SD card access LED operations are as shown below.


Color	Indicator	Description
Green (Active)	ON	The SD card is inserted.
	OFF	The SD card is not inserted or is not being accessed.

\*4 Ethernet LED operations are as shown below.

	Color	Indicator	Description
 Link Active	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

**HMIGTO3510/4310 Parts Identification**

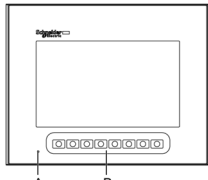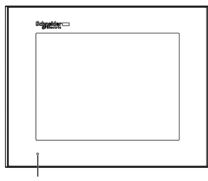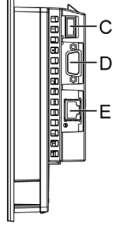Side	HMIGTO3510/4310
Front	<p>HMIGTO3510</p>  <p>A B</p> <p>HMIGTO4310</p>  <p>A</p>
Right	 <p>C D E</p>

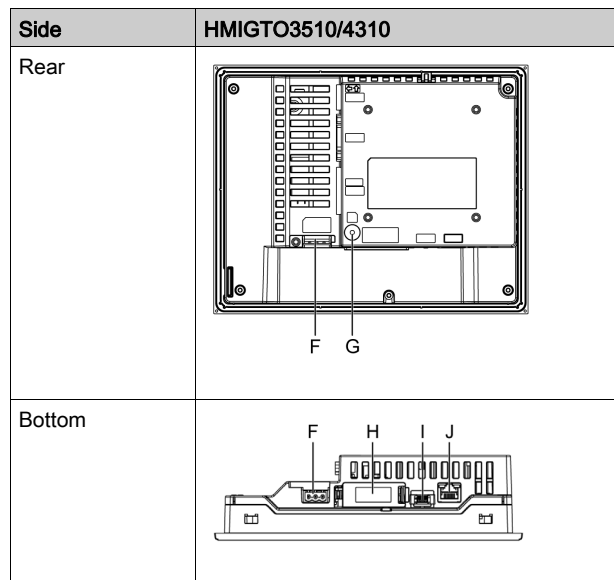

Part	Name	Description
A	Status LED	*1
B	Function Switches	Height switches (F1 to F8). You can define operations for these switches using Vijeo Designer.
C	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5 Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).
D	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
E	Serial Interface (COM2)*2	RS-485 Serial Interface. Connector: Modular jack (RJ45) x 1.
F	Power Plug Connector	-
G	SD Card Access LED*3	This lamp lights up when SD card is inserted. For more information, refer to SD Card Insertion/Removal ( <a href="#">see page 121</a> ).
H	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD card, refer to SD Card Insertion/Removal ( <a href="#">see page 121</a> ). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery ( <a href="#">see page 136</a> ).
I	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.
J	Ethernet Interface*4	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ45) x 1.

\*1 Status LED operations are as shown below:

Color	Indicator	Description
Green	ON	In operation
Orange	Flashing	Software starting up.
Red	ON	Power is turned ON.
-	OFF	Power is turned OFF.


\*2 COM2 LED operations are as shown below.

Color	Indicator	Description
Yellow	ON	Communication (sending or receiving data) is occurring.
	OFF	No communication.







\*3 SD card Access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD card is inserted.
	OFF	The SD card is not inserted or is not being accessed.

\*4 Ethernet LED operations are as shown below.

	Color	Indicator	Description
 Link Active	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

HMIGTO5310/5315 Parts Identification

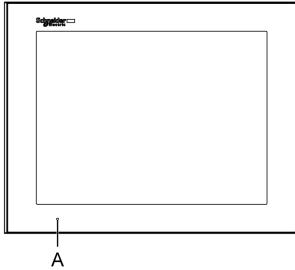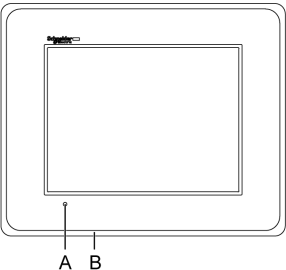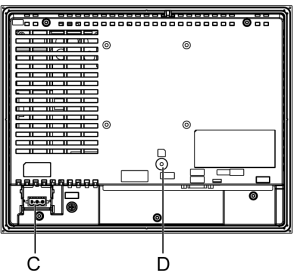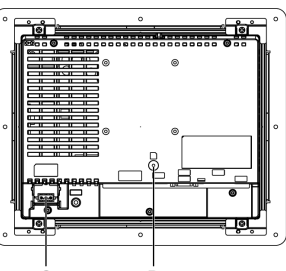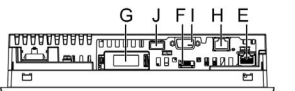Side	HMIGTO5310	HMIGTO5315
Front		
Rear		
Bottom		

Part	Name	Description
A	Status LED	*1
B	Stainless Steel Bezel (grade 304)	HMIGTO5315 only.
C	Power Plug Connector (DC model)	-
D	SD Card Access LED*2	This lamp lights up when SD card is inserted. <b>NOTE:</b> Do not remove or insert the SD card when the LED lamp is on. Doing so may damage data on the SD card.
E	Ethernet Interface*3	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ45) x 1.
F	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.

Part	Name	Description
G	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD card, refer to SD Card Insertion/Removal ( <i>see page 121</i> ). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery ( <i>see page 136</i> ).
H	Serial Interface (COM2)*4	RS-485 Serial Interface. Connector: Modular jack (RJ45).
I	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
J	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5 Vdc +/- 5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).


\*1 Status LED operations are as shown below:

Color	Indicator	Description
Green	ON	In operation
Orange	Flashing	Software starting up.
Red	ON	Power is turned ON.
-	OFF	Power is turned OFF.

\*2 SD card access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD card is inserted.
	OFF	The SD card is not inserted or is not being accessed.



\*3 Ethernet LED operations are as shown below.


	Color	Indicator	Description
 Link Active	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

\*4 COM2 LED operations are as shown below.

Color	Indicator	Description
Yellow	ON	Communication (sending or receiving data) is occurring.
	OFF	No communication.

### HMIGTO6310/6315 Parts Identification

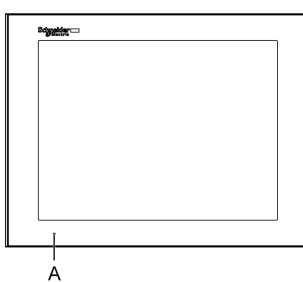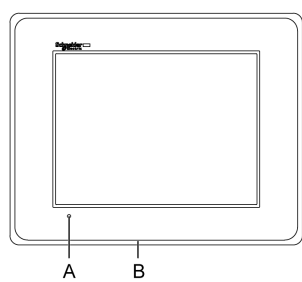Side	HMIGTO6310	HMIGTO6315
Front		

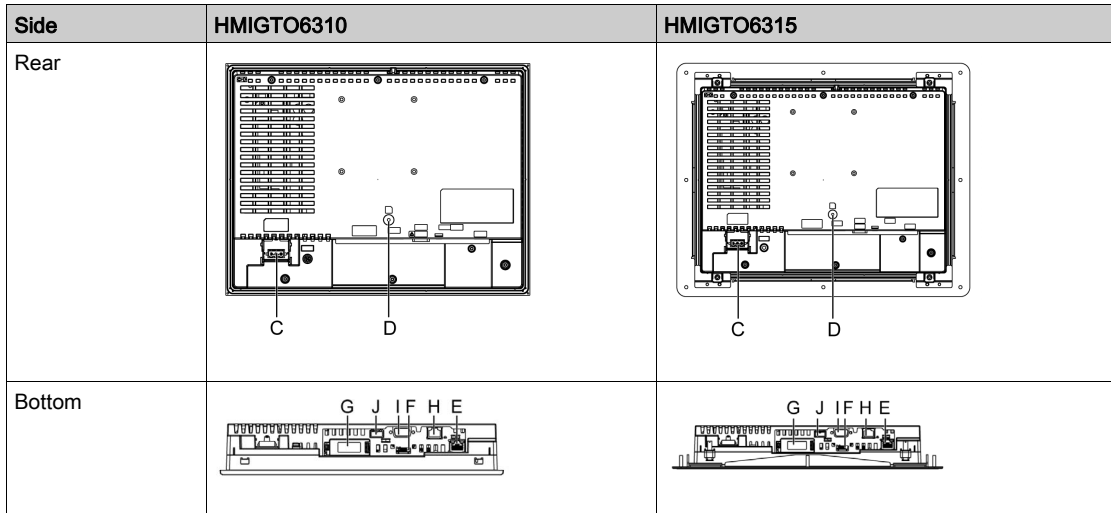

Part	Name	Description
A	Status LED	*1
B	Stainless Steel Bezel (grade 304)	HMIGTO6315 only.
C	Power Plug Connector (DC model)	-
D	SD Card Access LED* <sup>2</sup>	This lamp lights up when SD card is inserted. <b>NOTE:</b> Do not remove or insert the SD card when the LED lamp is on. Doing so may damage data on the SD card.
E	Ethernet Interface* <sup>3</sup>	Ethernet transmission interface (10BASE-T/100BASE-TX) Connector: Modular jack (RJ45) x 1.
F	USB (mini-B) Interface	Conforms to USB2.0 (mini-B) x 1. Communication Distance: 5 m (16.4 ft) or less.
G	SD Card Interface Cover/Replacement Battery Insertion Cover	For information on how to open the cover, and insert or remove the SD card, refer to SD Card Insertion/Removal ( <i>see page 121</i> ). For information on how to open the cover and replace the battery, refer to Replacing the Primary Battery ( <i>see page 136</i> ).
H	Serial Interface (COM2)* <sup>4</sup>	RS-485 Serial Interface. Connector: Modular jack (RJ45)
I	Serial Interface (COM1)	RS-232C Serial Interface. Connector: D-Sub 9 pin (plug) x 1.
J	USB (Type A) Interface	Conforms to USB2.0 (Type A) x 1. Power supply voltage: 5 Vdc+/-5%. Output Current: 500 mA or less. Maximum communication distance: 5 m (16.4 ft).

\*1 Status LED operations are as shown below:


Color	Indicator	Description
Green	ON	In operation
Orange	Flashing	Software starting up.
Red	ON	Power is turned ON.
-	OFF	Power is turned OFF.

\*2 SD card access LED operations are as shown below.

Color	Indicator	Description
Green (Active)	ON	The SD card is inserted.
	OFF	The SD card is not inserted or is not being accessed.



\*3 Ethernet LED operations are as shown below.

	Color	Indicator	Description
 Link Active	Green (Active)	Flashing	Data transmission is occurring.
		OFF	No data transmission.
	Green (Link)	ON	Data transmission is available in 10BASE-T/100BASE-TX.
		OFF	No connection or subsequent transmission failure.

\*4 COM2 LED operations are as shown below.

Color	Indicator	Description
Yellow	ON	Communication (sending or receiving data) is occurring.
	OFF	No communication.



---

# Chapter 4

## Specifications

---

### Overview

This chapter presents the HMIGTO specifications.

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
4.1	HMIGTO1300/1310	36
4.2	HMIGTO2300/2310/2315	49
4.3	HMIGTO3510/4310	64
4.4	HMIGTO5310/5315	78
4.5	HMIGTO6310/6315	93

# Section 4.1

## HMIGTO1300/1310

---

### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	37
Environmental Specifications	38
Structural Specifications	39
Display Specifications	40
Memory, Clock, Touch Panel, and Function Switches	41
Interface Specifications	42
Specifications of Serial Interface COM1	43
Specifications of Serial Interface COM2	45
Dimensions	46

## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc	
	Input Voltage Limits	19.2...28.8 Vdc	
	Voltage Drop	2 ms or less	
	Power Consumption	9.6 W or less	
		When power is not supplied to external devices	5.2 W or less
		Backlight OFF (Standby Mode)	4.2 W or less
		Backlight Dimmed (Brightness: 20%)	4.3 W or less
		In-Rush Current	30 A or less
Voltage Endurance		1,000 Vac 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance		500 Vdc, 10 M $\Omega$ or more (between charging and FG terminals)	

## Environmental Specifications

Physical Environment	Surrounding Air Temperature	0...50 °C (32...122 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)
	Surrounding Air and Storage Humidity	10%...90% RH (non-condensing, wet bulb temperature 39 °C (102.2 °F) or less)
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)
	Pollution Degree	For use in Pollution Degree 2 environment
	Corrosive Gases	Free of corrosive gases
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min.)
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 µs Rise Time: 1 ns (via noise simulator)
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)

### Air Quality Requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

⚠ CAUTION
INOPERATIVE EQUIPMENT
Do not allow water, liquids, metal, and wiring fragments to enter the panel case.
<b>Failure to follow these instructions can result in injury or equipment damage.</b>

## Structural Specifications

Grounding	Functional grounding: Grounding resistance of 100 $\Omega$ , 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)
Cooling Method	Natural air circulation
Structure * <sup>1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)
External Dimensions	W 132 x H 106 x D 42 mm (W 5.2 x H 4.17 x D 1.65 in)
Panel Cut Dimensions	W 118.5 x H 92.5 mm (W 4.67 x H 3.64 in) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in) <sup>*3</sup>
Weight	0.4 kg (0.9 lb) or less (main unit only)

\*<sup>1</sup> The front face of the HMIGTO, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the HMIGTO's level of resistance is equivalent to these standards, oils that should have no effect on the HMIGTO can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the panel's front face protection sheet peels off, these conditions can lead to the ingress of oil into the panel and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the panel, be sure to confirm the type of conditions that will be present in the panel's operating environment. If the installation gasket is used for a long period of time, or if the panel and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

\*<sup>2</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in), and R in angle are below R3 (R0.12 in)

\*<sup>3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the panel and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

The front face of the panel, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**

### NOTICE

#### STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS

- Store this product in areas where temperatures are within the product's specifications.
- Do not restrict or block this product's ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

### NOTICE

#### GASKET AGING

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

		HMIGTO1310	HMIGTO1300
Display Type		TFT Color LCD	
Display Size		3.5"	
Resolution		320 x 240 pixels (QVGA)	
Effective Display Area		W 70.56 x H 52.92 mm (W 2.78 x H 2.08 in.)	
Display Colors		65,536 colors (no blink) / 16,384 colors (blink)	
Backlight		White LED (not user replaceable). When replacement is required, contact your local distributor.	
Backlight Service Life		50,000 hours or more (continuous operation at 25 °C (77 °F) before backlight brightness decreased to 50%)	
Brightness Control		16 levels (Adjusted with touch panel or software)	
Language Fonts		ASCII: (Code page 850) Alphanumeric (including European characters) Chinese: (GB2312-80 codes) Simplified Chinese fonts Japanese (except for XBT GT1000 series): ANK 158, Kanji: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) Korean: (KSC5601 - 1992 codes) Hangul fonts Taiwanese: (Big 5 codes) Traditional Chinese fonts	
Character Sizes		8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts	
Font Sizes		You can expand width up to 8 times, and expand height up to 8 times.*1	
Text	8 x 8 pixels	40 characters per row x 30 rows	
	8 x 16 pixels	40 characters per row x 15 rows	
	16 x 16 pixels	20 characters per row x 15 rows	
	32 x 32 pixels	10 characters per row x 7 rows	

\*1 You can set up other font sizes using the software.



## Memory, Clock, Touch Panel, and Function Switches

### Introduction

#### NOTE:

- When the message indicating that the battery level is low is displayed, supply power to the panel and fully charge the battery. In 24 hours the battery charges to a level that allows backup operation. Completing a full charge requires about 120 hours (five days).
- The lifetime of the rechargeable lithium battery is 10 years when the battery's ambient temperature is 40 °C (104 °F) or less, 4.1 years when the battery's ambient temperature is 50 °C (122 °F) or less, and 1.5 years when the battery's ambient temperature is 60 °C (140 °F) or less.  
When used for backup:
  - Approximately 100 days with a fully charged battery.
  - Approximately 6 days with a half-charged battery.

### Memory

	HMIGTO1310	HMIGTO1300
Application Memory *1	FLASH EPROM 96 MB	FLASH EPROM 64 MB
Application run DRAM	128 MB	128 MB
Data Backup	SRAM 512 KB (Rechargeable lithium battery for data backup)	SRAM 128 KB (Rechargeable lithium battery for data backup)

\*1 Capacity available for user application.

### Clock

Clock Accuracy*1	±65 seconds/month (deviation at room temperature and power is OFF).
------------------	---------------------------------------------------------------------

\*1 Depending on the operating temperature and age of panel, the clock can deviate from -380 to +90 sec/month. For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more

### Function Switches

Six switches (F1 to F6).

## Interface Specifications

### Serial Interface COM1

	HMIGTO1310	HMIGTO1300
Asynchronous Transmission	RS-232C / RS-485	RS-232C
Data Length	7 bits or 8 bits	
Stop Bit	1 bit or 2 bits	
Parity	None, odd or even	
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)	2,400...115,200 bps
Connector	Modular jack (RJ45)	D-Sub 9 pin (plug)

### Serial Interface COM2

	HMIGTO1300
Asynchronous Transmission	RS-485
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	Modular jack (RJ45)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

	HMIGTO1310
Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

**NOTE:** HMIGTO1300 does not have an Ethernet interface.

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

### ⚠ CAUTION

#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel or cabinet.
- Use only D-Sub 9-pin cables with a locking system in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### ⚠ ⚠ DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- For HMIGTO1300, connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.
- For HMIGTO1310, connect the #8 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #8 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

HMIGTO1300: D-Sub 9-pin plug connector via a RS-232C cable.

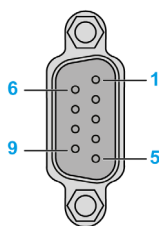Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input-	Called Status Display +5 V±5% Output 0.25 A
	Shell	FG	-	Frame Ground (Common with SG)

You can switch pin #9 between RI and VCC via software.

### **NOTICE**

#### EQUIPMENT DAMAGE


Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

Interfit bracket is #4-40 (UNC).

<b>⚠ CAUTION</b>
<p><b>LOSS OF COMMUNICATION</b></p> <ul style="list-style-type: none"> <li>● All connections to the communication ports must not put excessive stress on the ports.</li> <li>● Securely attach communication cables to the panel wall or cabinet.</li> <li>● Use only D-Sub 9 pin cables with a locking tab in good condition.</li> </ul> <p><b>Failure to follow these instructions can result in injury or equipment damage.</b></p>

HMIGTO1310: RJ45 connector via a RS-232C or 485 cable.

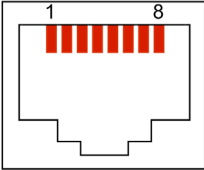Pin Connection	Pin No.	RS-232C/RS-485		
		Signal Name	Direction	Meaning
	1	RD(RXD)	Input	Receive Data (RS-232C)
	2	SD(TXD)	Output	Send Data (RS-232C)
	3	NC	-	-
	4	D1	Input/Output	Transfer Data (RS-485)
	5	D0	Input/Output	Transfer Data (RS-485)
	6	RS(RTS)	Output	Request to Send
	7	NC	-	-
	8	SG	-	Signal Ground

<b>⚠ CAUTION</b>
<p><b>LOSS OF COMMUNICATION</b></p> <ul style="list-style-type: none"> <li>● All connections to the communication ports must not put excessive stress on the ports.</li> <li>● Securely attach communication cables to the panel wall or cabinet.</li> <li>● Use only RJ45 with a locking tab in good condition.</li> </ul> <p><b>Failure to follow these instructions can result in injury or equipment damage.</b></p>

## Specifications of Serial Interface COM2

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### DANGER

#### ELECTRIC SHOCK

When using the SG terminal to connect an external device to the panel:


- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #8 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #8 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

HMIGTO1300: RJ45 connector via an RS-485 cable

**NOTE:** When setting up RS-485 communication, the cable diagram for some equipment may require polarization on the terminal side. This terminal does not require any special setting as it handles polarization automatically.

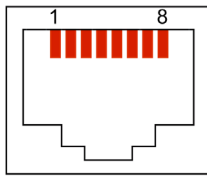Pin Connection	Pin No.	RS-485		
		Signal Name	Direction	Meaning
	1	NC	–	–
	2	NC	–	–
	3	NC	–	–
	4	Line A	Input/Output	Transfer Data (RS-485)
	5	Line B	Input/Output	Transfer Data (RS-485)
	6	RS(RTS)	Output	Request to Send
	7	NC	–	–
	8	SG	–	Signal Ground

### CAUTION


#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only RJ45 with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions

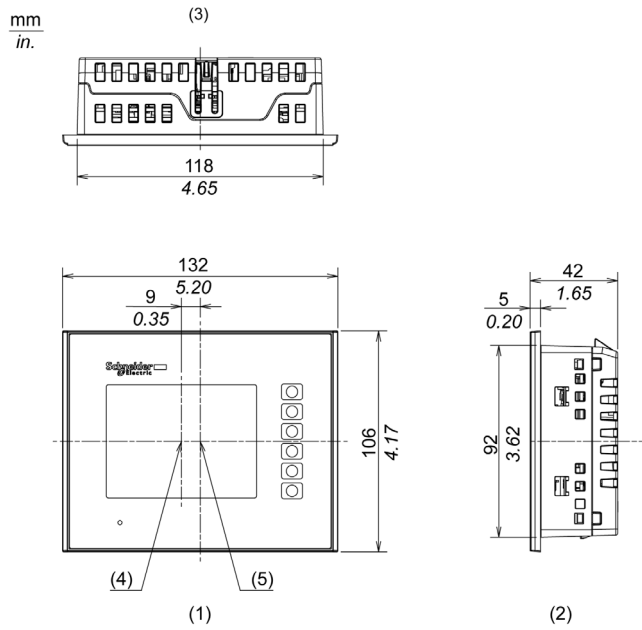


- 1 Front
- 2 Right side
- 3 Top
- 4 Display area center
- 5 Product center

### Installation with Installation Fasteners

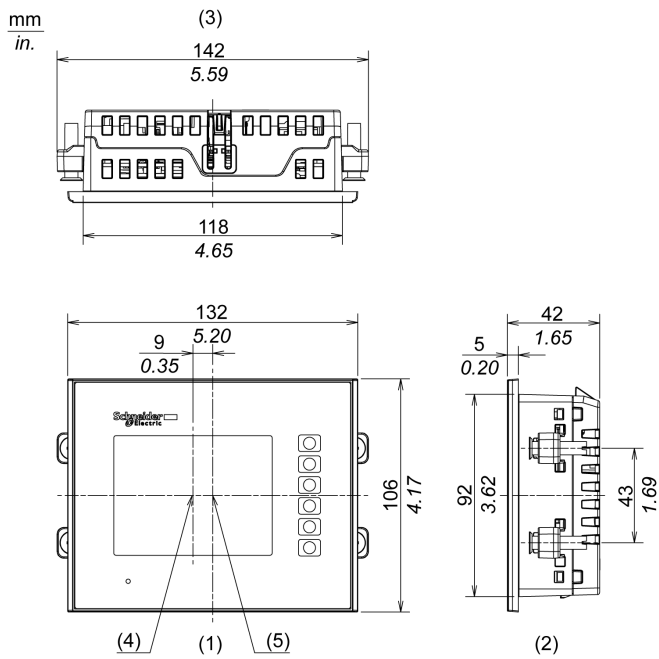

- 1 Front
- 2 Right side
- 3 Top
- 4 Display area center
- 5 Product center


**Dimensions with Cables: HMIGTO1300**

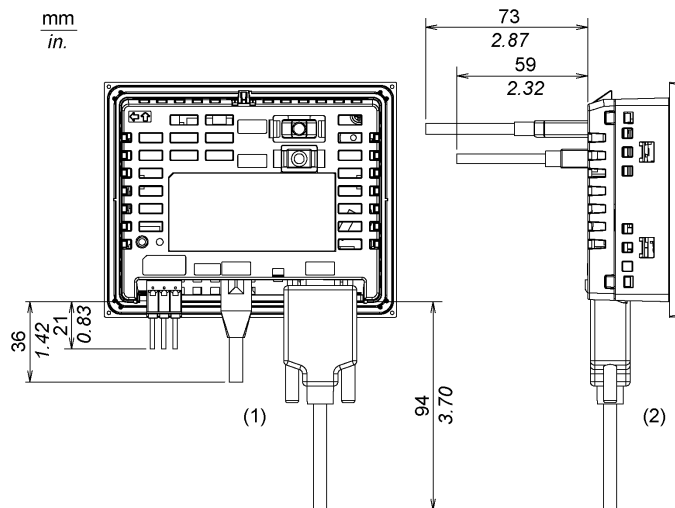

- 1 Rear
- 2 Right side

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Dimensions with Cables: HMIGTO1310**

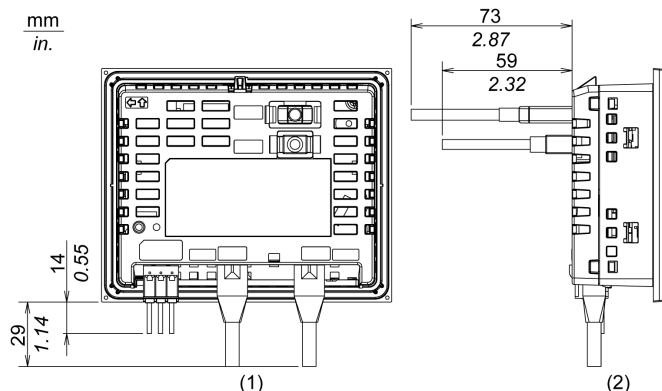


- 1 Rear
- 2 Right side

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Panel Cut Dimensions**


Create a panel cut and insert the panel into the opening from the front.

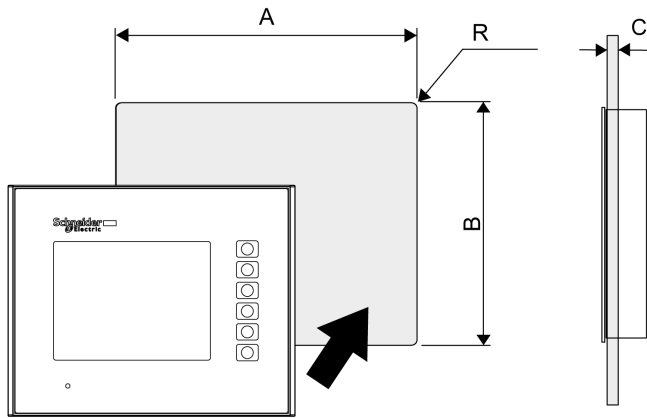

A	B	C	R
118.5 mm (+1, -0 mm) (4.67 in (+0.04, -0 in))	92.5 mm (+1, -0 mm) (3.64 in (+0.04, -0 in))	1.6...5 mm (0.06...0.2 in)	3 mm (0.12 in) maximum

**NOTE:** Before designing the panel cut, refer to Installation.

**Installation Fastener Dimensions**

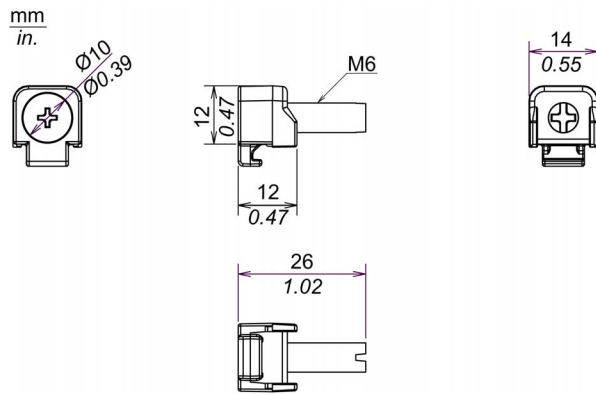



---

## Section 4.2

### HMIGTO2300/2310/2315

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	50
Environmental Specifications	51
Structural Specifications	52
Display Specifications	54
Memory, Clock, and Touch Panel	55
Interface Specifications	56
Specifications of Serial Interface COM1	57
Specifications of Serial Interface COM2	59
Dimensions	60

## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc	
	Input Voltage Limits	19.2...28.8 Vdc	
	Voltage Drop	5 ms or less	
	Power Consumption	10.5 W or less	
		When power is not supplied to external devices	6.5 W or less
		Backlight OFF (Standby Mode)	4.5 W or less
		Backlight Dimmed (Brightness: 20%)	5 W or less
		In-Rush Current	30 A or less
Voltage Endurance		1,000 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance		500 Vdc, 10 MΩ or more (between charging and FG terminals)	

## Environmental Specifications

		HMIGTO2310 / HMIGTO2315	HMIGTO2300
Physical Environment	Surrounding Air Temperature	0...55 °C (32 °F...131 °F)	0...50 °C (32...122 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)	
	Surrounding Air and Storage Humidity	10...90% RH (non-condensing, wet bulb temperature 39 °C (102.2 °F) or less)	
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)	
	Pollution Degree	For use in Pollution Degree 2 environment	
	Corrosive Gases	Free of corrosive gases	
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)	
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min)	
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times	
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 µs Rise Time: 1 ns	
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)	

### Air Quality Requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

### CAUTION

#### INOPERATIVE EQUIPMENT

Do not allow water, liquids, metal, and wiring fragments to enter the panel case.

**Failure to follow these instructions can result in injury or equipment damage.**

**Structural Specifications**

	HMIGTO2300 / HMIGTO2310	HMIGTO2315
Grounding	Functional grounding: Grounding resistance of 100 Ω, 2mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)	
Cooling Method	Natural air circulation	
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)	IP66k NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure) <sup>*2</sup>
External Dimensions	W 169.5 x H 137 x D 59.5 mm (W 6.67 x H 5.39 x D 2.34 in)	W 213.5 x H 181 x D 59.5 mm (W 8.41 x H 7.13 x D 2.34 in)
Panel Cut Dimensions	W 156 x H 123.5 mm (W 6.14 x H 4.86 in) <sup>*3</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in) <sup>*4</sup>	W 195 x H 162.5 mm (W 7.68 x H 6.40 in) <sup>*3</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in) <sup>*4</sup>
Weight	0.8 kg (1.8 lbs) or less (main unit only)	1.2 kg (2.6 lbs) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the HMIGTO, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the HMIGTO's level of resistance is equivalent to these standards, oils that should have no effect on the HMIGTO can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the panel's front face protection sheet peels off, these conditions can lead to the ingress of oil into the panel and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the panel, be sure to confirm the type of conditions that will be present in the panel's operating environment. If the installation gasket is used for a long period of time, or if the panel and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> When installing the HMIGTO in a panel, you may not be able to mount the HMIGTO flush with the panel. This occurs due to the thickness of the gasket. The difference in level between the HMIGTO and panel depends on how much the gasket is compressed.

There is a conformal coating on circuit boards for HMIGTO2315

<i>NOTICE</i>
<b>EQUIPMENT DAMAGE</b>
For food and beverage and pharmaceutical industries, when the HMIGTO is not flush with panel, use silicon to form a seal to prevent water, chemicals, or food from lodging into place. Otherwise, the panel face could leak.
<b>Failure to follow these instructions can result in equipment damage.</b>

<sup>\*3</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in) and R in angle are below R3 (R0.12 in).

<sup>\*4</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the panel and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

<b>CAUTION</b>
<b>EQUIPMENT DAMAGE</b>
Ensure that the panel is not in permanent and direct contact with oils.
<b>Failure to follow these instructions can result in injury or equipment damage.</b>

***NOTICE*****STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store this product in areas where temperatures are within the product's specifications.
- Do not restrict or block this product's ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

***NOTICE*****GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

Display Type	TFT Color LCD	
Display Size	5.7"	
Resolution (pixels)	320 x 240 pixels (QVGA)	
Effective Display Area	W 115.2 x H 86.4 mm (W 4.54 x H 3.40 in.)	
Display Colors	65,536 colors (no blink) / 16,384 colors (blink)	
Backlight	White LED (not user replaceable). When replacement is required, contact your local distributor.	
Backlight Service Life	50,000 hours or more (continuous operation at 25 °C (77 °F) before backlight decreases to 50%)	
Brightness Control	16 levels (Adjusted with touch panel or software)	
Language Fonts	ASCII: (Code page 850) Alphanumeric (including European characters) Chinese: (GB2312-80 codes) Simplified Chinese fonts Japanese (except for XBT GT1000 series): ANK 158, Kanji: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) Korean: (KSC5601 - 1992 codes) Hangul fonts Taiwanese: (Big 5 codes) Traditional Chinese fonts	
Character Sizes	8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts	
Font Sizes	You can expand the width up to 8 times, and expand the height up to 8 times. *1	
Text	8 x 8 pixels	40 characters per row x 30 rows
	8 x 16 pixels	40 characters per row x 15 rows
	16 x 16 pixels	20 characters per row x 15 rows
	32 x 32 pixels	10 characters per row x 7 rows

\*1 You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Introduction

#### NOTE:

- When the message indicating that the battery level is low is displayed, on the HMIGTO2300, supply power to the panel and fully charge the battery. In 24 hours the battery charges to a level that allows backup operation. Completing a full charge requires about 120 hours (five days).
- The lithium battery's lifetime is: 10 years when the battery's ambient temperature is 40 °C (104 °F) or less, 4.1 years when the battery's ambient temperature is 50 °C (122 °F) or less, and 1.5 years when the battery's ambient temperature is 60 °C (140 °F) or less.  
When used for backup:
  - Approximately 100 days with a fully charged battery.
  - Approximately 6 days with a half-charged battery.
- When the message indicating that the battery level is low is displayed on HMIGTO2310/2315, replace the battery (*see page 136*).

### Memory

	HMIGTO2310 / HMIGTO2315	HMIGTO2300
Application Memory <sup>*1</sup>	FLASH EPROM 96 MB	FLASH EPROM 64 MB
Application run DRAM	128 MB	128 MB
Data Backup	SRAM 512 KB (Replaceable lithium battery for data backup)	SRAM 128 KB (Rechargeable lithium battery for data backup)

<sup>\*1</sup> Capacity available for user application.

### Clock

Clock Accuracy <sup>*1</sup>	±65 seconds/month (deviation at room temperature and power is OFF).
------------------------------	---------------------------------------------------------------------

<sup>\*1</sup> Depending on the operating temperature and age of panel, the clock can deviate from -380 to +90 sec/month. For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 or 8 bits
Stop Bit	1 or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9-pin (plug)

### Serial Interface COM2

Asynchronous Transmission	RS-485
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	Modular jack (RJ45)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc ±5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

	HMIGTO2310 / HMIGTO2315
Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

HMIGTO2310/HMIGTO2315: SD card slot x 1 (maximum 32 GB SD/SDHC Card)

**NOTE:** HMIGTO2300 does not have a SD card interface.



## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

### ⚠ CAUTION

#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel or cabinet.
- Use only D-Sub 9-pin cables with a locking system in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### ⚠ ⚠ DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

**HMIGTO2300 / HMIGTO2310/ HMIGTO2315:** D-Sub 9-pin plug connector via a RS-232C cable.

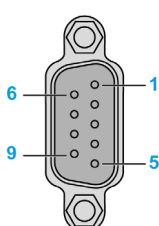Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input-	Called Status Display +5 V±5% Output 0.25 A*1
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** \*1 You can switch pin number 9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

 **CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

## Specifications of Serial Interface COM2

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### DANGER

#### ELECTRIC SHOCK

When using the SG terminal to connect an external device to the panel:


- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #8 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #8 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

HMIGTO2300 / HMIGTO2310 / HMIGTO2315: RJ45 connector via a RS-485 cable.

**NOTE:** When setting up RS-485 communication, the cable diagram for some equipment may require polarization on the terminal side. This terminal does not require any special setting as it handles polarization automatically.

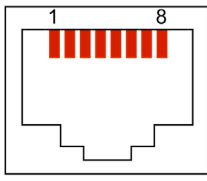Pin Connection	Pin No.	RS-485		
		Signal Name	Direction	Meaning
	1	NC	-	-
	2	NC	-	-
	3	NC	-	-
	4	Line A	Input/Output	Transfer Data (RS-485)
	5	Line B	Input/Output	Transfer Data (RS-485)
	6	RS(RTS)	Output	Request To Send
	7	NC	-	-
	8	SG	-	Signal Ground

### CAUTION


#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only RJ45 with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions: HMIGTO2300 / HMIGTO2310

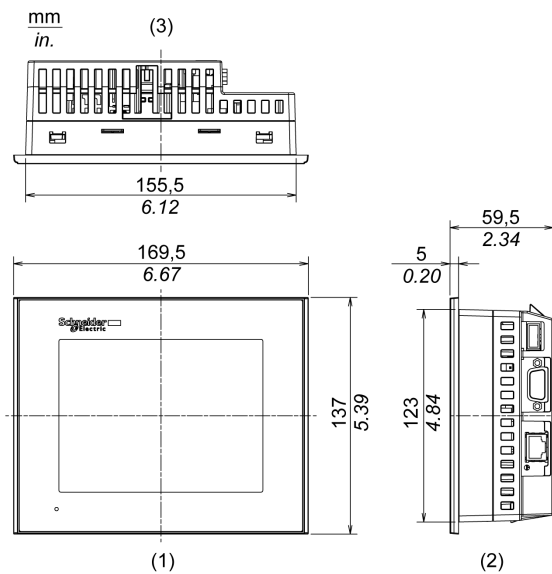


- 1 Front
- 2 Right side
- 3 Top

### External Dimensions: HMIGTO2315

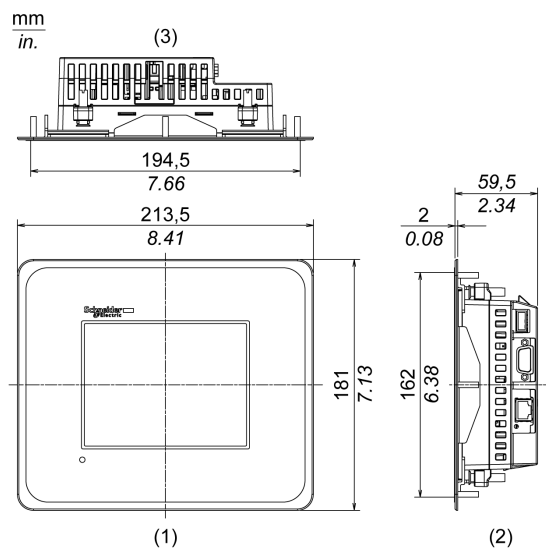


- 1 Front
- 2 Right side
- 3 Top

Installation with Installation Fasteners: HMIGTO2300 / HMIGTO2310

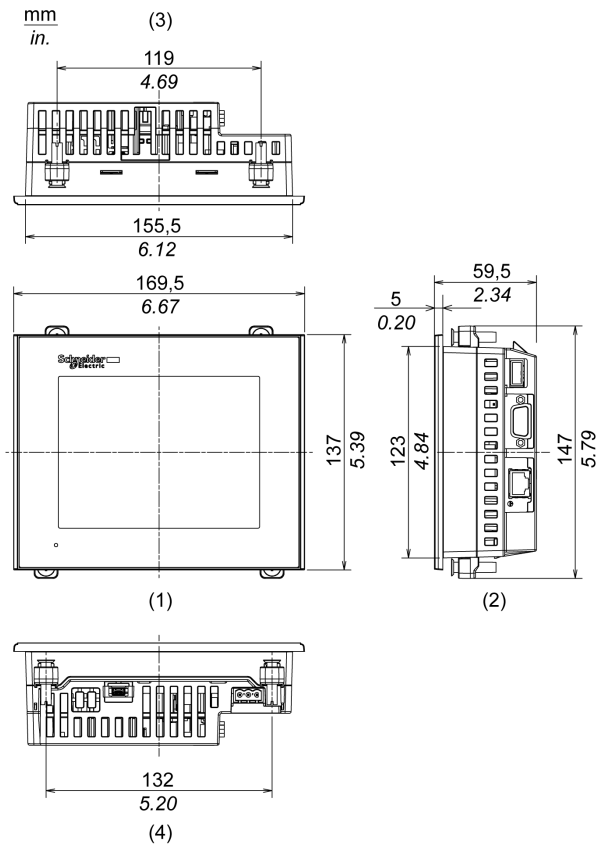


- 1 Front
- 2 Right side
- 3 Top
- 4 Bottom

Installation with Installation Fasteners: HMIGTO2315

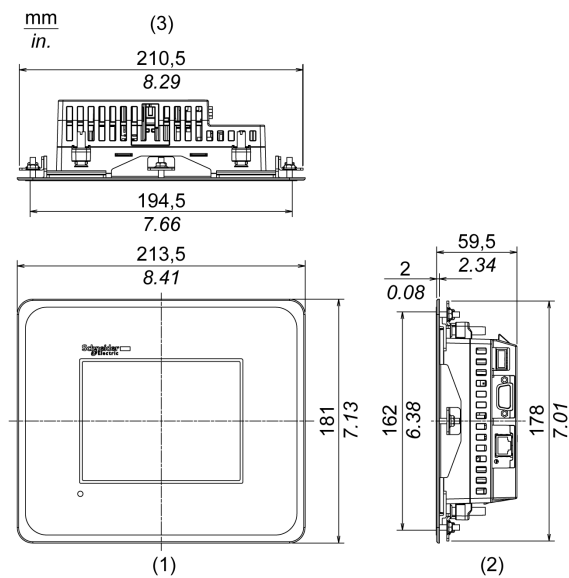


- 1 Front
- 2 Right side
- 3 Top

**Dimensions with Cables: HMIGTO2300**

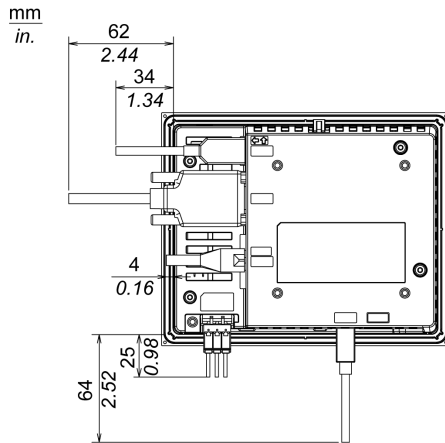


**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Dimensions with Cables: HMIGTO2310**

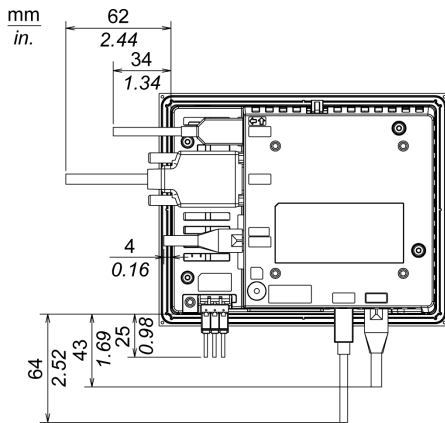

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.


**Dimensions with Cables: HMIGTO2315**

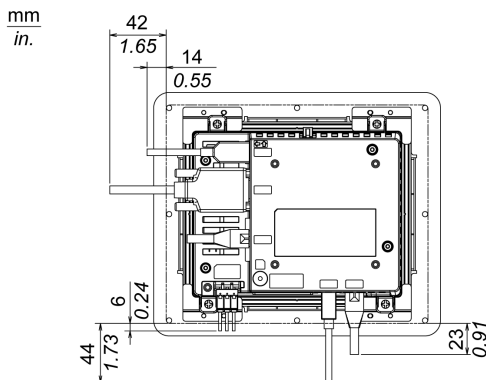

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

### Panel Cut Dimensions


Create a panel cut and insert the panel into the opening from the front.

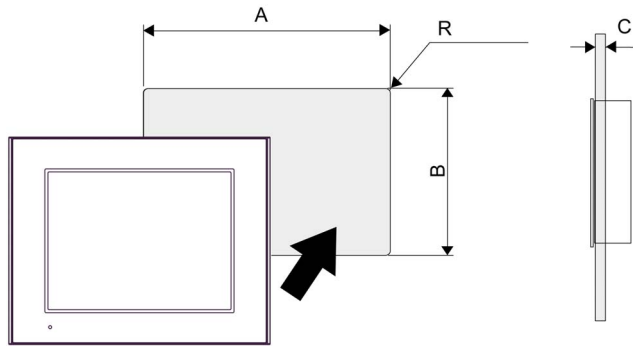

	A	B	C	R
HMIGTO2310	156 mm (+1/-0) mm (6.14 in (+0.04, -0 in))	123.5 mm (+1, -0 mm) (4.86 in (+0.04, -0 in))	1.6...5 mm (0.06...0.2 in)	3 mm (0.12 in) maximum
HMIGTO2315	195 mm (+1/-0) mm (7.68 in (+0.04, -0 in))	162.5 mm (+1/-0) mm (6.40 in (+0.04, -0 in))		

**NOTE:** Before designing the panel cut, refer to Installation.

### Installation Fastener Dimensions

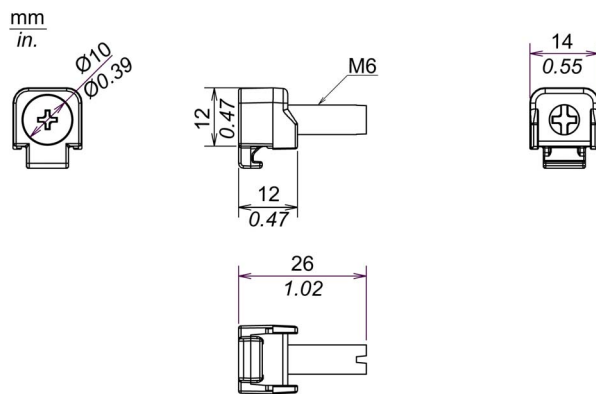

---

## Section 4.3

### HMIGTO3510/4310

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	65
Environmental Specifications	66
Structural Specifications	67
Display Specifications	68
Memory, Clock, Touch Panel, and Function Switches	69
Interface Specifications	70
Specifications of Serial Interface COM1	71
Specifications of Serial Interface COM2	73
Dimensions	74



## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc
	Input Voltage Limits	19.2...28.8 Vdc
	Voltage Drop	5 ms or less
	Power Consumption	12 W or less
	When power is not supplied to external devices	8 W or less
	Backlight OFF (Standby Mode)	5 W or less
	Backlight Dimmed (Brightness: 20%)	5.5 W or less
In-Rush Current	30 A or less	
Voltage Endurance	1,000 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance	500 Vdc, 10 MΩ or more (between charging and FG terminals)	

## Environmental Specifications

		HMIGTO4310	HMIGTO3510
Physical Environment	Surrounding Air Temperature	0...55 °C (32...131 °F)	0...50 °C (32...122 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)	
	Surrounding Air and Storage Humidity	10...90% RH (non-condensing, wet bulb temperature 39 °C (102.2 °F) or less)	
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)	
	Pollution Degree	For use in Pollution Degree 2 environment	
	Corrosive Gases	Free of corrosive gases	
	Atmospheric pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)	
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min)	
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times	
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 μs Rise Time: 1 ns	
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)	

### Air Quality Requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

### CAUTION

#### INOPERATIVE EQUIPMENT

Do not allow water, liquids, metal, and wiring fragments to enter the panel case.

**Failure to follow these instructions can result in injury or equipment damage.**

## Structural Specifications

Grounding	Functional grounding: Grounding resistance of 100 $\Omega$ , 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)
Cooling Method	Natural air circulation
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)
External Dimensions	W 218 x H 173 x D 60 mm (W 8.58 x H 6.81 x D 2.36 in)
Panel Cut Dimensions	W 204.5 x H 159.5 mm (W 8.05 x H 6.28 in) <sup>*2</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in) <sup>*3</sup>
Weight	1.2 kg (2.6 lb) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the HMIGTO, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the HMIGTO's level of resistance is equivalent to these standards, oils that should have no effect on the HMIGTO can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the panel's front face protection sheet peels off, these conditions can lead to the ingress of oil into the panel and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the HMIGTO, be sure to confirm the type of conditions that will be present in the panel's operating environment. If the installation gasket is used for a long period of time, or if the HMIGTO and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in) and R in angle are below R3 (R0.12 in)

<sup>\*3</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the panel and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**

### NOTICE

#### STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS

- Store this product in areas where temperatures are within the product's specifications.
- Do not restrict or block this product's ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

### NOTICE

#### GASKET AGING

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

	HMIGTO4310		HMIGTO3510
Display Type	TFT Color LCD		
Display Size	7.5"		7.0"
Resolution	640 x 480 pixels (VGA)		800 x 480 pixels (WVGA)
Effective Display Area	W 153.7 x H 115.8 mm (W 6.05 x H 4.56 in.)		W 152.4 x H 91.44 mm (W 6.0 x H 3.6 in.)
Display Colors	65,536 colors (no blink) / 16,384 colors (blink)		
Backlight	White LED (not user replaceable). When replacement is required, contact your local distributor.		
Backlight Service Life	50,000 hours or more (continuous operation at 25 °C (77 °F) before backlight brightness decreases to 50%)		
Brightness Control	16 levels (Adjusted with touch panel or software)		
Language Fonts	ASCII: (Code page 850) Alphanumeric (including European characters) Chinese: (GB2312-80 codes) Simplified Chinese fonts Japanese (except for XBT GT1000 series): ANK 158, Kanji: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) Korean: (KSC5601 - 1992 codes) Hangul fonts Taiwanese: (Big 5 codes) Traditional Chinese fonts		
Character Sizes	8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts		
Font Sizes	You can expand the width up to 8 times, and expand the height up to 8 times.*1		
Text	8 x 8 pixels	80 characters per row x 60 rows	100 characters per row x 60 rows
	8 x 16 pixels	80 characters per row x 30 rows	100 characters per row x 30 rows
	16 x 16 pixels	40 characters per row x 30 rows	50 characters per row x 30 rows
	32 x 32 pixels	20 characters per row x 15 rows	25 characters per row x 15 rows

\*1 You can set up other font sizes using the software.

## Memory, Clock, Touch Panel, and Function Switches

### Memory

	HMIGTO4310	HMIGTO3510
Application Memory *1	FLASH EPROM 96 MB	FLASH EPROM 96 MB
Application run DRAM	128 MB	128 MB
Data Backup	SRAM 512 KB (Replaceable lithium battery for data backup)	SRAM 128 KB (Replaceable lithium battery for data backup)

\*1 Capacity available for user application.

**NOTE:** When the message indicating that the battery level is low is displayed, replace the battery (*see page 136*).

### Clock

Clock Accuracy *1	±65 seconds/month (deviation at room temperature and power is OFF).
-------------------	---------------------------------------------------------------------

\*1 Depending on the operating temperature and age of panel, the clock can deviate from -380 to +90 sec/month. For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more

### Function Switches

HMIGTO3510: Eight switches (F1 to F8).

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9-pin (plug)

### Serial Interface COM2

Asynchronous Transmission	RS-485
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	Modular jack (RJ45)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

SD card slot x 1 (maximum 32 GB SD/SDHC card)

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

### ⚠ CAUTION

#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel or cabinet.
- Use only D-Sub 9-pin cables with a locking system in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### ⚡ ⚠ DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

HMIGTO3510 / HMIGTO4310: D-Sub 9-pin plug connector via a RS-232C cable.

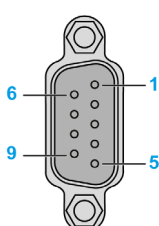Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input-	Called Status Display +5 V±5% Output 0.25 A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin number 9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

 **CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**



## Specifications of Serial Interface COM2

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### DANGER

#### ELECTRIC SHOCK

When using the SG terminal to connect an external device to the panel:


- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #8 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #8 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

HMIGTO3510 / HMIGTO4310: RJ45 connector via an RS-485 cable.

**NOTE:** When setting up RS-485 communication, the cable diagram for some equipment may require polarization on the terminal side. This terminal does not require any special setting as it handles polarization automatically.

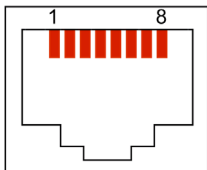Pin Connection	Pin No.	RS-485		
		Signal Name	Direction	Meaning
	1	NC	-	-
	2	NC	-	-
	3	NC	-	-
	4	Line A	Input/Output	Transfer Data (RS-485)
	5	Line B	Input/Output	Transfer Data (RS-485)
	6	RS(RTS)	Output	Request To Send
	7	NC	-	-
	8	SG	-	Signal Ground

### CAUTION


#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only RJ45 with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions: HMIGTO3510

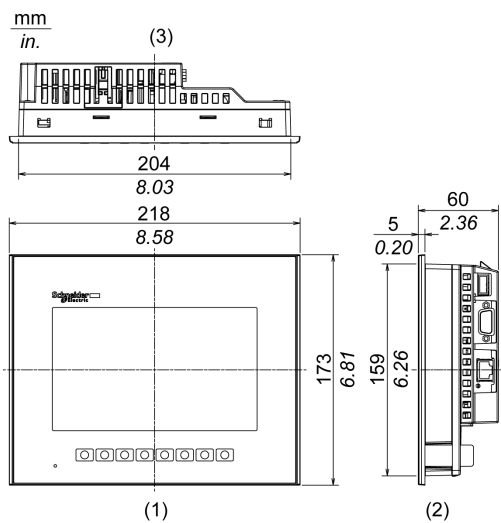


- 1 Front
- 2 Right side
- 3 Top

### External Dimensions: HMIGTO4310

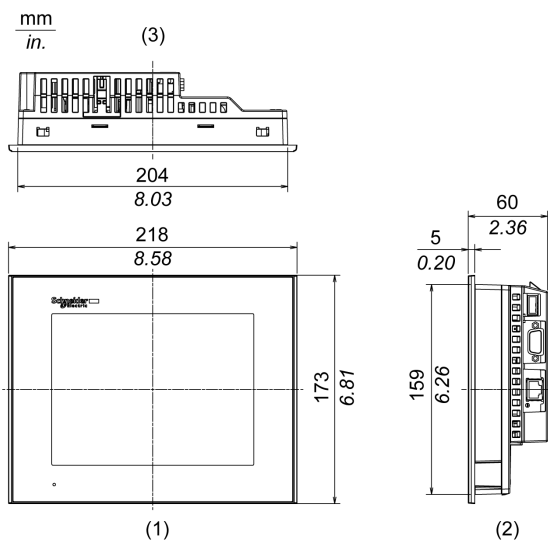


- 1 Front
- 2 Right side
- 3 Top

**Installation with Installation Fasteners: HMIGTO3510**

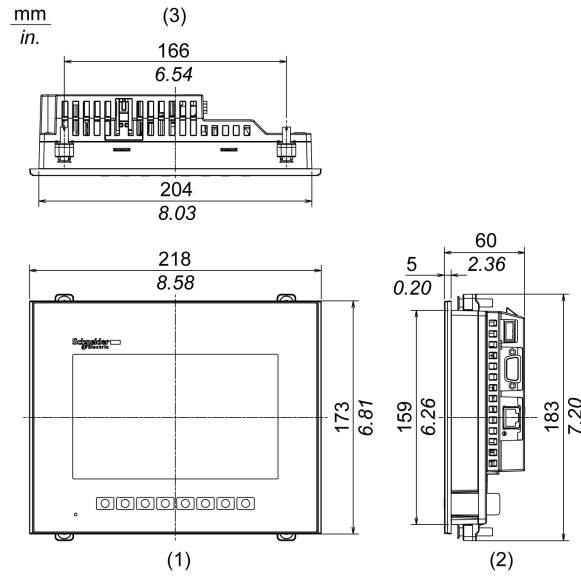


- 1 Front
- 2 Right side
- 3 Top

**Installation with Installation Fasteners: HMIGTO4310**

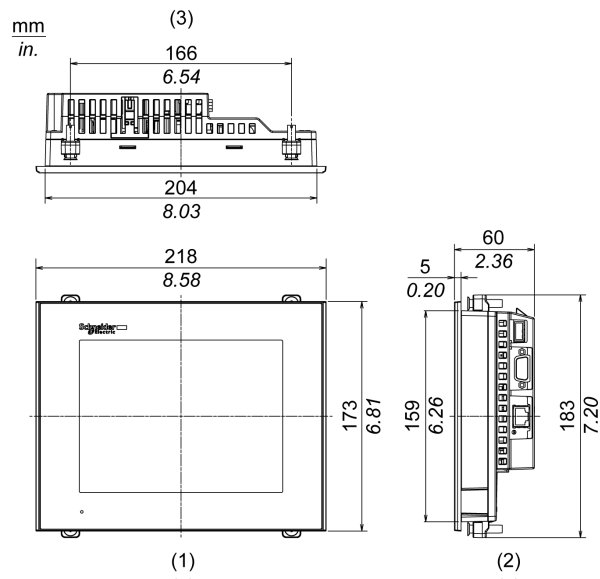


- 1 Front
- 2 Right side
- 3 Top

**Dimensions with Cables: HMIGTO3510**

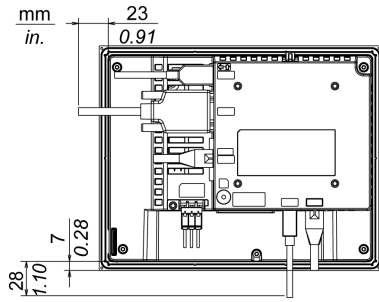

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.


**Dimensions with Cables: HMIGTO4310**

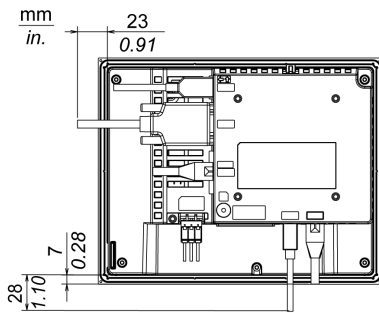

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Panel Cut Dimensions**


Create a panel cut and insert the panel into the opening from the front.

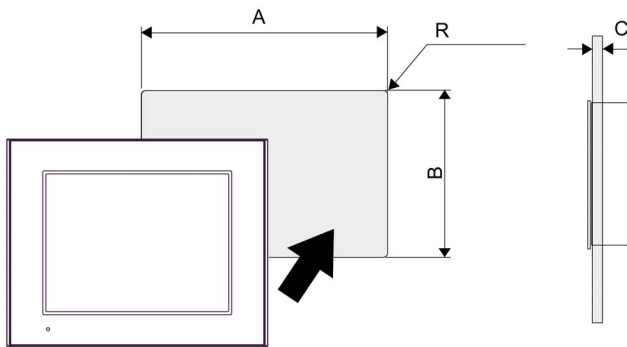

A	B	C	R
204.5 mm (+1, -0 mm) (8.05 in (+0.04, -0 in))	159.5 mm (+1, -0 mm) (6.28 in (+0.04, -0 in))	1.6...5 mm (0.06...0.2 in)	3 mm (0.12 in) maximum

**NOTE:** Before designing the panel cut, refer to Installation.

Installation Fastener Dimensions

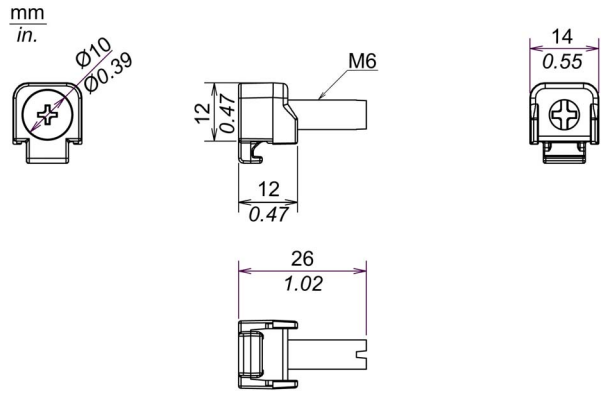

## Section 4.4

### HMIGTO5310/5315

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	79
Environmental Specifications	80
Structural Specifications	81
Display Specifications	83
Memory, Clock, and Touch Panel	84
Interface Specifications	85
Specifications of Serial Interface COM1	86
Specifications of Serial Interface COM2	88
Dimensions	89

## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc	
	Input Voltage Limits	19.2...28.8 Vdc	
	Voltage Drop	10 ms or less	
	Power Consumption	17 W or less	
		When power is not supplied to external devices	12 W or less
		Backlight OFF (Standby Mode)	7 W or less
		Backlight Dimmed (Brightness: 20%)	8 W or less
		In-Rush Current	30 A or less
Voltage Endurance		1500 Vac, 20 mA for 1 min. (between charging and FG terminals)	
Insulation Resistance		500 Vdc, 10 MΩ or more (between charging and FG terminals)	

## Environmental Specifications

Physical Environment	Surrounding Air Temperature	0...55 °C (32...131 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)
	Surrounding Air and Storage Humidity	10...90% RH (non-condensing, wet bulb temperature 39 °C (102.2 °F) or less)
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)
	Pollution Degree	For use in Pollution Degree 2 environment
	Corrosive Gases	Free of corrosive gases
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 min.)
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 µs Rise Time: 1 ns
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)

### Air Quality Requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

⚠ CAUTION
INOPERATIVE EQUIPMENT
Do not allow water, liquids, metal, and wiring fragments to enter the panel case.
<b>Failure to follow these instructions can result in injury or equipment damage.</b>



## Structural Specifications

	HMIGTO5310	HMIGTO5315
Grounding	Functional grounding: Grounding resistance of 100 $\Omega$ , 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)	
Cooling Method	Natural air circulation	
Structure <sup>*1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)	IP66k NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure) <sup>*2</sup>
External Dimensions	W 272.5 x H 214.5 x D 57 mm (W 10.73 x H 8.44 x D 2.24 in)	W 316.5 x H 258.5 x D 57 mm (W 12.44 x H 10.18 x D 2.24 in)
Panel Cut Dimensions	W 259 x H 201 mm (W 10.2 x H 7.91 in) <sup>*3</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in) <sup>*4</sup>	W 298 x H 240 mm (W 11.73 x H 9.45 in) <sup>*3</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in) <sup>*4</sup>
Weight	2.0 kg (4.4 lb) or less (main unit only)	2.5 kg (5.5 lb) or less (main unit only)

**NOTE:** <sup>\*1</sup> The front face of the HMIGTO, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the HMIGTO's level of resistance is equivalent to these standards, oils that should have no effect on the HMIGTO can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the panel's front face protection sheet peels off, these conditions can lead to the ingress of oil into the panel and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the HMIGTO, be sure to confirm the type of conditions that will be present in the panel's operating environment. If the installation gasket is used for a long period of time, or if the HMIGTO and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

<sup>\*2</sup> When installing the HMIGTO in a panel, you may not be able to mount the HMIGTO flush with the panel. This occurs due to the thickness of the gasket. The difference in level between the HMIGTO and panel depends on how much the gasket is compressed.

There is a conformal coating on circuit boards for HMIGTO5315.

### NOTICE

#### EQUIPMENT DAMAGE

For food and beverage and pharmaceutical industries, when the HMIGTO is not flush with panel, use silicon to form a seal to prevent water, chemicals, or food from lodging into place. Otherwise, the panel face could leak.

**Failure to follow these instructions can result in equipment damage.**

<sup>\*3</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in), and R in angle are below R3 (R0.12 in)

<sup>\*4</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the panel and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

### CAUTION

#### EQUIPMENT DAMAGE

Ensure that the panel is not in permanent and direct contact with oils.

**Failure to follow these instructions can result in injury or equipment damage.**

***NOTICE***

**STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store this product in areas where temperatures are within the product's specifications.
- Do not restrict or block this product's ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

***NOTICE***

**GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

## Display Specifications

Display Type	TFT Color LCD	
Display Size	10.4"	
Resolution	640 x 480 pixels (VGA)	
Effective Display Area	W 211.2 x H 158.4 mm (8.31 x 6.24 in.)	
Display Colors	65,536 colors (no blink) / 16,384 colors (blink)	
Backlight	White LED (not user replaceable). When replacement is required, contract your local distributor.	
Backlight Service Life	50,000 hours or more (continuous operation at 25 °C (77 °F) before backlight brightness dimmed to 50%)	
Brightness Control	16 levels (Adjusted with the touch panel or software)	
Language Fonts	ASCII: (Code page 850) Alphanumeric (including European characters) Chinese: (GB2312-80 codes) Simplified Chinese fonts Japanese: ANK 158, Kanji: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) Korean: (KSC5601 - 1992 codes) Hangul fonts Taiwanese: (Big 5 codes) Traditional Chinese fonts	
Character Sizes	8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts	
Font Sizes	You can expand the width up to 8 times, and expand the height up to 8 times. *1	
Text	8 x 8 pixels	80 characters per row x 60 rows
	8 x 16 pixels	80 characters per row x 30 rows
	16 x 16 pixels	40 characters per row x 30 rows
	32 x 32 pixels	20 characters per row x 15 rows

\*1 You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

Application Memory *1	FLASH EPROM 96 MB
Data Backup	SRAM 512 KB (Replaceable lithium battery for data backup)

\*1 Capacity available for user application.

**NOTE:** When the message indicating that the battery level is low is displayed, replace the battery (*see page 136*).

### Clock

Clock Accuracy *1	±65 seconds/month (deviation at room temperature and power is OFF).
-------------------	---------------------------------------------------------------------

\*1 Depending on the operating temperature and age of panel, the clock can deviate from -380 to +90 sec/month. For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Service Life	1 million times or more

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9-pin (plug)

### Serial Interface COM2

Asynchronous Transmission	RS-485
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	Modular jack (RJ45)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc $\pm$ 5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

SD card slot x 1 (maximum 32 GB SD/SDHC card)

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.


<b>⚠ CAUTION</b>
<p><b>LOSS OF COMMUNICATION</b></p> <ul style="list-style-type: none"> <li>● All connections to the communication ports must not put excessive stress on the ports.</li> <li>● Securely attach communication cables to the panel or cabinet.</li> <li>● Use only D-Sub 9-pin cables with a locking system in good condition.</li> </ul> <p><b>Failure to follow these instructions can result in injury or equipment damage.</b></p>

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

<b>⚠ ⚠ DANGER</b>
<p><b>ELECTRIC SHOCK</b></p> <p>When using the SG terminal to connect an external device to the panel:</p> <ul style="list-style-type: none"> <li>● Verify that a short-circuit loop is not created when you set up the system.</li> <li>● Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>

### Serial Interface COM1

**HMIGTO5310 / HMIGTO5315:** D-Sub 9-pin plug connector via a RS-232C cable.

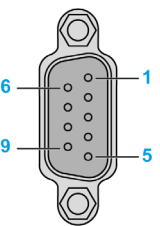Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input-	Called Status Display +5 V±5% Output 0.25 A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin number 9 between RI and VCC via software.

<b>NOTICE</b>
<p><b>EQUIPMENT DAMAGE</b></p> <p>Use only the rated current.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>

**⚠ CAUTION****LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

## Specifications of Serial Interface COM2

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

**⚡ ⚠ DANGER**

**ELECTRIC SHOCK**

When using the SG terminal to connect an external device to the panel:


- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #8 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #8 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

**HMIGTO5310 / HMIGTO5315:** RJ45 connector via an RS-485 cable.

**NOTE:** When setting up RS-485 communication, the cable diagram for some equipment may require polarization on the terminal side. This terminal does not require any special setting as it handles polarization automatically.

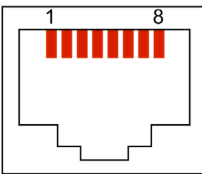Pin Connection	Pin No.	RS-485		
		Signal Name	Direction	Meaning
	1	NC	-	-
	2	NC	-	-
	3	NC	-	-
	4	Line A	Input/Output	Transfer Data (RS-485)
	5	Line B	Input/Output	Transfer Data (RS-485)
	6	RS(RTS)	Output	Request To Send
	7	NC	-	-
	8	SG	-	Signal Ground

**⚠ CAUTION**

**LOSS OF COMMUNICATION**


- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only RJ45 with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**




## Dimensions

### External Dimensions: HMIGTO5310

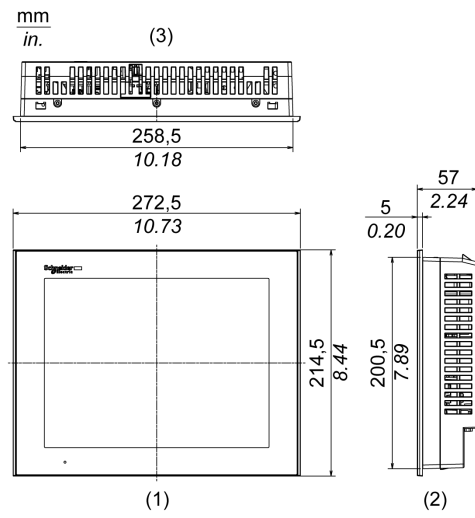


- 1 Front
- 2 Right side
- 3 Top

### External Dimensions: HMIGTO5315

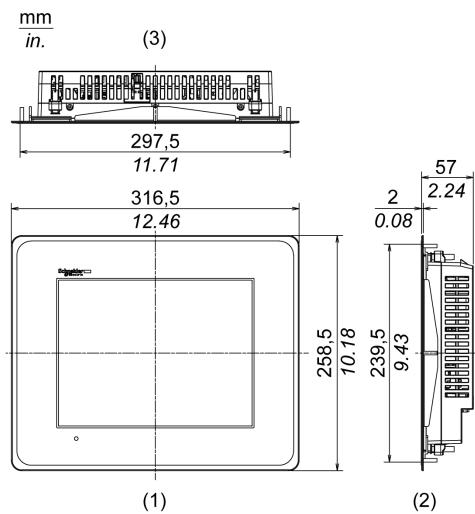


- 1 Front
- 2 Right side
- 3 Top

**Installation with Installation Fasteners: HMIGTO5310**

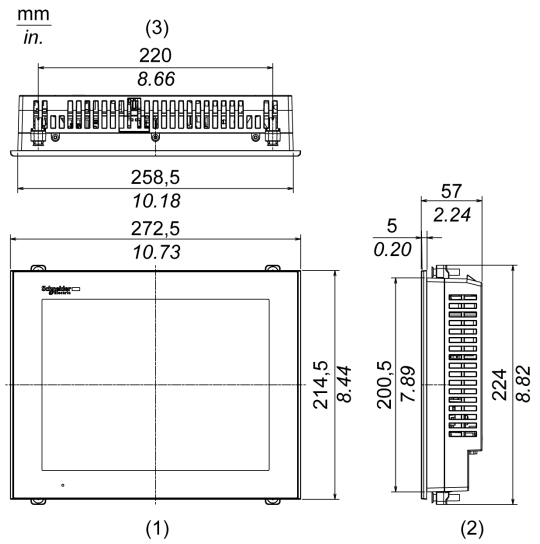


- 1 Front
- 2 Right side
- 3 Top

**Installation with Installation Fasteners: HMIGTO5315**

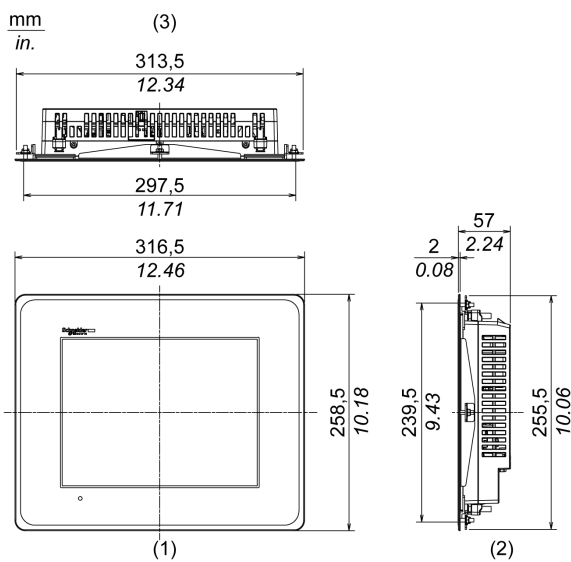


- 1 Front
- 2 Right side
- 3 Top

**Dimensions with Cables: HMIGTO5310**

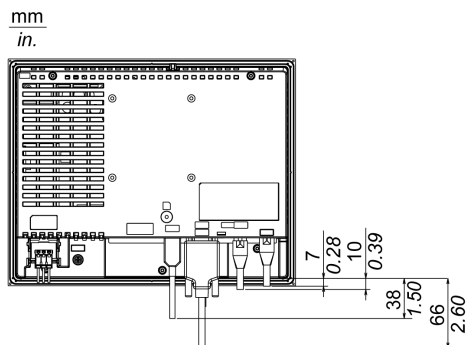

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.


**Dimensions with Cables: HMIGTO5315**

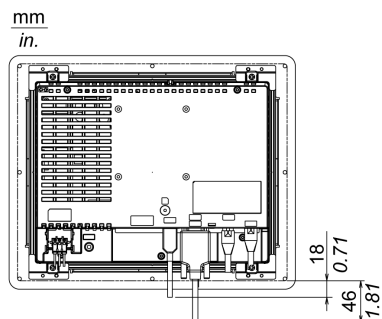

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Panel Cut Dimensions**


Create a panel cut and insert the panel into the opening from the front.

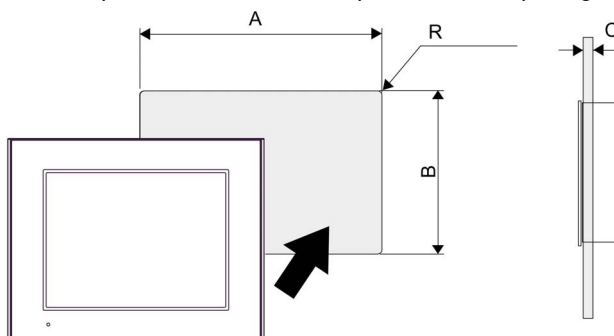

	A	B	C	R
HMIGTO5310	259 mm (+1, -0 mm) (10.2 in (+0.04, -0 in))	201 mm (+1, -0 mm) (7.91 in (+0.04, -0 in))	1.6...5 mm (0.06...0.2 in)	3 mm (0.12 in) maximum
HMIGTO5315	298 mm (+1, -0 mm) (11.73 in (+0.04, -0 in))	240 mm (+1, -0 mm) (9.45 in (+0.04, -0 in))		

**NOTE:** Before designing the panel cut, refer to Installation.

### Installation Fastener Dimensions

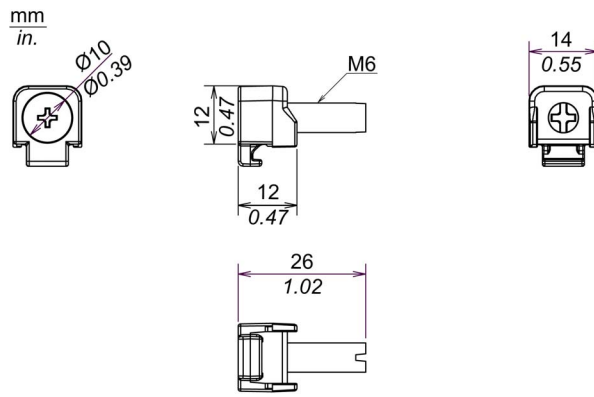

---

## Section 4.5

### HMIGTO6310/6315

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Electrical Specifications	94
Environmental Specifications	95
Structural Specifications	96
Display Specifications	98
Memory, Clock, and Touch Panel	99
Interface Specifications	100
Specifications of Serial Interface COM1	101
Specifications of Serial Interface COM2	103
Dimensions	104

## Electrical Specifications

Power Supply	Rated Input Voltage	24 Vdc	
	Input Voltage Limits	19.2...28.8 Vdc	
	Voltage Drop	10 ms or less	
	Power Consumption	17 W or less	
		When power is not supplied to external devices	12 W or less
		Backlight OFF (Standby Mode)	7 W or less
		Backlight Dimmed (Brightness: 20%)	8 W or less
		In-Rush Current	30 A or less
Voltage Endurance		1,500 Vac, 20 mA for 1 minute (between charging and FG terminals)	
Insulation Resistance		500 Vdc, 10 MΩ or more (between charging and FG terminals)	

## Environmental Specifications

Physical Environment	Surrounding Air Temperature	0...55 °C (32...131 °F)
	Storage Temperature	-20...60 °C (-4...140 °F)
	Surrounding Air and Storage Humidity	10...90% RH (non-condensing, wet bulb temperature 39 °C (102.2 °F) or less)
	Dust	0.1 mg/m <sup>3</sup> (10 <sup>-7</sup> oz/ft <sup>3</sup> ) or less (non-conductive levels)
	Pollution Degree	For use in Pollution Degree 2 environment
	Corrosive Gases	Free of corrosive gases
	Atmospheric Pressure (Operating Altitude)	800...1,114 hPa (2,000 m [6,561 ft] or lower)
Mechanical Environment	Vibration Resistance	IEC/EN 61131-2 compliant 5...9 Hz Single amplitude 3.5 mm (0.14 in.) 9...150 Hz Fixed acceleration: 9.8 m/s <sup>2</sup> X, Y, Z directions for 10 cycles (approx. 100 minute)
	Concussion Resistance	IEC/EN 61131-2 compliant 147 m/s <sup>2</sup> , X, Y, Z directions for 3 times
Electrical Environment	Noise Immunity	Noise Voltage: 1,000 Vp-p Pulse Width: 1 µs Rise Time: 1 ns
	Electrostatic Discharge Immunity	Contact Discharge Method: 6 kV (IEC/EN 61000-4-2 Level 3)

### Air Quality Requirements

Do not operate or store the panel where chemicals evaporate, or where chemicals are present in the air:

- Corrosive chemicals: Acids, alkalines, liquids containing salt.
- Flammable chemicals: Organic solvents.

### CAUTION

#### INOPERATIVE EQUIPMENT

Do not allow water, liquids, metal, and wiring fragments to enter the panel case.

**Failure to follow these instructions can result in injury or equipment damage.**

**Structural Specifications**

	<b>HMIGTO6310</b>	<b>HMIGTO6315</b>
Grounding	Functional grounding: Grounding resistance of 100 Ω, 2 mm <sup>2</sup> (AWG 14) or thicker wire, or your country's applicable standard. (Same for FG and SG terminals)	
Cooling Method	Natural air circulation	
Structure * <sup>1</sup>	IP65f NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)	IP66k NEMA #250 TYPE 4X/13 (on the front panel when properly installed in an enclosure)* <sup>2</sup>
External Dimensions	W 315 x H 241 x D 56 mm (W 12.4 x H 9.49 x D 2.2 in)	W 359 x H 285 x D 56 mm (W 14.13 x H 11.22 x D 2.2 in)
Panel Cut Dimensions	W 301.5 x H 227.5 mm (W 11.87 x H 8.96 in)* <sup>3</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in)* <sup>4</sup>	W 340.5 x H 266.5 mm (W 13.41 x H 10.49 in)* <sup>3</sup> Panel thickness area: 1.6...5 mm (0.06...0.2 in)* <sup>4</sup>
Weight	2.5 kg (5.5 lb) or less (main unit only)	3 kg (6.6 lb) or less (main unit only)

**NOTE:** \*<sup>1</sup> The front face of the HMIGTO, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the HMIGTO's level of resistance is equivalent to these standards, oils that should have no effect on the HMIGTO can possibly harm the panel. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the panel for long periods of time. If the panel's front face protection sheet peels off, these conditions can lead to the ingress of oil into the panel and separate protection measures are suggested.

Also, if non-approved oils are present, they may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the HMIGTO, be sure to confirm the type of conditions that will be present in the panel's operating environment. If the installation gasket is used for a long period of time, or if the HMIGTO and its gasket are removed from the panel, the original level of protection cannot be kept. To maintain the original protection level, be sure to replace the installation gasket regularly.

\*<sup>2</sup> When installing the HMIGTO in a panel, you may not be able to mount the HMIGTO flush with the panel. This occurs due to the thickness of the gasket. The difference in level between the HMIGTO and panel depends on how much the gasket is compressed.

There is a conformal coating on circuit boards for HMIGTO6315.

<i>NOTICE</i>
<b>EQUIPMENT DAMAGE</b>
For food and beverage and pharmaceutical industries, when the HMIGTO is not flush with panel, use silicon to form a seal to prevent water, chemicals, or food from lodging into place. Otherwise, the panel face could leak.
<b>Failure to follow these instructions can result in equipment damage.</b>

\*<sup>3</sup> For dimensional tolerance, everything +1/-0 mm (+0.04/-0 in), and R in angle are below R3 (R0.12 in)

\*<sup>4</sup> Even if the installation wall thickness is within the recommended range for the "Panel Cut Dimensions", depending on wall's material, size, and installation location of the panel and other devices, the installation wall could warp. To prevent warping, the installation surface may need to be strengthened.

 <b>CAUTION</b>
<b>EQUIPMENT DAMAGE</b>
Ensure that the panel is not in permanent and direct contact with oils.
<b>Failure to follow these instructions can result in injury or equipment damage.</b>



***NOTICE*****STORAGE AND OPERATION OUTSIDE OF SPECIFICATIONS**

- Store this product in areas where temperatures are within the product's specifications.
- Do not restrict or block this product's ventilation slots.

**Failure to follow these instructions can result in equipment damage.**

***NOTICE*****GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

**Display Specifications**

Display Type	TFT Color LCD	
Display Size	12.1"	
Resolution	800 x 600 pixels (SVGA)	
Effective Display Area	W 246.0 x H 184.5 mm (W 9.69 x H 7.26 in.)	
Display Colors	65,536 colors (no blink) / 16,384 colors (blink)	
Backlight	White LED (not user replaceable). When replacement is required, contact your local distributor.	
Backlight Service Life	50,000 hours (continuous operation at 25 °C (77 °F) before backlight brightness decreases to 50%)	
Brightness Control	16 levels (Adjusted with touch panel or software)	
Language Fonts	ASCII: (Code page 850) Alphanumeric (including European characters) Chinese: (GB2312-80 codes) Simplified Chinese fonts Japanese: ANK 158, Kanji: 6,962 (JIS Standards 1 & 2) (including 607 non-kanji characters) Korean: (KSC5601 - 1992 codes) Hangul fonts Taiwanese: (Big 5 codes) Traditional Chinese fonts	
Character Sizes	8 x 8, 8 x 16, 16 x 16 and 32 x 32 pixel fonts	
Text	8 x 8 pixels	100 characters per row x 75 rows
	8 x 16 pixels	100 characters per row x 37 rows
	16 x 16 pixels	50 characters per row x 37 rows
	32 x 32 pixels	25 characters per row x 18 rows

\*1 You can set up other font sizes using the software.

## Memory, Clock, and Touch Panel

### Memory

Application Memory *1	FLASH EPROM96 MB
Application run DRAM	128 MB
Data Backup	SRAM 512 KB (Replaceable lithium battery for backup memory)

\*1 Capacity available for user application.

**NOTE:** When the message indicating that the battery level is low is displayed, replace the battery (*see page 136*).

### Clock

Clock Accuracy *1	±65 seconds/month (deviation at room temperature and power is OFF).
-------------------	---------------------------------------------------------------------

\*1 Depending on the operating temperature and age of the panel, the clock can deviate from -380 to +90 sec/month. For systems where this level of precision is insufficient, the user should monitor and make adjustments when required.

### Touch Panel

Touch Panel Type	Resistive Film (analog)
Touch Panel Resolution	1,024 x 1,024
Touch Panel Service Life	1 million times or more

## Interface Specifications

### Serial Interface COM1

Asynchronous Transmission	RS-232C
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps
Connector	D-Sub 9-pin (plug)

### Serial Interface COM2

Asynchronous Transmission	RS-485
Data Length	7 bits or 8 bits
Stop Bit	1 bit or 2 bits
Parity	None, odd or even
Data Transmission Speed	2,400...115,200 bps, 187,500 bps (MPI)
Connector	Modular jack (RJ45)

### USB Interface

	USB (Type A) Interface	USB (mini-B) Interface
Connector	USB 2.0 (Type A) x 1	USB 2.0 (mini-B) x 1
Power Supply Voltage	5 Vdc ±5%	-
Maximum Current Supplied	500 mA	-
Maximum Transmission Distance	5 m (16.4 ft)	

### Ethernet Interface

Ethernet (LAN)	IEEE802.3i / IEEE802.3u, 10BASE-T/100BASE-TX
Connector	Modular jack (RJ45) x 1

### SD Card Interface

SD card slot x 1 (maximum 32 GB SD/SDHC card)

## Specifications of Serial Interface COM1

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

### ⚠ CAUTION

#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel or cabinet.
- Use only D-Sub 9-pin cables with a locking system in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### ⚡ ⚠ DANGER

#### ELECTRIC SHOCK


When using the SG terminal to connect an external device to the panel:

- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #5 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #5 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM1

**HMIGTO6310 / HMIGTO6315:** D-Sub 9-pin plug connector via a RS-232C cable.

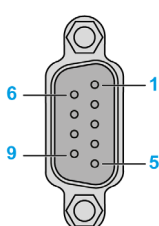Pin Connection	Pin No.	RS-232C		
		Signal Name	Direction	Meaning
	1	CD	Input	Carrier Detect
	2	RD(RXD)	Input	Receive Data
	3	SD(TXD)	Output	Send Data
	4	ER(DTR)	Output	Data Terminal Ready
	5	SG	-	Signal Ground
	6	DR(DSR)	Input	Data Set Ready
	7	RS(RTS)	Output	Request to Send
	8	CS(CTS)	Input	Send possible
	9	CI(RI)/VCC	Input-	Called Status Display +5 V±5% Output 0.25 A <sup>*1</sup>
	Shell	FG	-	Frame Ground (Common with SG)

**NOTE:** <sup>\*1</sup> You can switch pin number 9 between RI and VCC via software.

### NOTICE

#### EQUIPMENT DAMAGE

Use only the rated current.

**Failure to follow these instructions can result in equipment damage.**

 **CAUTION**

**LOSS OF COMMUNICATION**

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only D-Sub 9 pin cables with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**

## Specifications of Serial Interface COM2

### Introduction

**NOTE:** For information on how to connect controllers and other types of equipment, refer to the corresponding device driver manual of your screen editing software.

The serial port is not isolated. The SG (signal ground) and FG (frame ground) terminals are connected inside the panel.

### DANGER

#### ELECTRIC SHOCK

When using the SG terminal to connect an external device to the panel:


- Verify that a short-circuit loop is not created when you set up the system.
- Connect the #8 SG terminal to remote equipment when the host (PLC) unit is not isolated. Connect the #8 SG terminal to a known reliable ground connection to reduce the risk of damaging the circuit.

**Failure to follow these instructions will result in death or serious injury.**

### Serial Interface COM2

**HMIGTO6310 / HMIGTO6315:** RJ45 connector via a RS-485 cable.

**NOTE:** When setting up RS-485 communication, the cable diagram for some equipment may require polarization on the terminal side. This terminal does not require any special setting as it handles polarization automatically.

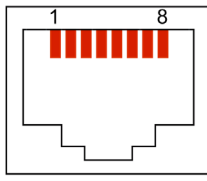Pin Connection	Pin No.	RS-485		
		Signal Name	Direction	Meaning
	1	NC	-	-
	2	NC	-	-
	3	NC	-	-
	4	Line A	Input/Output	Transfer Data (RS-485)
	5	Line B	Input/Output	Transfer Data (RS-485)
	6	RS(RTS)	Output	Request To Send
	7	NC	-	-
	8	SG	-	Signal Ground

### CAUTION


#### LOSS OF COMMUNICATION

- All connections to the communication ports must not put excessive stress on the ports.
- Securely attach communication cables to the panel wall or cabinet.
- Use only RJ45 with a locking tab in good condition.

**Failure to follow these instructions can result in injury or equipment damage.**


## Dimensions

### External Dimensions: HMIGTO6310

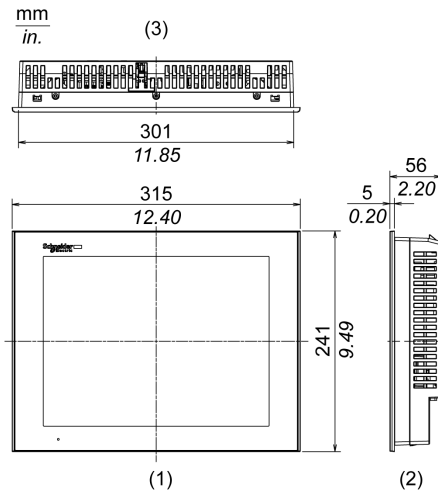

- 1 Front
- 2 Right side
- 3 Top


### External Dimensions: HMIGTO6315

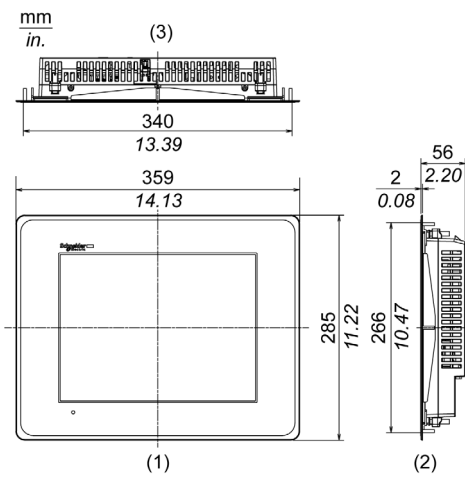

- 1 Front
- 2 Right side
- 3 Top




Installation with Installation Fasteners: HMIGTO6310

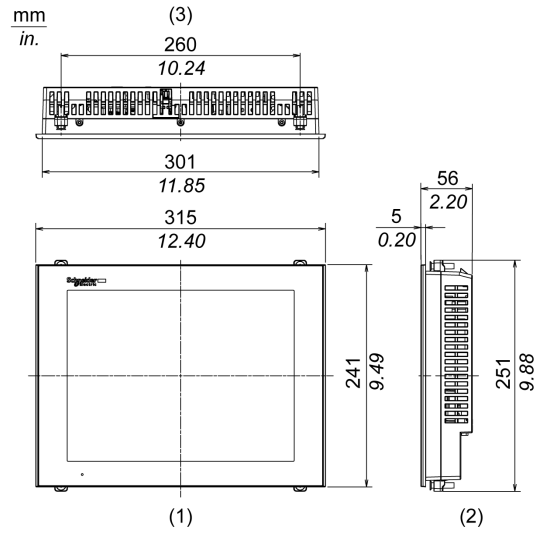


- 1 Front
- 2 Right side
- 3 Top

Installation with Installation Fasteners: HMIGTO6315

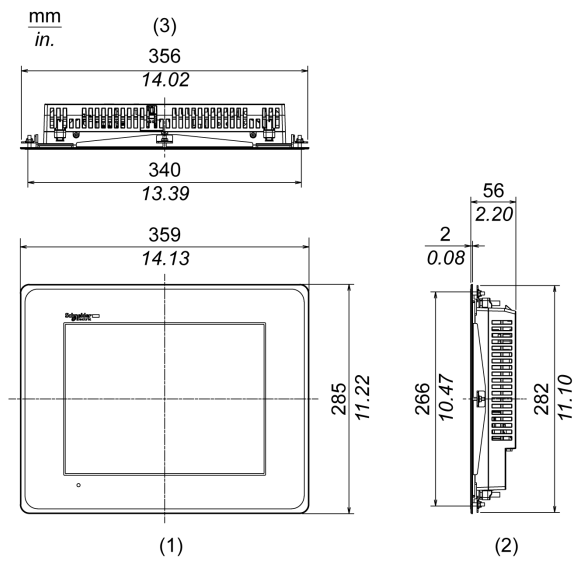


- 1 Front
- 2 Right side
- 3 Top

**Dimensions with Cables: HMIGTO6310**

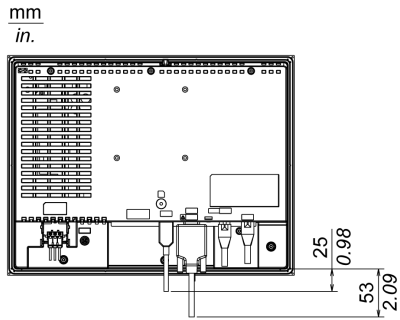

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.


**Dimensions with Cables: HMIGTO6315**

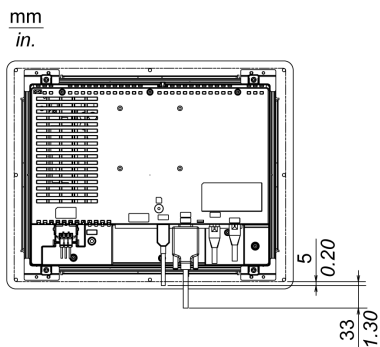

**NOTE:** All the above values are designed with cable bending in mind. The dimensions given here are representative values depending on the type of connection cable in use. Therefore, these values are intended for reference only.

**Panel Cut Dimensions**


Create a panel cut and insert the panel into the opening from the front.

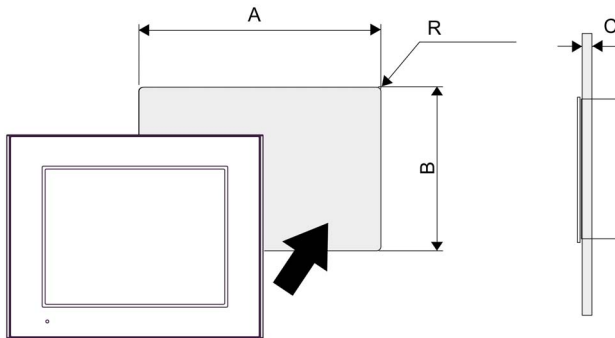

	A	B	C	R
HMIGTO6310	301.5 mm (+1, -0 mm) (11.87 in (+0.04, -0 in))	227.5 mm (+1, -0 mm) (8.96 in (+0.04, -0 in))	1.6...5 mm (0.06...0.2 in)	3 mm (0.12 in) maximum
HMIGTO6315	340.5 mm (+1, -0 mm) (13.41 in (+0.04, -0 in))	266.5 mm (+1, -0 mm) (10.49 in (+0.04, -0 in))		

**NOTE:** Before designing the panel cut, refer to Installation.

## Installation Fastener Dimensions

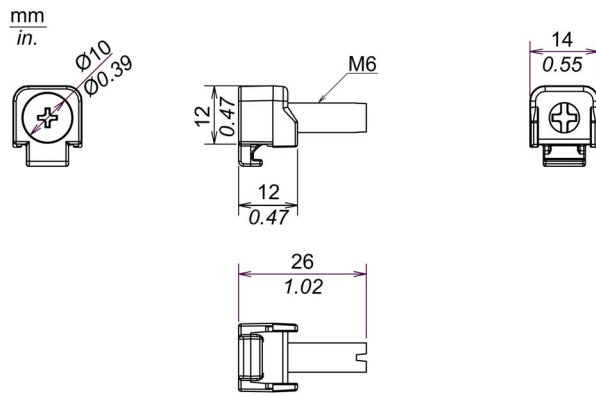



---

# Chapter 5

## Installation and Wiring

---

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
5.1	Installation	110
5.2	Wiring Principles	115
5.3	SD Card Insertion/Removal	121
5.4	USB Cable Clamp	126

# Section 5.1

## Installation

### Installation Procedures



#### Introduction

The installation fasteners are required when installing the panel.


Mount the panel in an enclosure that provides a clean, dry, robust, and controlled environment:

- HMIGTO (except HMIGTO2315 / HMIGTO5315 / HMIGTO6315): IP65, Type 1, Type 4X [Indoor Use Only] or Type 13 enclosure.
- HMIGTO2315 / HMIGTO5315 / HMIGTO6315: IP66k, Type 1, Type 4X [Indoor Use Only] or Type 13 enclosure.

#### Installation Requirements

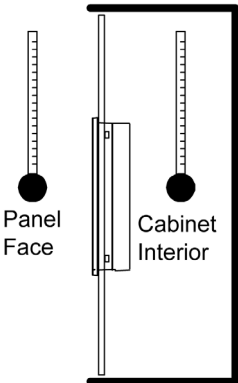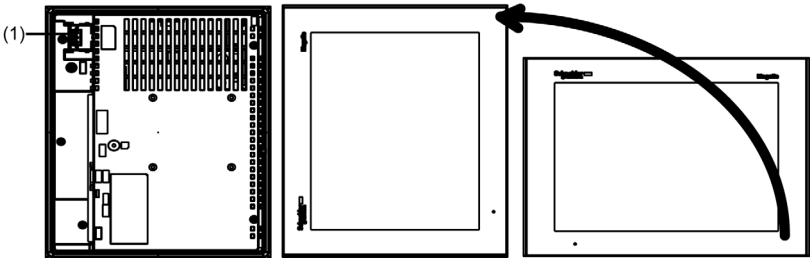
<p>Check that the installation wall or cabinet's surface is flat, in good condition and has no jagged edges. Metal reinforcing strips may be attached to the inside of the wall, near the panel-cut, to increase its rigidity.</p>
<p>Decide on the thickness of the enclosure wall, based on the level of strength required: 1.6...5 mm (0.06...0.2 in.).</p>
<p>Be sure that the surrounding air temperature and the ambient humidity are within their designated ranges. Surrounding air temperature: 0...50 °C (32...122 °F) or 0...55 °C (32...131 °F) (see the Environment Specifications for your HMIGTO); ambient humidity: 10...90% RH; wet bulb temperature: maximum 39 °C [102 °F]. When installing the panel in a cabinet or enclosure, the surrounding air temperature is the cabinet's or enclosure's internal temperature.</p>

<p>Be sure that heat from surrounding equipment does not cause the panel to exceed its standard operating temperature.</p>
<p>When mounting the panel vertically, ensure that the right side of the unit faces up. In other words, the power connector should be at the top.</p>
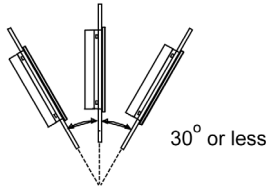
<p>1 Power connector</p>

When installing the panel in a slanted position, the panel face should not incline more than 30°.

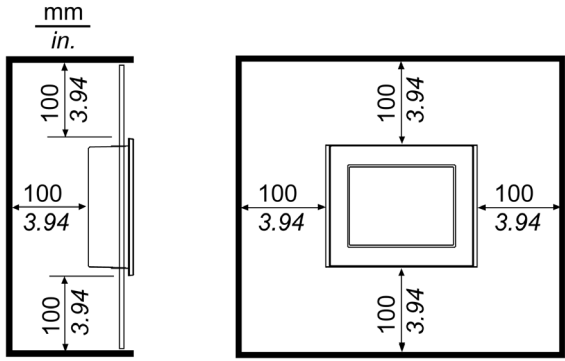

When installing the panel in a slanted position with an incline more than 30°, the ambient temperature must not exceed 40 °C (104 °F). You may need to use forced air cooling (fan, A/C) to ensure that the ambient operating temperature is 40 °C or less (104 °F or less).

For easier maintenance, operation and improved ventilation, install the panel at least 100 mm (3.94 in.) away from adjacent structures and other equipment as shown in the following illustration:



The holes on the rear of the panel (except HMIGTO1300/1310) do not correspond to VESA 75 mm standards. Do not attach the panel to a commercial-type VESA arm.

**Panel Mounting Procedure: : (Except HMIGTO2315/HMIGTO5315/HMIGTO6315)**






***NOTICE***

**PANEL UNSTEADY WHEN UNSECURED**

Keep HMIGTO stabilized in the panel-cut while you are installing or removing the screw fasteners.

**Failure to follow these instructions can result in equipment damage.**

Step	Action
1	Place the panel on a clean and level surface with the display facing downward.
2	Check that the panel's gasket is seated securely into the gasket's groove, which runs around the perimeter of the panel frame.
3	Cut a hole in the installation panel as defined by the HMIGTO's panel cutout dimensions. HMIGTO1300/HMIGTO1310 (see page 48) HMIGTO2300/HMIGTO2310 (see page 63) HMIGTO3510/HMIGTO4310 (see page 76) HMIGTO5310 (see page 91) HMIGTO6310 (see page 106)
4	Insert the HMIGTO into the panel-cut.

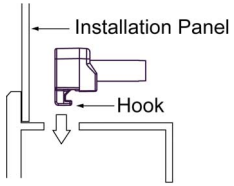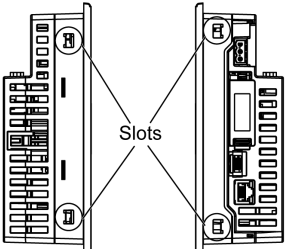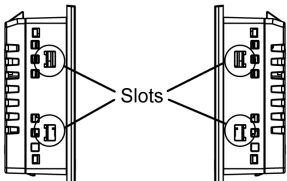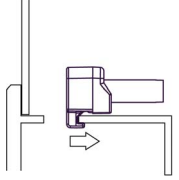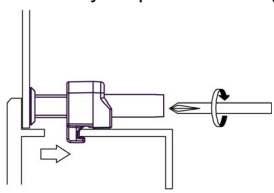Step	Action
5	<p>Insert the installation fasteners into the HMIGTO's insertion slots on the top and bottom sides (left and right sides for the HMIGTO1300/1310). Slide the fasteners to the back. If the fasteners are not correctly attached, the HMIGTO may shift or fall out.</p>  <p>HMIGTO2310</p>  <p>HMIGTO1310</p> 
6	<p>Insert each of the fasteners shown below. Make sure that you pull the fastener back until it is flush with the rear of the attachment hole insert.</p> 
7	<p>Use a Phillips screwdriver to tighten each fastener screw and secure the panel in place. The necessary torque is 0.5 Nm (4.4 lb•in).</p> 

***NOTICE***


**BROKEN ENCLOSURE**

- Do not exert more than 0.5 Nm (4.4 lb•in) of torque when tightening the fastener's screws.
- Use on flat surface of a Type 1, Type 4X (Indoor Use Only) or Type 13 Enclosure.

**Failure to follow these instructions can result in equipment damage.**



**Removal Procedure: (Except HMIGTO2315/HMIGTO5315/HMIGTO6315)**

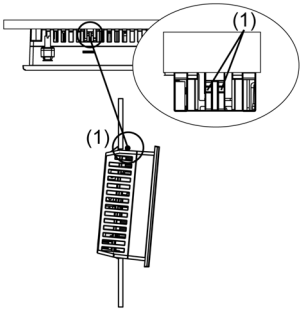Step	Action
1	Loosen the installation fasteners (4) from the HMIGTO.
2	Remove the HMIGTO slowly from the panel while pressing the projections on the top of the HMIGTO.  <p>1 Projections</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>You could damage the HMIGTO if you try to remove it without holding down the projections.</li> <li>Watch your fingers so they do not get caught when holding down the projections.</li> </ul>

**⚠ CAUTION****RISK OF INJURY**

Do not drop the HMIGTO when you remove it from the panel.

- Hold the HMIGTO in place after removing the fasteners.
- Use both hands.

**Failure to follow these instructions can result in injury or equipment damage.**

**HMIGTO2315/HMIGTO5315/HMIGTO6315 Panel Mounting Procedure****⚠ CAUTION****RISK OF INJURY**

Do not drop the HMIGTO when you install or remove it from the panel.

- Hold the HMIGTO in place after removing the M4 Hex nuts and brackets.
- Use both hands.



**Failure to follow these instructions can result in injury or equipment damage.**

**NOTICE****PANEL UNSTEADY WHEN UNSECURED**

Keep panel stabilized in the panel-cut while you are installing or removing the M4 Hex nuts and brackets.

**Failure to follow these instructions can result in equipment damage.**

Step	Action
1	Place the panel on a clean and level surface with the display facing downward.
2	Confirm that the panel's gasket is seated properly on the rear of the panel.
3	Cut a hole in the panel as defined by the HMIGTO panel cutout dimensions. HMIGTO2315 ( <i>see page 63</i> ) HMIGTO5315 ( <i>see page 91</i> ) HMIGTO6315 ( <i>see page 106</i> )

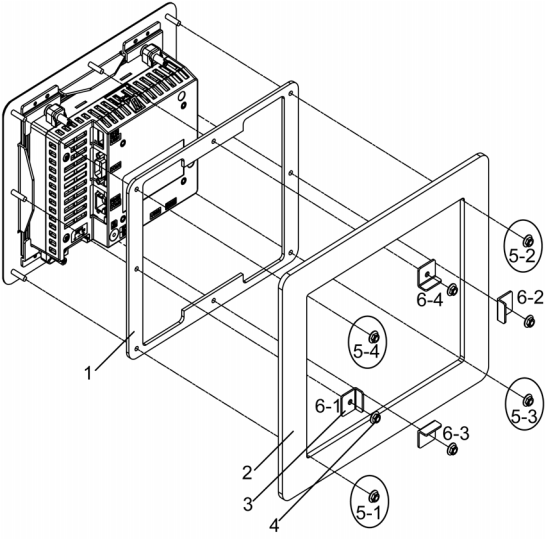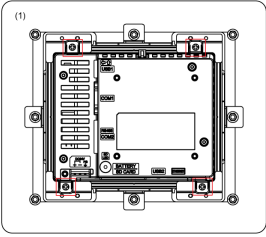Step	Action
4	<p>Insert the HMIGTO into the panel-cut.</p>  <p>1 Gasket                  2 Panel                  3 Brackets                  4 M4 hex nut                  5 Read step 5.                  6 Read step 6.</p>
5	<p>Tighten the four corners of the rear of the panel with the M4 Hex nuts, in the order shown in the example in Step 4.                  Use an M4 box-type screwdriver to tighten each M4 Hex nut and secure the panel in place. The necessary torque is 0.5 Nm (4.4 lb•in). If the M4 Hex nuts are not correctly attached, the panel may shift or fall out.</p>
6	<p>Attach the bracket onto the screws in the middle between the M4 Hex nuts in the order shown in the example in Step 4.                  Use an M4 box-type screwdriver to tighten each M4 Hex nut and secure the panel in place. The necessary torque is 0.5 Nm (4.4 lb•in). If the M4 Hex nuts are not correctly attached, the panel may shift or fall out.</p>
7	<p>Tighten all the M4 Hex nuts again. The necessary torque is 0.5 Nm (4.4 lb•in).  <b>NOTE:</b> Do not loosen the installation fasteners, marked with red squares below.</p>  <p>1 Panel</p>

***NOTICE***

**BROKEN ENCLOSURE**

- Do not exert more than 0.5 Nm (4.4 lb•in) of torque when tightening the M4 Hex nuts.
- Use on flat surface of a Type 1, Type 4X (Indoor Use Only) or Type 13 Enclosure.

**Failure to follow these instructions can result in equipment damage.**

---

## Section 5.2

### Wiring Principles

---

#### Overview

This section presents the HMIGTO wiring principles.

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Connecting the Power Cord	116
Connecting the Power Supply	118
Grounding	120

## Connecting the Power Cord

### **⚠ WARNING**

#### **EXCESSIVE ELECTROMAGNETIC INTERFERENCE**

- When the functional ground (FG) terminal is connected, be sure the wire is grounded. Not grounding the HMIGTO can result in excessive Electromagnetic Interference (EMI). Grounding is required to meet EMC level immunity.
- Remove power before wiring the HMIGTO's power terminals.
- The DC model uses only 24 Vdc power. Using any other level of power can damage both the power supply and the HMIGTO.
- Since the HMIGTO is not equipped with a power switch, be sure to connect a power switch to the power supply.
- Be sure to ground the HMIGTO's FG terminal.
- Replace and secure all elements of the system before applying power to the HMIGTO.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


**NOTE:** The shield ground (SG) and FG terminals are connected internally in the panel.

### DC Power Cord Preparation


- Make sure that the ground wire is either the same or heavier gauge than the power wires.
- Do not use aluminum wires in the power supply's power cord.
- If the ends of the individual wires are not twisted correctly, the wires may create a short circuit.
- Wherever possible, use wires that are 0.75 to 2.5 mm<sup>2</sup> (AWG 18 - 13) for the power cord, and twist the wire ends before attaching the terminals.
- The conductor type is solid or stranded wire.
- Field wiring terminal marking for wire type (75 °C [167 °F] copper conductors only).

### DC Power Supply Connector (Plug) Specifications: Spring Clamp Terminal Blocks

HMIGTO1300/1310 / HMIGTO2300/2310/2315 / HMIGTO3510/4310


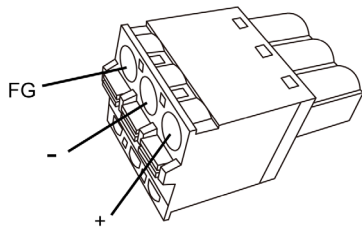


HMIGTO5310/5315 / HMIGTO6310/6315

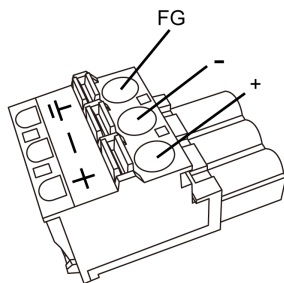

Connection	Wire
+	24 Vdc
-	0 Vdc
FG	Grounded terminal connected to the panel chassis.

## How to Connect the DC Power Cord

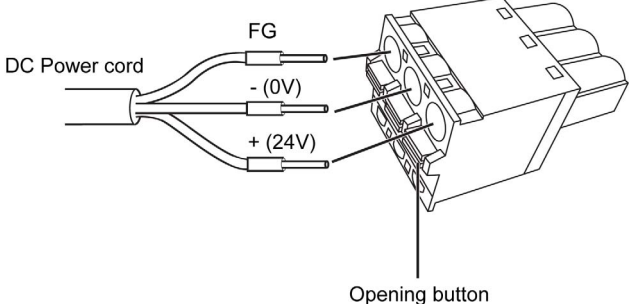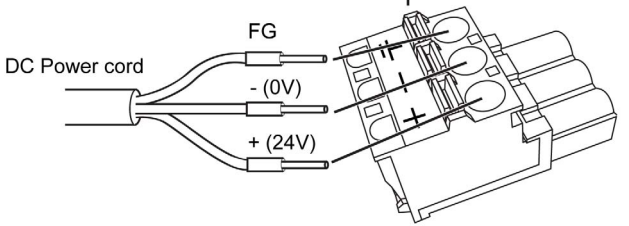Step	Action
1	Confirm that the power cord is not connected to the power supply.
2	Check the rated voltage and remove the "DC24V" sticker on the DC power supply connector.
3	Remove 10 mm (0.39 in) of the vinyl membrane off the ends of the power cord wires.
4	If using stranded wire, twist the ends. Tinning the ends with solder reduces risk of fraying and ensures good electrical transfer.
5	Push the Opening button with a small and flat screwdriver to open the desired pin hole.
6	<p>Insert each pin terminal into its corresponding hole. Release the Opening button to clamp the pin in place.</p> <p>HMIGTO1300/1310 / HMIGTO2300/2310/2315 / HMIGTO3510/4310</p>  <p>DC Power cord</p> <p>FG</p> <p>-(0V)</p> <p>+(24V)</p> <p>Opening button</p> <p>HMIGTO5310/5315 / HMIGTO6310/6315</p>  <p>DC Power cord</p> <p>FG</p> <p>-(0V)</p> <p>+(24V)</p>
7	After inserting all three pins, insert the power plug into the power connector on the panel.

### NOTE:

- Do not solder the wire directly to the power receptacle pin.
- To prevent the possibility of a terminal short, use a pin terminal that has an insulating sleeve.
- You can use the DC power connector for HMIGTO1300/1310 / HMIGTO2300/2310/2315 / HMIGTO3510/4310 to supply power to HMIGTO5310/5315 / HMIGTO6310/6315. However the reverse is not possible. You cannot use the power connector for HMIGTO5310/5315 / HMIGTO6310/6315 on HMIGTO1300/1310 / HMIGTO2300/2310/2315 / HMIGTO3510/4310.

## Connecting the Power Supply

### Precautions

- You must use a 24 Vdc input unit with a Class 2 power supply.
- To increase the electromagnetic noise resistance, make sure that you twist the ends of the power cord wires before connecting them to the power plug.
- The panel's power supply cord should not be bundled with or kept close to main circuit lines (high voltage, high current), or input/output signal lines.
- Connect a lightning surge absorber to handle power surges.
- To reduce electromagnetic noise, make the power cord as short as possible.

**⚠ WARNING**

**SHORT CIRCUIT, FIRE, OR UNINTENDED EQUIPMENT OPERATION**


Avoid excessive force on the power cable to prevent accidental disconnection

- Securely attach power cables to the HMIGTO or cabinet.
- Use the designated torque to tighten the unit terminal block screws.
- Install and fasten the HMIGTO on installation panel or cabinet prior to connecting power supply and communication lines.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


### Power Supply Connections

When supplying power to the panel, separate the input/output and power lines, as shown.

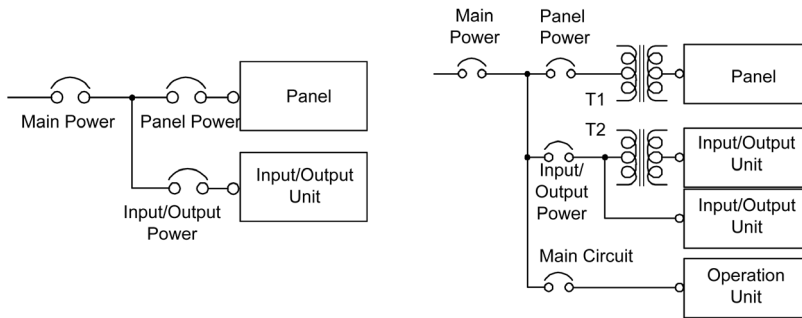


**NOTE:**

The following shows a lightning surge absorber connection:

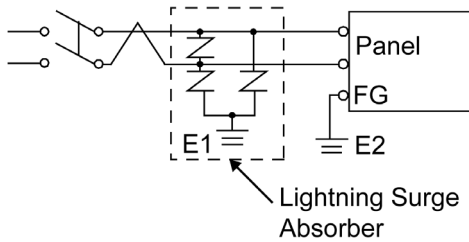


- Ground the surge absorber (E1) separately from the panel (E2).
- Select a surge absorber that has a maximum circuit voltage greater than that of the peak voltage of the power supply.

If the supplied voltage exceeds the panel range, connect a constant voltage transformer.

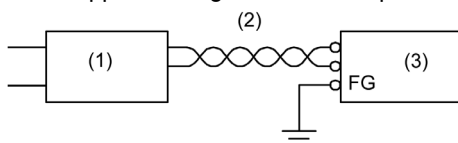

- 1 Constant voltage transformer
- 2 Twisted-pair cord
- 3 panel

Select a power supply low in noise for between the line and ground. If there is an excess amount of noise, connect an insulating transformer.

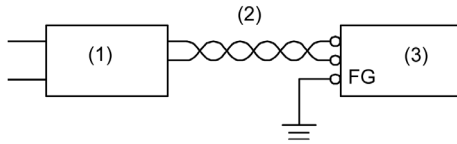


- 1 Insulating transformer
- 2 Twisted-pair cord
- 3 panel

**NOTE:** Use constant voltage and insulating transformers with capacities exceeding the Power Consumption value.

## Grounding

### Exclusive Grounding


When supplying power to the panel, separate the input/output and power lines as shown below. Connect the frame ground (FG) terminal on the power plug to an exclusive ground.

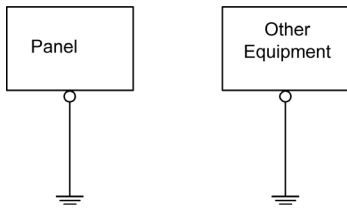


### Precautions

Electromagnetic Interference (EMI) can be created if the devices are improperly grounded. EMI can cause loss of communication. Do not use common grounding, except for the authorized configuration described below. If exclusive grounding is not possible, use a common grounding point.

Correct grounding

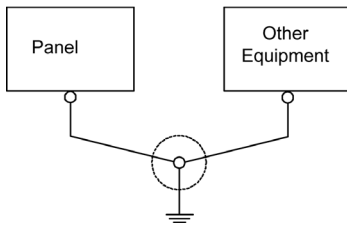

Incorrect grounding

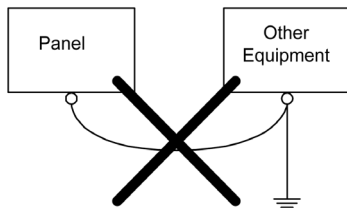

- Check that the grounding resistance is 100 Ω or less.\*<sup>1</sup>
- The FG wire should have a cross sectional area greater than 2 mm<sup>2</sup> (AWG 14) <sup>(1)</sup>. Create the connection point as close to the panel as possible, and make the wire as short as possible. When using a long grounding wire, replace the thin wire with a thicker wire, and place it in a duct.
- FG and SG terminals are internally connected in the panel. When connecting an external device to the panel using the SG terminal, check that you do not create a short-circuit loop when you set up the system.

\*<sup>1</sup> Observe local codes and standards. Ensure that the ground connection has a resistance of 100 Ω and that the ground wire has a cross-section of at least 2 mm<sup>2</sup> or AWG 14.



---

## Section 5.3

### SD Card Insertion/Removal

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Introduction	122
Inserting the SD Card	123
Removing the SD Card	124
SD Card Data Backup	125

## Introduction

### ***NOTICE***

#### **LOSS OF DATA**

When using the HMIGTO and a SD Card, observe the following to avoid losing valuable data:

- Since accidental data loss can occur at any time, back up HMIGTO screen and SD Card data regularly. Once HMIGTO data is lost, it cannot be recovered.
- While a SD Card is accessed, do not turn OFF or reset the HMIGTO, and do not insert or remove the SD Card. Doing so could damage the SD Card, or corrupt its data.
- Before using the SD Card, familiarize yourself with the SD Card's front and rear face orientation, as well as the position of the SD Card connectors. If the SD Card is not positioned correctly when inserted into the HMIGTO, the card's internal data and HMIGTO could become damaged.

**Failure to follow these instructions can result in equipment damage.**

### ***NOTICE***

#### **LOSS OF DATA**


When handling the SD Card, follow the instructions below to prevent internal data on the SD Card from being destroyed or a SD Card malfunction from occurring:



- Avoid storing the SD Card where there is static electricity or electromagnetic waves.
- Avoid storing the SD Card in direct sunlight, near a heater, or other locations where high temperatures can occur.
- Do not bend the SD Card.
- Do not drop or strike the SD Card against another object.
- Keep the SD Card dry.
- Do not touch the SD Card connectors.
- Do not disassemble or modify the SD Card.
- Use only SD Cards formatted using FAT or FAT32. The HMIGTO does not recognize NTFS formatted SD Cards. Format the SD Card on your computer using FAT or FAT32.

**Failure to follow these instructions can result in equipment damage.**



## Inserting the SD Card

**NOTE:** As shown in the image below (example on the left-hand side), you can set the Write-Control Tab to prevent write operations to the SD Card. Push the tab up, as shown in the example on the right-hand side, to release the lock and enable writing to the SD Card. Before using a commercial-type SD Card, read the manufacturer's instructions.

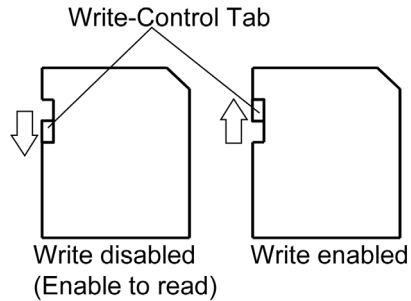

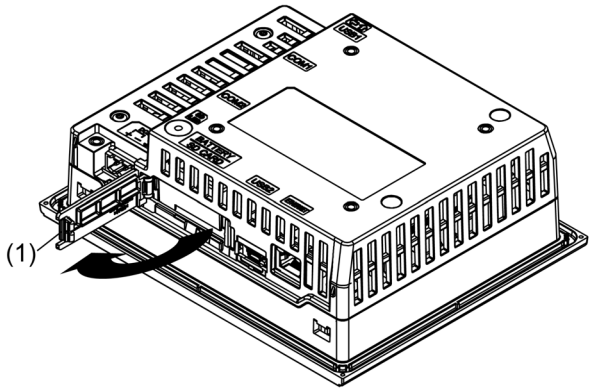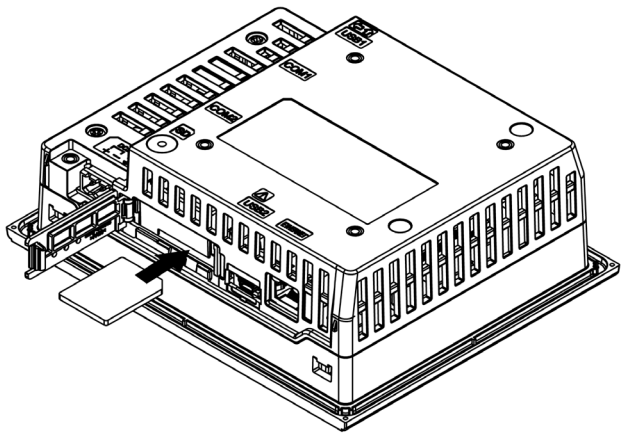Step	Action
1	<p>Pull on the tab and open the SD Card cover.</p>  <p>(1) Tab</p>
2	<p>Insert the SD Card into the SD Card interface, and push until you hear it "click".</p> 
3	<p>Close the SD Card cover.</p>

## Removing the SD Card

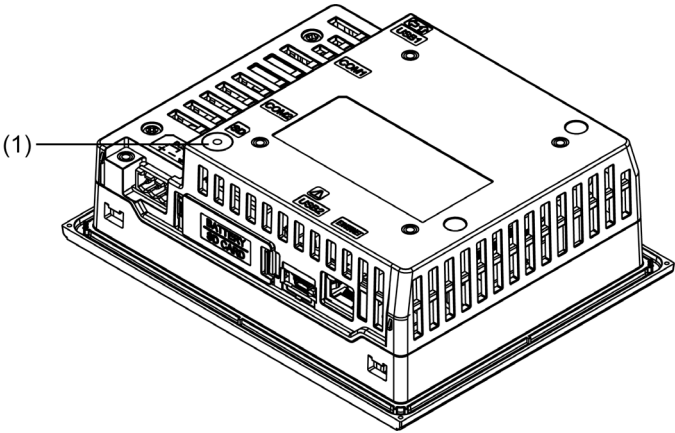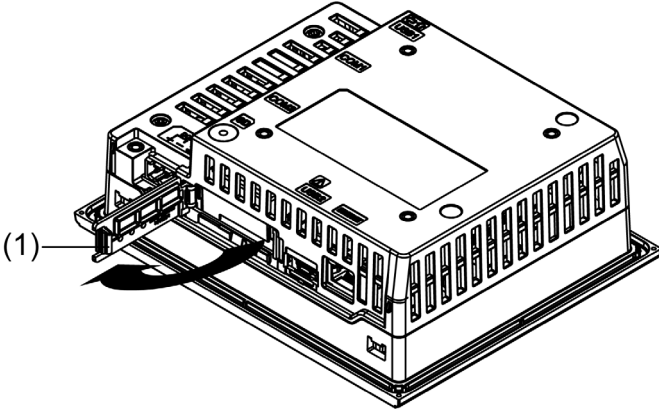Step	Action
1	<p data-bbox="459 331 863 360">Make sure the SD Card Access LED is off.</p>  <p data-bbox="459 797 703 824">1 SD Card Access LED</p>
2	<p data-bbox="459 833 1098 862">Push down the tab on the SD Card cover, then pull open the cover.</p>  <p data-bbox="459 1276 539 1305">1 Tab</p>
3	<p data-bbox="459 1314 1182 1368">Push the SD Card once to release, and pull out the card. After removing the card, close the cover.</p> <p data-bbox="459 1377 1182 1435"><b>NOTE:</b> After using the SD Card, store the SD Card in its case or other safe location.</p>

---

## SD Card Data Backup

To make your backups, you can either insert the SD Card directly into the SD Card interface on your computer, or use a commercially available SD Card reader.

## Section 5.4

### USB Cable Clamp

---

#### Overview

This section presents the USB cable clamp.

#### What Is in This Section?

This section contains the following topics:

Topic	Page
USB Cable Clamp for USB (Type A)	127
USB Holder for USB (mini-B)	129

## USB Cable Clamp for USB (Type A)

### Introduction

When using a USB device, attaching a USB cable clamp to the USB interface to prevent the USB cable from being disconnected.

**⚠ DANGER**


**POTENTIAL FOR EXPLOSION**



- Verify the power, input, and output (I/O) wiring are in accordance with Class I, Division 2 wiring methods.
- Substitution of any components may impair suitability for Class I, Division 2.
- Confirm that the USB cable has been fixed with the USB cable clamp before using the USB interface.
- Remove power before attaching or detaching any connectors to or from the unit.

**Failure to follow these instructions will result in death or serious injury.**

### Attaching the USB Cable Clamp


**NOTE:** Watch your fingers. The edge of the clip is sharp.

Step	Action
1	<p>Mount the clip to the USB mark  connector shell so that it overlaps. The clip matches the 27...43.5 mm (1.06...1.71 in) length of the USB connector.</p>
2	<p>Align the clip and the USB cable connector shell. Adjust the position of the holes where the clip is attached. To ensure stability, select the clip-hole position that is closest to the base of the connector shell.</p>

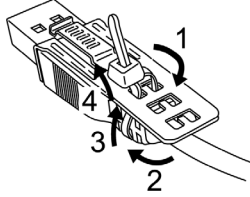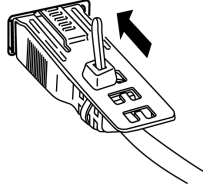Step	Action
3	<p>As shown, pass the tie through the clip hole. Next, turn the tie and pass it through the head so that the USB cable can pass through the center of the tie loop. The clip is now attached to the USB cable.</p>  <p><b>NOTE:</b></p> <ul style="list-style-type: none"><li>• Check the direction of the head beforehand. Make sure that the USB cable is through the center of the tie loop and that the tie can pass through the head.</li><li>• You can substitute the tie provided with commercially available ties with a width of 4.8 mm (0.19 in) and thickness of 1.3 mm (0.05 in).</li></ul>
4	<p>While pressing the grip on the clip, insert the cable from step 3 all the way into the USB host interface. Make sure that the clip tab is secured to the USB cable attached to the HMIGTO.</p> 

**Removing the USB Cable**

Remove the USB cable while pushing the grip section of the clip.

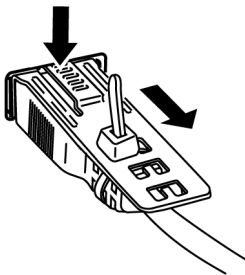



## USB Holder for USB (mini-B)

### Introduction

When using a USB device, you can attach a USB holder to the USB (mini-B) interface to prevent the USB cable from being disconnected.



**⚠ DANGER**

**POTENTIAL FOR EXPLOSION**

- Verify the power, input, and output (I/O) wiring are in accordance with Class I, Division 2 wiring methods.
- Substitution of any components may impair suitability for Class I, Division 2.
- Confirm that the USB cable has been fixed with the USB cable clamp before using the USB interface.
- Remove power before attaching or detaching any connectors to or from the unit.


**Failure to follow these instructions will result in death or serious injury.**

### Attaching the USB Holder

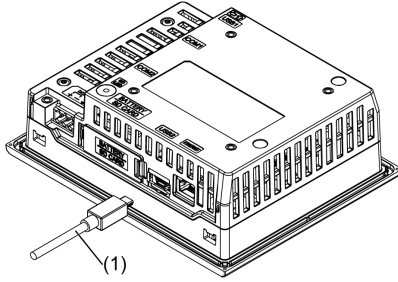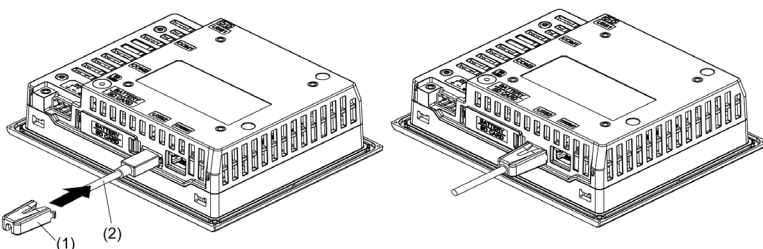Step	Action
1	<p>Insert the USB cable into the USB (mini-B) interface.</p>  <p style="text-align: center;">1 USB cable</p>
2	<p>Attach the USB holder to fix the USB cable in place. Insert the USB holder into the USB (mini-B) interface.</p>  <p style="text-align: center;">1 USB holder 2 USB cable</p>

### Removing the USB Holder

Remove the USB holder by pressing the tabs from the sides.

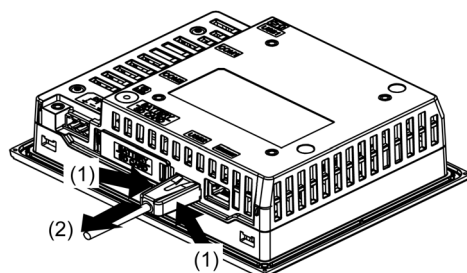



---

# Chapter 6

## Maintenance

---

### Overview

This chapter explains how to maintain your panel.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Regular Cleaning	132
Replacing the Installation Gasket	133
Periodic Check Points	135
Replacing the Primary Battery	136

## Regular Cleaning

### Cleaning the display

<b><i>NOTICE</i></b>
<b>EQUIPMENT DAMAGE</b> <ul style="list-style-type: none"><li>● Power off the panel before cleaning it.</li><li>● Do not use hard or pointed objects to operate the touch panel as you may damage the panel surface.</li><li>● Do not use paint thinner, organic solvents, or a strong acid compound to clean the unit.</li></ul> <b>Failure to follow these instructions can result in equipment damage.</b>



When the surface or the frame of the display gets dirty, soak a soft cloth in water with a neutral detergent, wring the cloth tightly and wipe the display.

## Replacing the Installation Gasket

### Overview

The installation gasket provides protection against dust and moisture.

### **NOTICE**

#### **GASKET AGING**

- Inspect the gasket periodically as required by your operating environment to keep the initial IP level.
- Change the gasket at least once a year, or as soon as scratches or dirt become visible.

**Failure to follow these instructions can result in equipment damage.**

### Installing the Installation Gasket

**NOTE:** For instructions on how to install the installation gasket when using HMIGTO2315/HMIGTO5315/HMIGTO6315, see HMIGTO2315/HMIGTO5315/HMIGTO6315 Panel Mounting Procedure ([see page 113](#)).

Stage	Description
1	Place the panel on a flat, level surface, with the display face pointing down.
2	Remove the gasket from the panel.
3	<p>Attach the new gasket to the panel. Position the gasket in the installation groove so that the gasket seam is at the bottom of the panel. First, insert the gasket into the 4 corners, in the order shown in the image below. Then, insert the rest of the gasket into the installation groove.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• The center of the panel bezel's installation groove is ribbed. Make sure you insert the gasket all the way in without catching the ribbed sections.</li> <li>• When using a tool to insert the gasket, make sure the tool does not catch the rubber gasket and cause a tear.</li> </ul>
4	<p>The upper surface of the gasket should protrude approximately 2.0 mm (0.06 in.) from the groove. Check the gasket is inserted correctly before installing the HMIGTO into a panel.</p>

The gasket must be inserted correctly into the groove for IP65f moisture resistance for the panel (IP66k moisture resistance for HMIGTO2315/HMIGTO5315/HMIGTO6315).

 **CAUTION**

**EQUIPMENT DAMAGE**

- Since the gasket is flexible but not elastic, be careful not to stretch it unnecessarily.
- Make sure the gasket seam is not inserted into any of the panel corners.
- Insert the gasket in the installation groove

**Failure to follow these instructions can result in injury or equipment damage.**

## Periodic Check Points

### Operation Environment

- Is the operating temperature within the allowable range? Refer to Environmental Specifications (*see page 38*), (*see page 51*), (*see page 66*), (*see page 80*), (*see page 95*).
- Is the operating humidity within the specified range? (10%RH to 90%RH, dry bulb temperature of 39 °C [102.2 °F] or less)
- Is the operating atmosphere free of corrosive gasses?

When the HMIGTO is inside a panel, the ambient environment refers to the interior of the panel.

### Electrical Specifications

Is the input voltage appropriate?

- 100 Vac to 240 Vac 50/60 Hz
- 19.2 Vdc to 28.8 Vdc

### Related Items

- Are all power cords and cables connected properly? Are there any loose cables?
- Are all mounting brackets holding the unit securely?
- Are there scratches or traces of dirt on the installation gasket?

## Replacing the Primary Battery

### Introduction

The replacement battery HMIZGBAT (sold separately) for the primary battery in the HMIGTO is available from Schneider Electric.

**NOTE:** The HMIGTO1300/1310 and HMIGTO2300 are not equipped with a primary battery.

**⚡ ⚠ DANGER**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Follow the procedures step by step to replace the battery correctly and safely.
- Before replacing the battery, turn OFF the HMIGTO's power.

**Failure to follow these instructions will result in death or serious injury.**

**⚠ DANGER**

**EXPLOSION, FIRE, OR CHEMICAL HAZARD**

- Use only the replacement battery HMIZGBAT manufactured by Schneider Electric.
- Do not cause a short circuit.
- Recycle or properly dispose of used batteries.

**Failure to follow these instructions will result in death or serious injury.**

**NOTICE**


**LOSS OF DATA**

The primary battery is non-rechargeable, and is used for data backup of memory and the internal clock. If the primary battery is depleted, the backup data is lost. One month before the primary battery is completely depleted, a message will appear to indicate it is time to replace the primary battery.

- Replace the battery within one month after the message appears. Otherwise, backup data may be lost.
- Complete replacing the battery within ten minutes of shutting down the HMIGTO.
- The primary battery replacement time (within a month after the message appears) is only a guideline. When backup SRAM data and clock data is lost after the message appears, Schneider Electric does not perform data recovery/retrieval. Schneider Electric does not accept any responsibility for the loss of data.
- Replace the primary battery regularly every five years after you purchase the HMIGTO.



**Failure to follow these instructions can result in equipment damage.**

Step	Action
1	Disconnect the power supply from the HMIGTO.
2	Touch the housing or ground connection (not the power supply) to discharge any electrostatic charge from your body.
3	Open the SD card Interface Cover by pressing its tab. Next, open the Replacement battery Insertion Cover by pressing its tab.

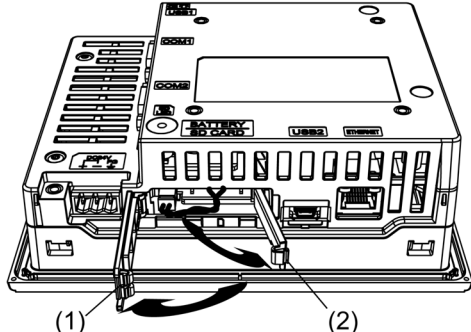

(1) SD card Interface Cover / Tab  
 (2) Replacement battery Insertion Cover / Tab

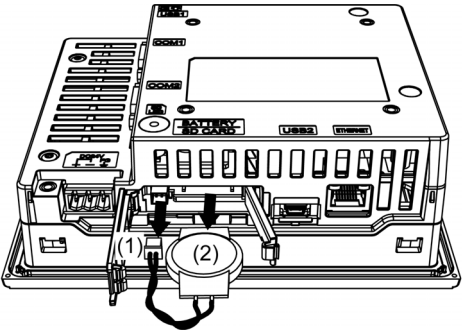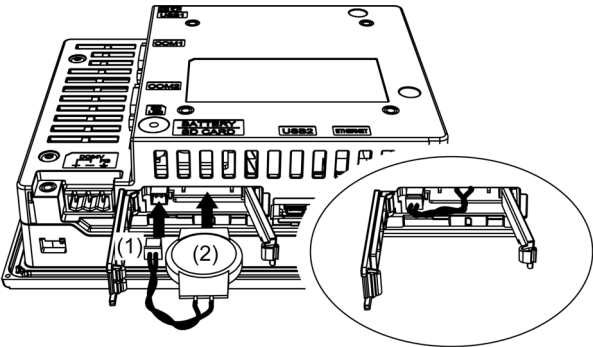

Step	Action
4	<p>Remove the primary battery and connector.</p>  <p>1 Connector 2 Primary battery</p>
5	<p>Attach the new primary battery and connector.</p> 
6	<p>First close the replacement battery cover; then close the SD card interface cover.</p> <p><b>NOTE:</b> Make sure that the cables are inserted completely inside the enclosure. Otherwise, you can damage the cables when you close the cover.</p>
7	<p>Reconnect the power supply to the HMIGTO.</p>





## A

Accessories, 22

## B

battery, 136

## C

caution

loss of data, 122

equipment damage, 134

injury, 113, 113

loss of communication, 44, 44, 45, 58, 59, 72, 73, 87, 88, 102, 103

CE marking, 11

Certifications and Standards, 11

cleaning, 132

clock, 41, 55, 69, 84, 99

COM1, 17, 18, 19

connecting the power cord, 116

connecting the power supply, 118

## D

danger

arc flash, 136

chemical hazard, 136

electric shock, 43, 45, 57, 59, 71, 73, 86, 88, 101, 103, 136

explosion, 127, 129, 136, 136

fire, 136

dimensions, 46, 60, 74, 89, 104

## E

Ethernet, 19

## F

function keys, 41

## G

gasket, 134

grounding, 120

## I

installation

procedures, 110

installation gasket, 133

## K

KC marking, 12

## M

maintenance, 131

check points, 135

Maintenance

Cleaning, 132

maintenance accessories, 24

memory, 41, 55, 69, 84, 99

## N

notice

loss of data, 122

panel unsteady when unsecured, 111

loss of data, 136

overtorque, 112, 114

panel unsteady when unsecured, 113

## O

optional accessories, 23

## P

parts identification and functions, 25

power plug, 116

## R

replacing the battery, 136

RS-232C, 17, 18

RS-422/RS-485, 18

RS-485, 19

## S

SD Card, 121

backup, 125

insertion, 123

SD Card accessories, 23

serial interface accessories, 22

specifications

COM, 43, 57, 59, 73, 86, 88, 101, 103

COM1, 42, 56, 57, 70, 71, 85, 86, 100, 101

COM2, 42, 45, 56, 59, 70, 73, 85, 88, 100, 103

display, 40, 54, 68, 83, 98

electrical, 37, 50, 65, 79, 94

environmental, 38, 51, 66, 80, 95

Ethernet, 100

interfaces, 42, 56, 70, 85, 100

SD Card, 56, 70, 100

structural, 39, 52, 67, 81, 96

USB, 42, 42, 56, 56, 70, 70, 85, 85, 85, 100

## T

touch panel, 41, 55, 69, 84, 99

## U

### USB

- cable clamp for USB Type A, *127*
- holder mini-B, *129*
- USB interface accessories, *23*
- USB mini-B, *20*
- USB Type A, *20*

## W

### warning

- electromagnetic interference, *116*
- fire, *118*
- short circuit, *118*
- unintended equipment operation, *7, 118*